

## MX537 將接收的傳真自動儲存至USB快閃磁碟機功能步驟

### MX537 Saving Received Faxes Automatically on a USB Flash Drive Procedure

先設定印表機不列印接收的文件：

Setting Do not print Received documents:

1. 確保本機已開啟


Make sure that the machine is turned on.

2. 按設定(Setup)按鈕。顯示設定功能表(Setup menu)螢幕

Press the **Setup** button. The **Setup menu** screen is displayed.

3. 使用◀▶按鈕選擇傳真設定(Fax settings)，然後按OK按鈕

Use the **◀▶**button to select **Fax settings**, then press the **OK** button.

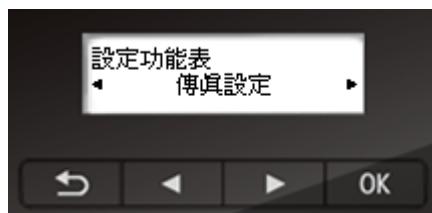

4. 使用◀▶按鈕選擇自動列印設定(Auto print setting)，然後按OK按鈕

Use the **◀▶**button to select **Auto print setting**, then press the **OK** button.



5. 使用◀▶按鈕選擇接收的文件(Received documents)，然後按OK按鈕

Use the **◀▶**button to select **Received documents**, then press the **OK** button.



6. 使用◀▶按鈕選擇不列印(Do not print)，然後按OK按鈕  
Use the ▲▼ button to select **Do not print**, then press the **OK** button.



7. 按傳真(FAX)按鈕返回傳真待命螢幕。  
Press the **FAX** button to return to the Fax standby screen


再設定自動儲存設定：

Setting Auto save setting:

1. 確保本機已開啟  
Make sure that the machine is turned on.
2. 將USB快閃磁碟機插入USB快閃磁碟機連接埠  
Insert the USB flash drive into the USB flash drive port.
3. 按設定(Setup)按鈕。顯示設定功能表(Setup menu)螢幕  
Press the **Setup** button. The **Setup menu** screen is displayed.
4. 使用◀▶按鈕選擇傳真設定(Fax settings)，然後按OK按鈕  
Use the ▲▼ button to select **Fax settings**, then press the **OK** button.



5. 使用◀▶按鈕選擇自動儲存設定(Auto save setting)，然後按OK按鈕  
Use the ▲▼ button to select **Auto save setting**, then press the **OK** button.

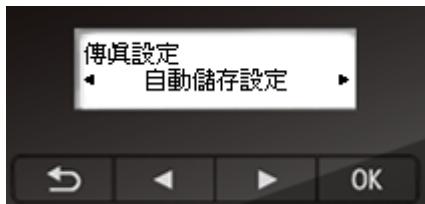

6. 使用◀▶按鈕選擇開(ON)，然後按OK按鈕

Use the ▲▼ button to select **ON**, then press the **OK** button.



7. 按傳真(FAX)按鈕返回傳真待命螢幕

Press the **FAX** button to return to the Fax standby screen.

-完-