


**MG7570光碟托盤及安裝**  
**MG7570 Disk tray location and installation**


1. 把紙匣 1 拉出 (Pull out the cassette 1)



2. 將光碟托盤滑動至紙匣 1 的後側，然後將其抬起以取下 (Slide the disc tray to the side on the back of the cassette 1 and raise it to detach)

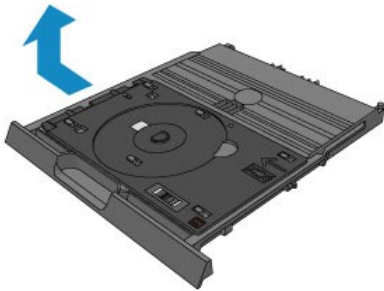


3. 握持出紙托盤(A)兩側，輕輕將其開啟 (Holding both sides of the paper output tray (A), gently open it)
4. 當要求載入可列印光碟的訊息顯示時，開啟光碟托盤導引器(B)並將其完全推入底部 (When the message asking you to load the printable disc is displayed, open the disc tray guide (B) and push it down all the way to the bottom)

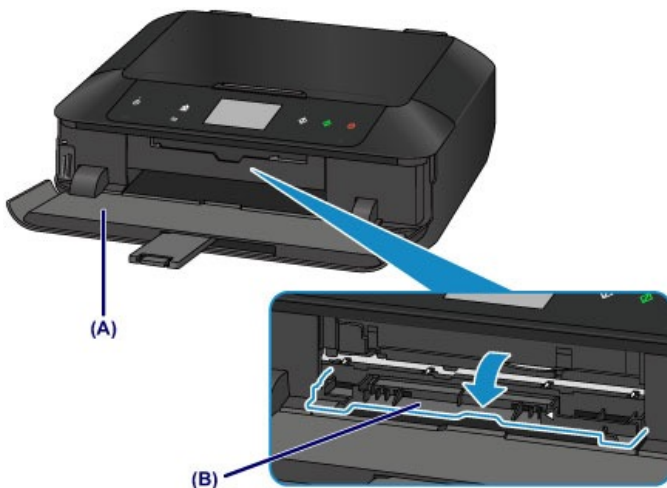

5. 以可列印面向上放置可列印光碟, 將可列印光碟置放於光碟托盤上時, 請勿接觸光碟的列印面或光碟托盤上的反射鏡(C)


(Place the printable disc with the printable surface facing up. When placing a printable disc on the disc tray, do not touch the printing surface of the disc or the reflectors (C) on the disc tray)

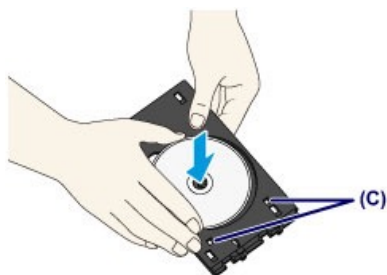

6. 將光碟托盤安裝到本機 (Attach the disc tray to the machine)

1. 將光碟托盤放置在光碟托盤導引器上 (Place the disc tray on the disc tray guide)
2. 平直地插入光碟托盤, 直至光碟托盤導引器上的箭頭(◀)同光碟托盤上的箭頭(▶)基本對齊

(Insert the disc tray straight until the arrow (◀) on the disc tray guide is almost aligned with the arrow (▶) on the disc tray)

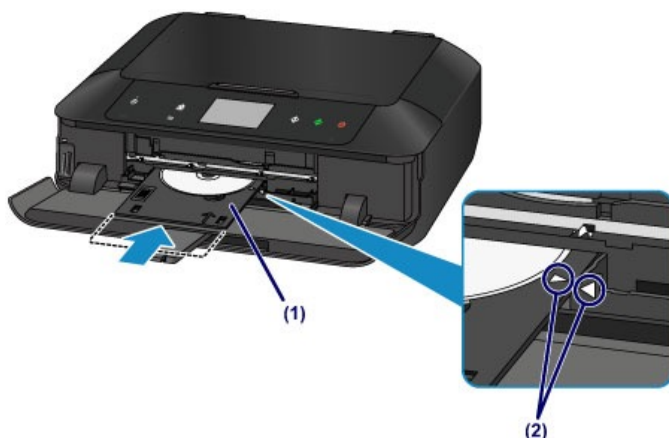

-完-

-End-