


## 如何使用My Image Garden列印光碟標籤 (Windows) How to print disc labels with My Image Garden (Windows)


1. 按「創建或開啟項目」，再按「光碟標籤」

(Press “Create or Open Items”, then press “Disc Label”)

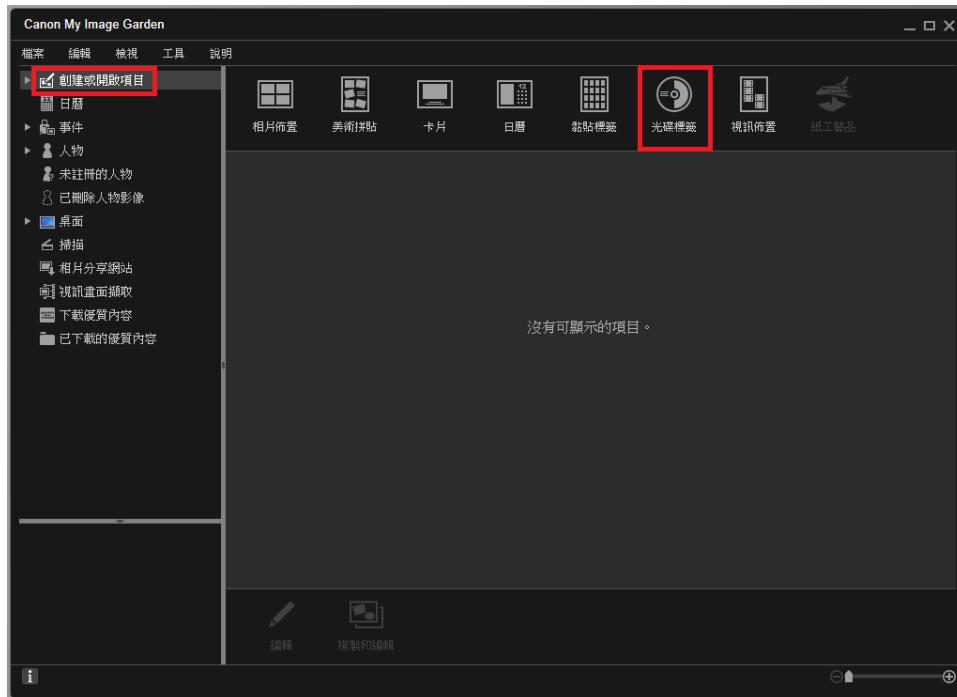


2. 在「設計清單」中選擇合適的設計，再選擇光碟大小，然後按「確定」

(Choose the design from “Design List”, then choose disc size, and press “OK”)

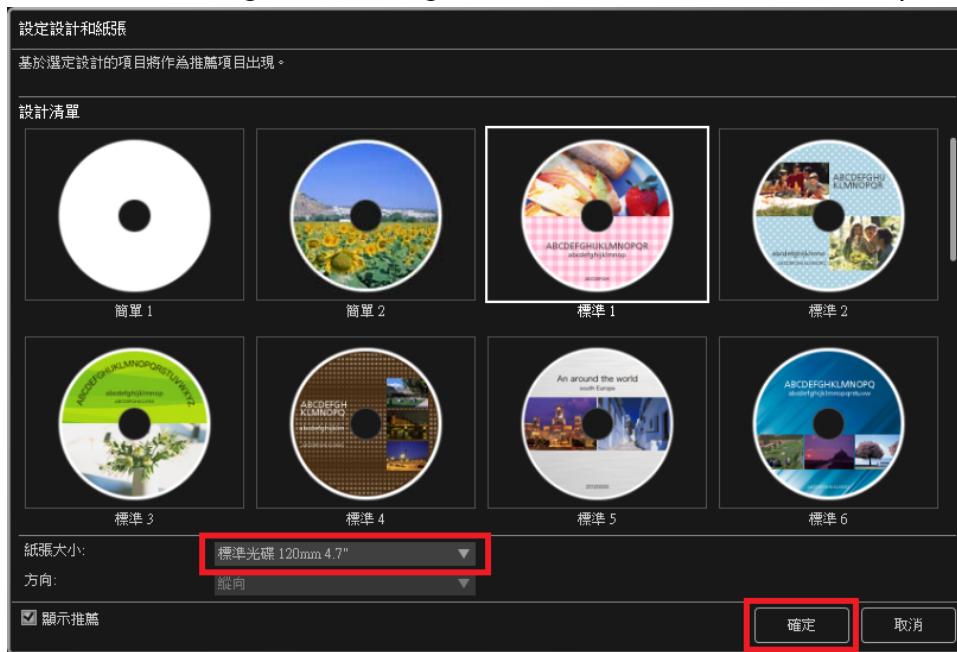


3. 按「新增影像」，再從電腦選擇相片

(Press “Add Image”, then choose the image)

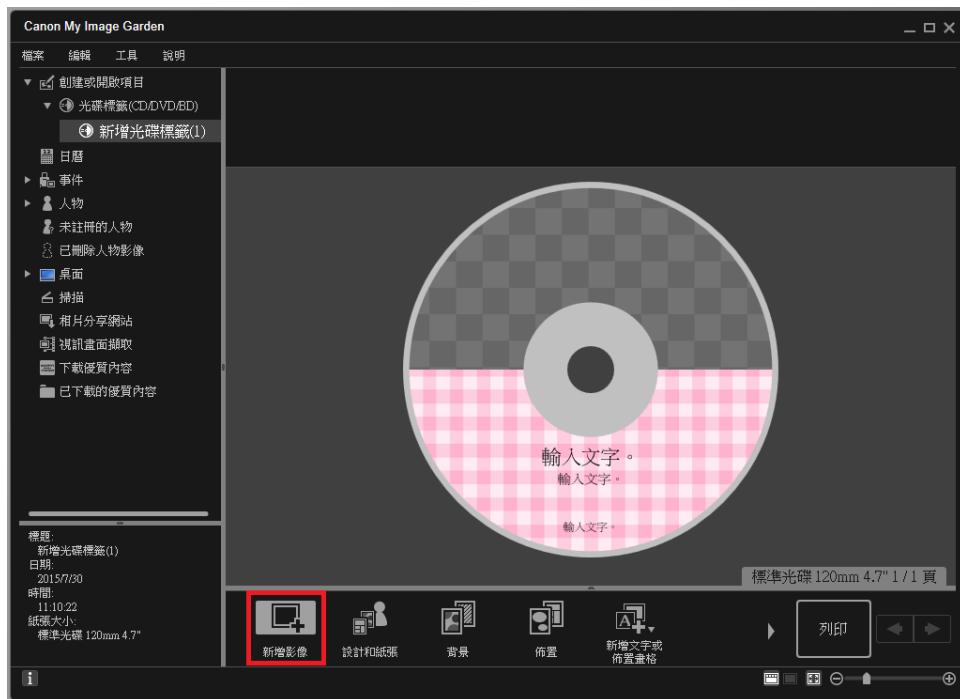

4. 把相片拖拉到光碟上，根據個人喜好編輯項目，完成後按「列印」

(Drag and drop the image to the disc, edit the item according to your preference, and press “Print”)

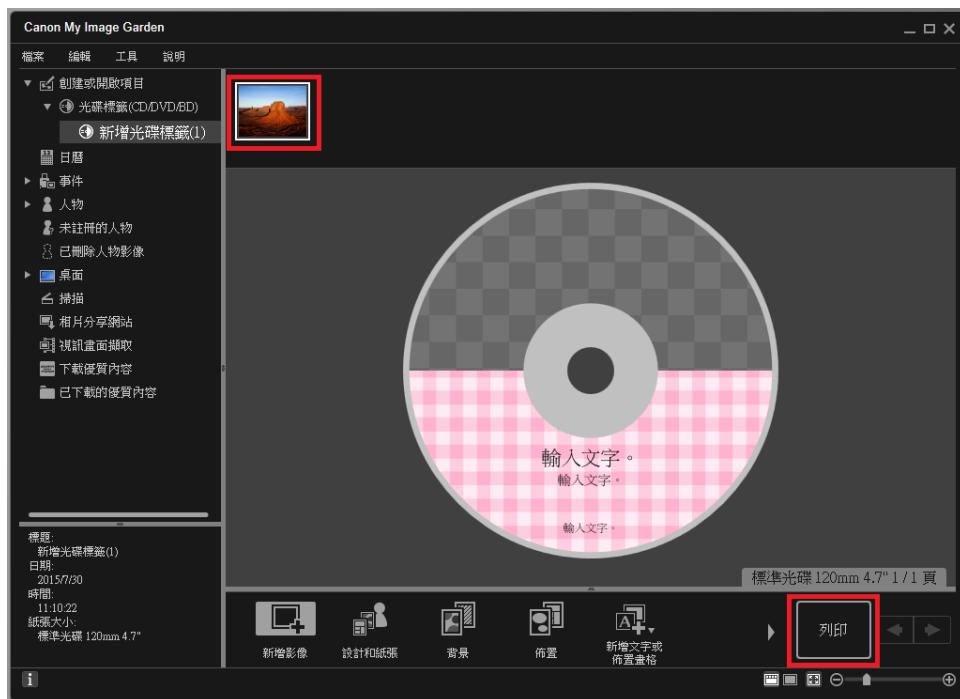

5. 選擇印表機，再按「列印」

(Choose the printer, then press "Print")



6. 根據指示放置光碟及托盤，再按「開始列印」



-完-

-End-