


如何在MF229dw使用多用途紙盤及設定紙張大小 How to use MP tray and set paper size on MF229dw


選擇及註冊自訂紙張大小

Choose and register custom paper size

1. 開啟印表機資料夾，於裝在本機的圖示上按一下滑鼠右鍵，然後按一下「列印喜好設定」
(Open the printer folder , right-click the icon of the machine and click “Printing Preferences”)

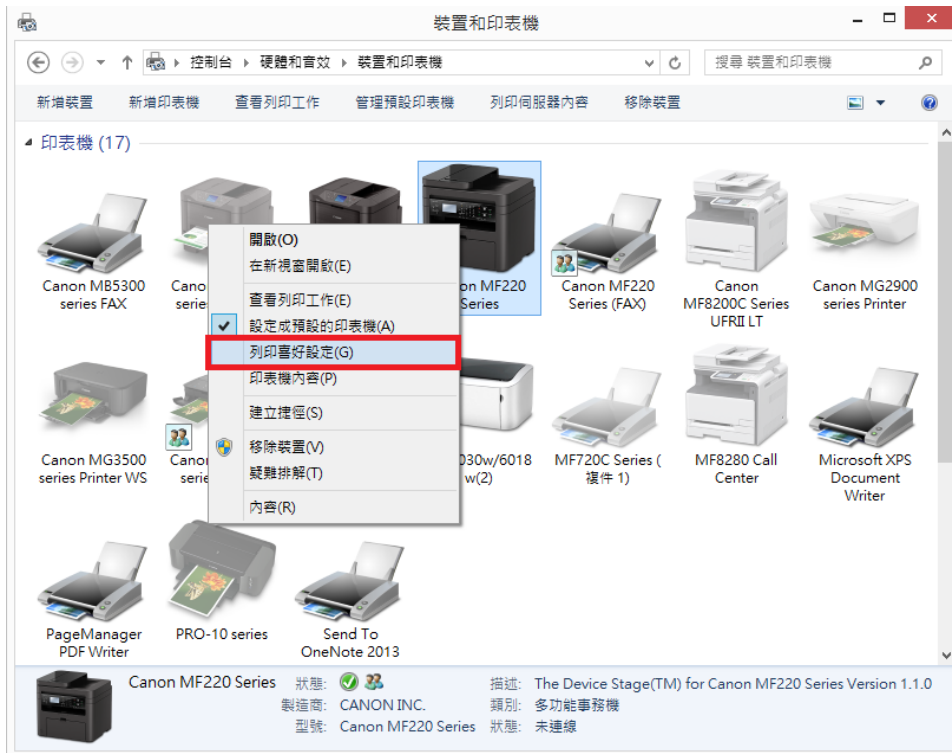


2. 於「Page Size」內選擇合適的紙張大小（Choose correct paper size from “Page Size”）

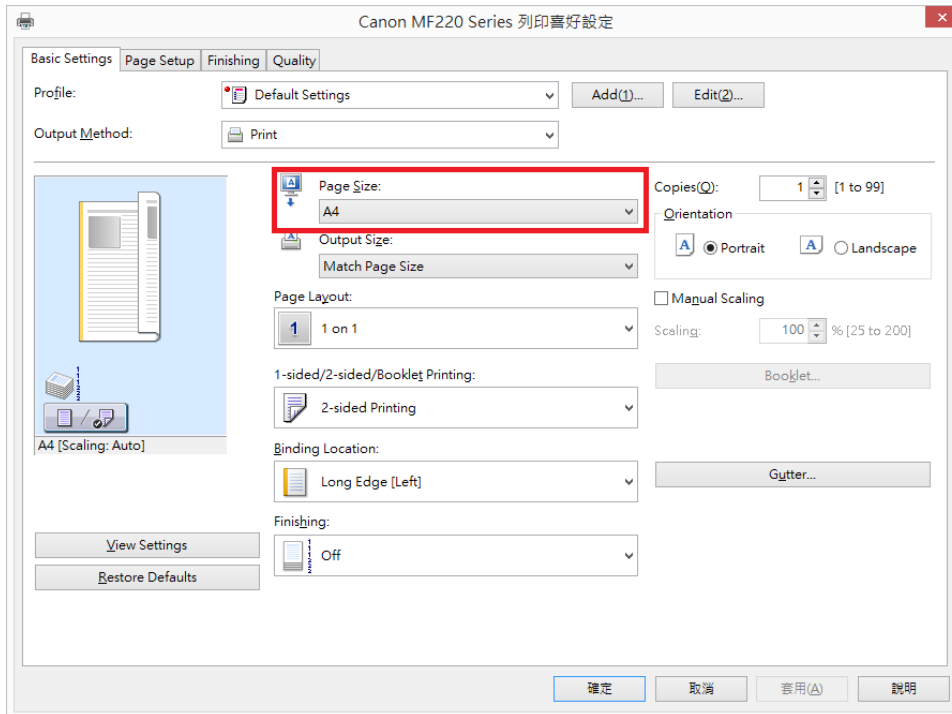


3. 如要自訂紙張大小，請按「Page Setup」，再按「Custom Paper Size」

(For register custom paper size, please click “Page Setup”, then click “Custom Paper Size”)

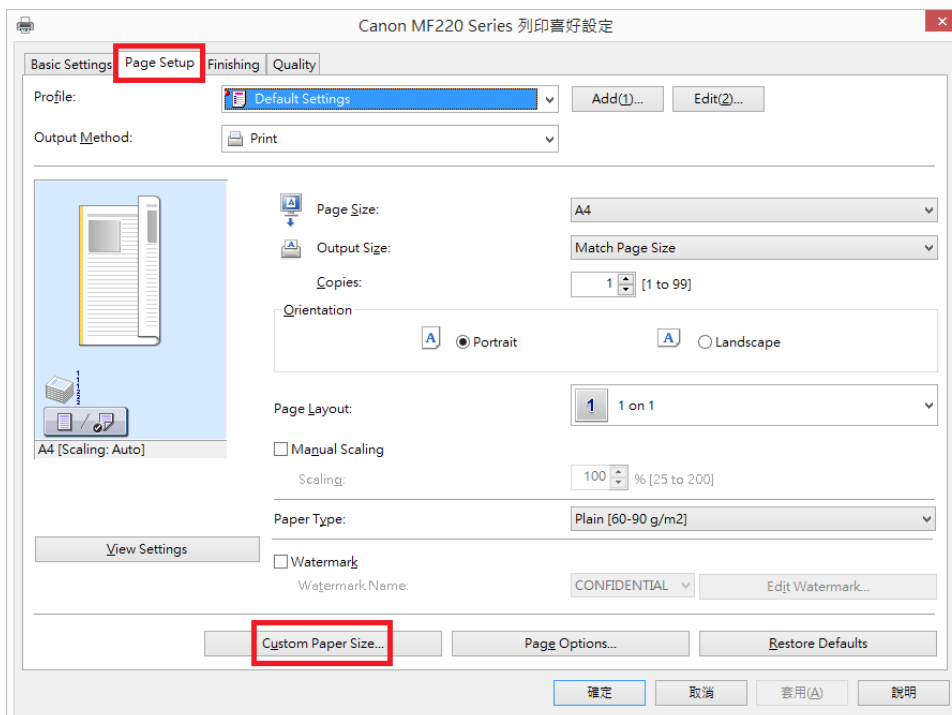



4. 輸入紙張名稱及大小，再按「Register」，完成後按「OK」

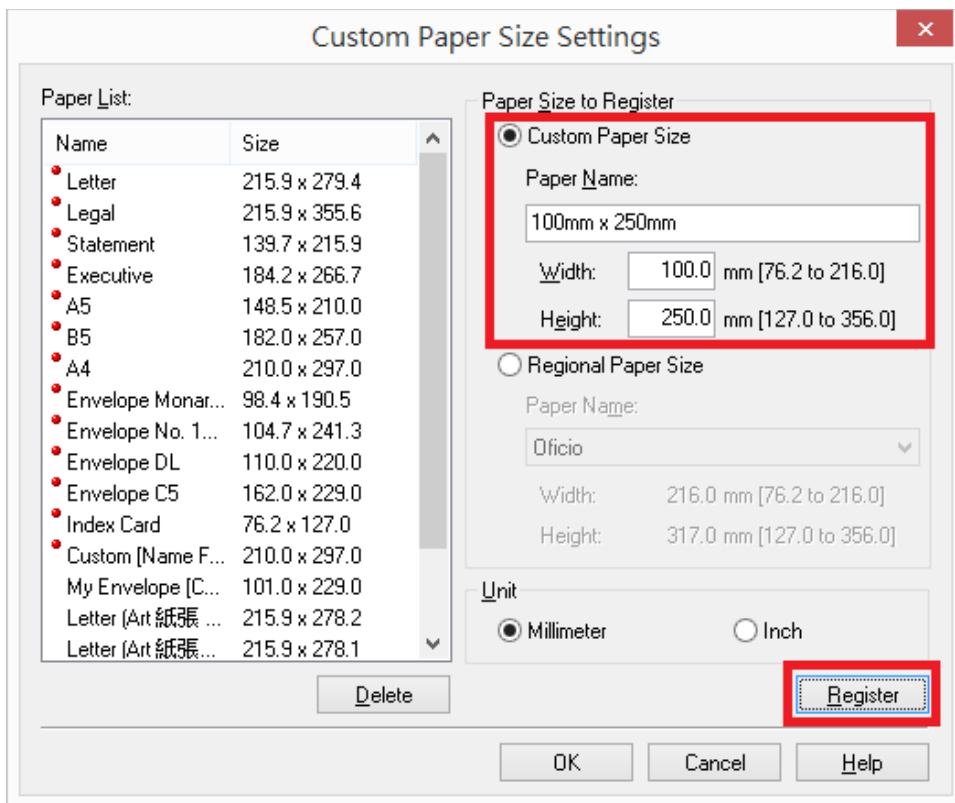(Type in the paper name and paper size, then click “Register”, click “OK” to finish)




註冊自訂紙張尺寸

Registering a Custom Paper Size


1. 按  並點選「紙張設定」 (Press  and tap “Paper Set.”)



2. 點選「多用途紙盤」 (Tap “MP Tray”)

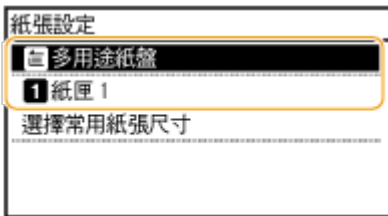

3. 點選「自訂」 (Tap “Custom”)

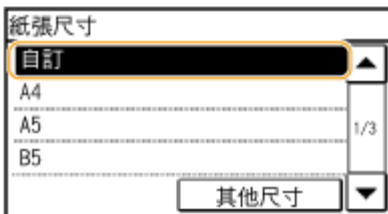


4. 指定紙張尺寸 (Specify the paper size)


 指定 <X> (較短) 邊的長度 (Specify the length of the <X> (shorter) side)




 指定 <Y> (較長) 邊的長度 (Specify the length of the <Y> (longer) side)

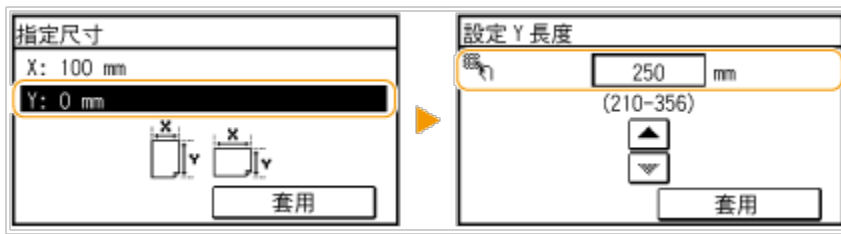

■ 點選「套用」 (Tap “Apply”)

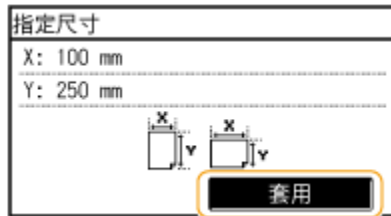


5. 選擇紙張類型 (Select the paper type)

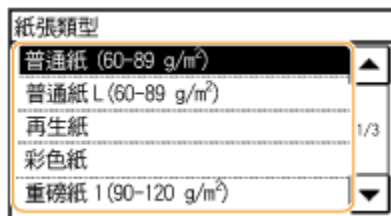


在手動送紙槽中裝入紙張

Loading Paper in the Manual Feed Slot


1. 打開手動送紙蓋板 (Open the manual feed cover)

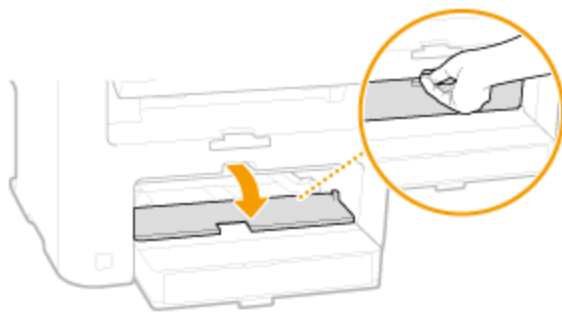


2. 將紙張導板向外拉開 (Spread the paper guides apart)

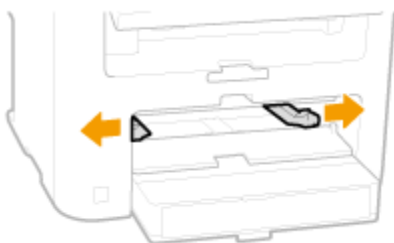

3. 將紙張插入手動送紙槽，直至紙張停止
(Insert the paper into the manual feed slot until the paper stops)

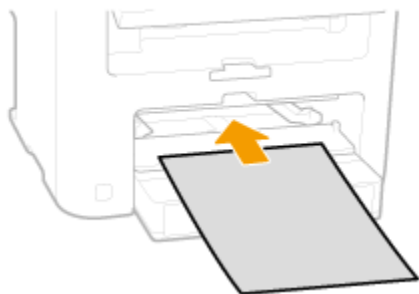

4. 將紙張導板對齊紙張邊緣 (Align the paper guides against the edges of the paper)

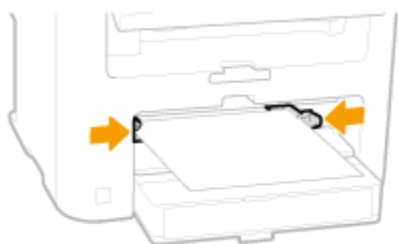

5. 拉出紙張擋板以打開 (Pull out the paper stopper to open)



6. 設定完成後請開始列印工作 (Please start to print after finish setting)

-完-

-End-