

## 如何列印Creative Park素材 (以MG7770作操作示範)

### How to print Creative Park materials (MG7770 as example)


\*列印Creative Park素材，建議使用MP-101霧面美工專用相紙

\*Suggest using MP-101 Matte Photo Paper for print Creative Park materials



1. 開啟印表機，印表機必須已連接至網際網路  
Switch on printer, make sure printer already connect to internet
2. 在印表機的「主頁」功能表中點選「雲端」  
In the HOME menu of the printer, tap [Cloud]



3. 印表機將註冊至伺服器，點選「下一步」  
The printer will be registered to the server, tap [Next]

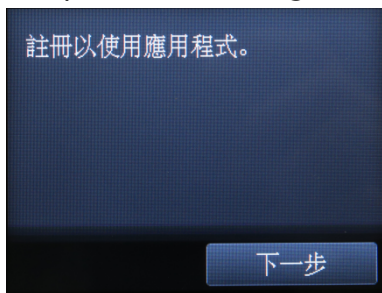

4. 閱讀「服務使用條款」和「隱私聲明」，然後針對各聲明點選 [同意]  
Read the "Service Terms of Use" and "Privacy Statement," and tap [ Agree ] to each statement

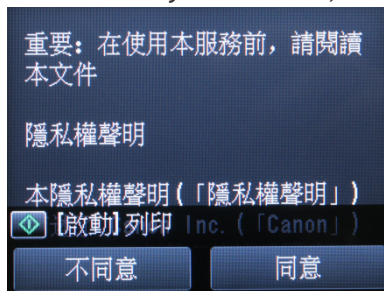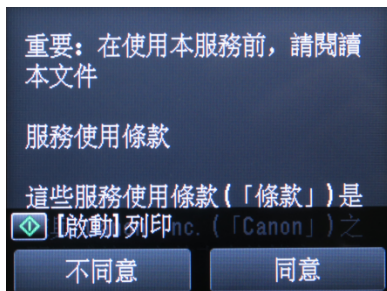

5. 在「確認目前時間」螢幕中，設定最接近當前的時間，然後點選「下一步」  
Set the time closest to the current one at “Current time check” screen, and tap [ Next ]



6. 將顯示時區清單。選擇並點選最接近您所在位置的地區  
A list of the time zones will be displayed. Select and tap the region that is the nearest to your area



7. 註冊完成後會出現雲端列印選項，包括CREATIVE PARK PREMIUM素材  
Cloud print functions show after registered, include CREATIVE PARK PREMIUM materials



8. 閱讀「CREATIVE PARK PREMIUM使用條款」，點選[同意]  
Read the “CREATIVE PARK PREMIUM Terms to use”, and tap [Agree]




9. 以列印獅子（雄性）為例，點選動物 > 非洲 > 動物：獅子（男/雄，行走）

 
Print Lion (Male) as example, tap Animals > Africa > Animals : Lion (Male, Walking)



10. 確定打印素材點選「下一步」

Confirm printing material, tap "Next"

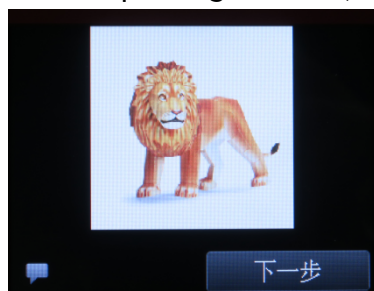

11. 確定份數，紙張大小與媒體類型後按  開始列印

Confirm copies, paper size and media type than press  to start printing



-完-  
-End-