

## 切換紙張輸送方法 - 速度優先 / 列印面優先設定 Switch Paper Feed Method - Speed Priority / Print Side Priority Setting

原因:

### Cause:

因印表機紙張輸送方法預設值為「速度優先」，單面列印與雙面列印時紙張擺放方向不同


Due to default Paper Feed Method of printer is [Speed Priority], paper loading orientations are different between 1-Sided and 2 Sided Printout

在「速度優先」設定下：

When setting is [Speed Priority]:


單面打印在帶有標誌紙張的紙張擺放方法：

Printing on paper with logos when 1-Sided printouts loading methods:

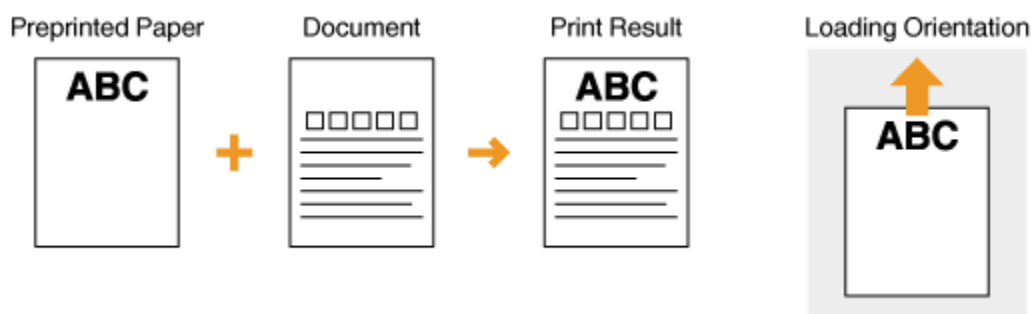

雙面打印在帶有標誌紙張的紙張擺放方法：

Printing on paper with logos when 2-Sided printouts loading methods:

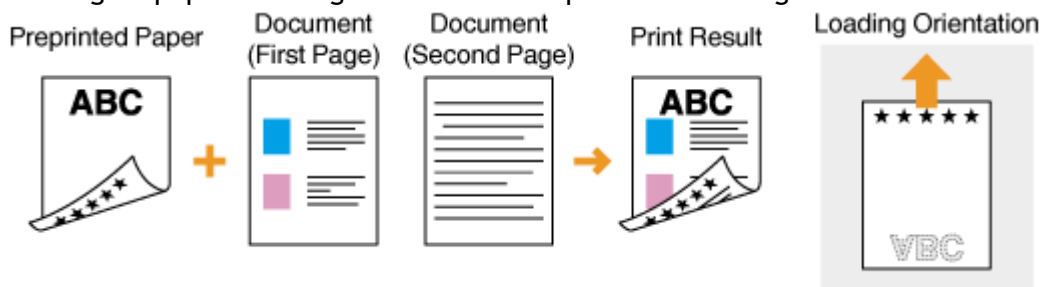

解決方案：

### Solution:


改變切換紙張輸送方法至「列印面優先」，以雙面打印在帶有標誌紙張的紙張擺放方法（標誌面向下）可同樣適用於單面打印。

if [Switch Paper Feed Method] is set to [Print Side Priority], the facing that you use for loading preprinted paper for 2-sided printing (logo side face down) can also be used for 1-sided printing.

1. 在首頁中點選「功能表」  
Tap [Menu] at HOME page




2. 點選「一般設定」  
Tap [Common Setting]

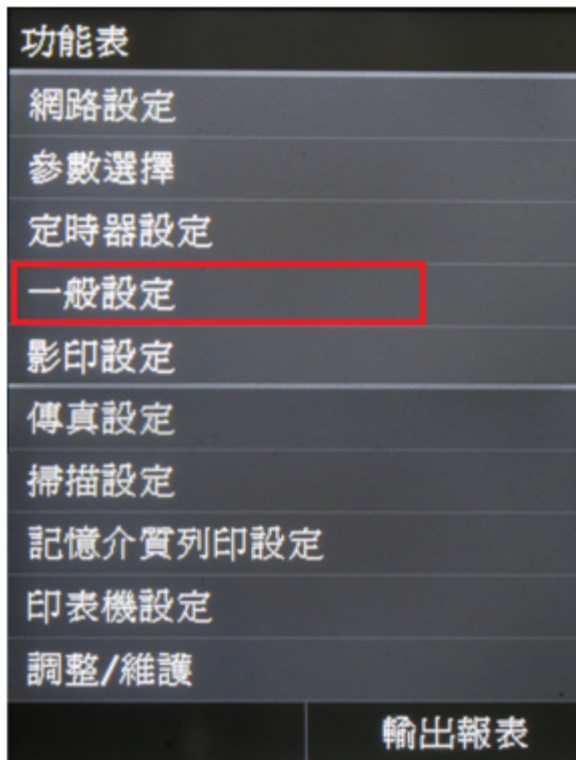

3. 點選「切換紙張輸送方法」，按紙張來源分別設定（多用途紙盤、紙匣1或2）

Tap [Switch Paper Feed Method], specify this setting for different paper source (Multi-Purpose Tray, Drawer 1 or 2)

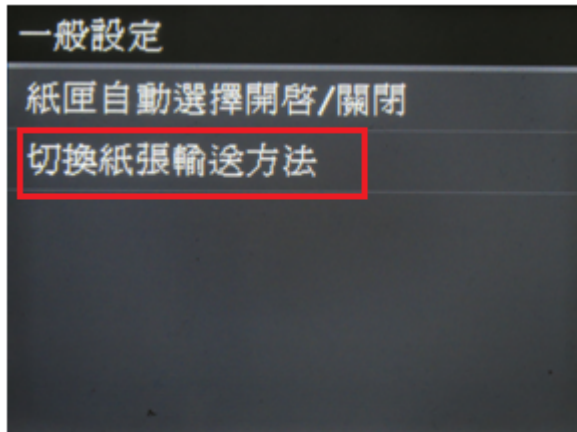

4. 點選「列印面優先」

Tap [Print Side Priority]

-完-