


## TS3170 - 無線設定 (流動裝置)



### TS3170 - Wi-Fi Setup (Mobile Device)


於流動裝置下載及安裝Canon PRINT Inkjet / SELPHY  
Install Canon PRINT Inkjet/SELPHY on the mobile device

Android: <https://play.google.com/store/apps/details?id=jp.co.canon.bsd.ad.pixmaprint&hl=en>  
iOS: <https://itunes.apple.com/hk/app/canon-print-inkjet-selphy/id664425773?mt=8>

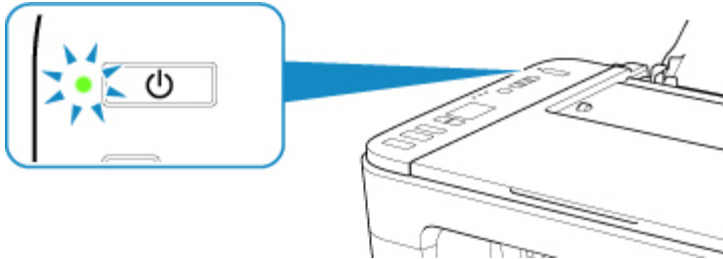
1. 確認印表機電源已開啟  
Confirm the printer was turned on




2. 按住印表機上的 直接連接(Direct)按鈕(A)，然後在  (B)閃爍時，鬆開該按鈕。  
Press and hold the “Direct” button on the printer until the  icon flashes

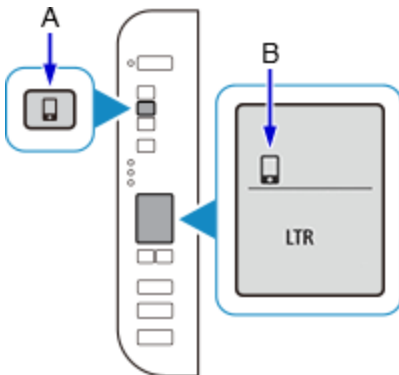

3. 確保  及水平橫條(C)閃爍

Make sure  and the horizontal bars (C) flash

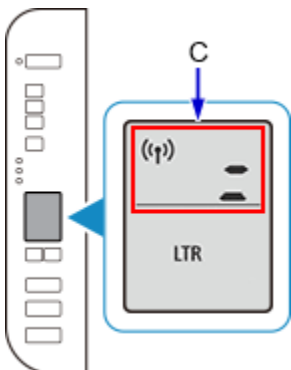

4. 從裝置上的Wi-Fi設定中選擇印表機的網路名稱(以「Canon\_ij\_」開頭的SSID)

Select the printer's network name (Canon\_ij\_) from the Wi-Fi settings on your device

5. 執行Canon PRINT Inkjet / SELPHY

Run the Canon PRINT Inkjet / SELPHY

6. 點選 

Tap 



7. 點選“註冊印表機”

Tap “Register Printer”



8. 按“確定”

Tap “OK”



9. 如正在使用Android裝置，請跳到下一步繼續

如正在使用iOS裝置，請按“自動選擇連接方法（推薦）”

If using Android device, please jump to next step and continue

If using iOS device, please tap “Auto Select Conn. Method (recommended)”




10. 請稍候

Please wait



## 11. 點選要連接印表機的無線路由器SSID

Tap the SSID of wireless router which you want to connect with the printer

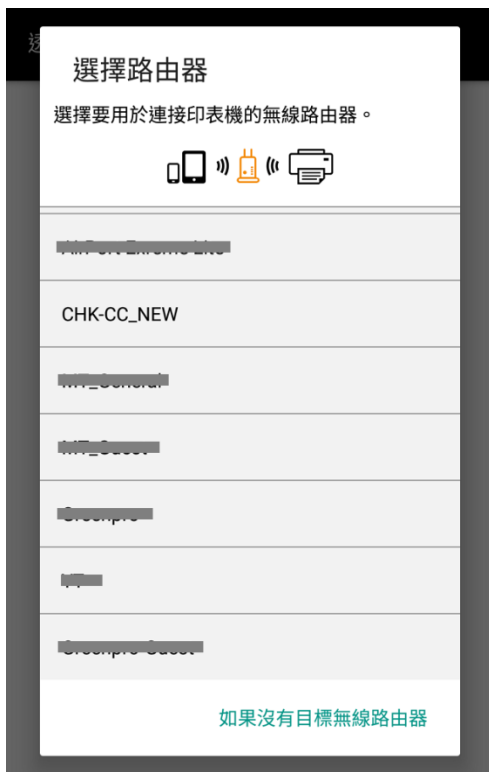

## 12. 輸入無線路由器的密碼，然後按“確定”

Enter the passphrase of wireless router, then tap “OK”




### 13. 按“確定”

Tap “OK”




### 14. 請稍候

Please wait

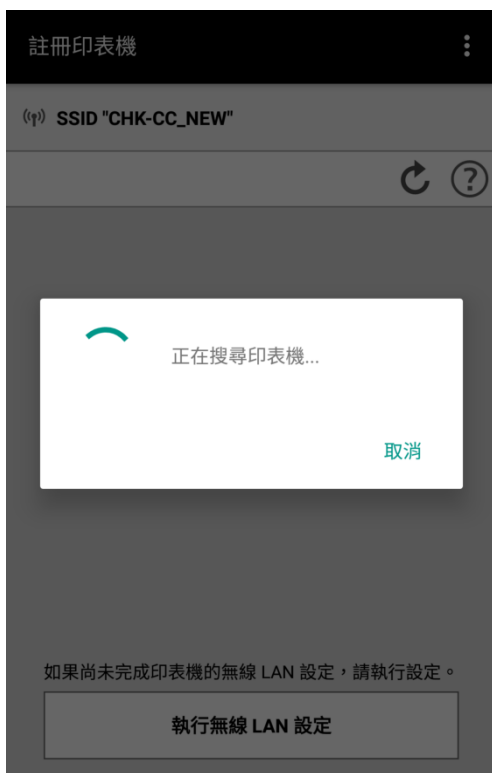

15. 點選印表機，然後按“確定”完成無線設定

Tap the printer name, then tap “OK” to finish the Wi-Fi setup

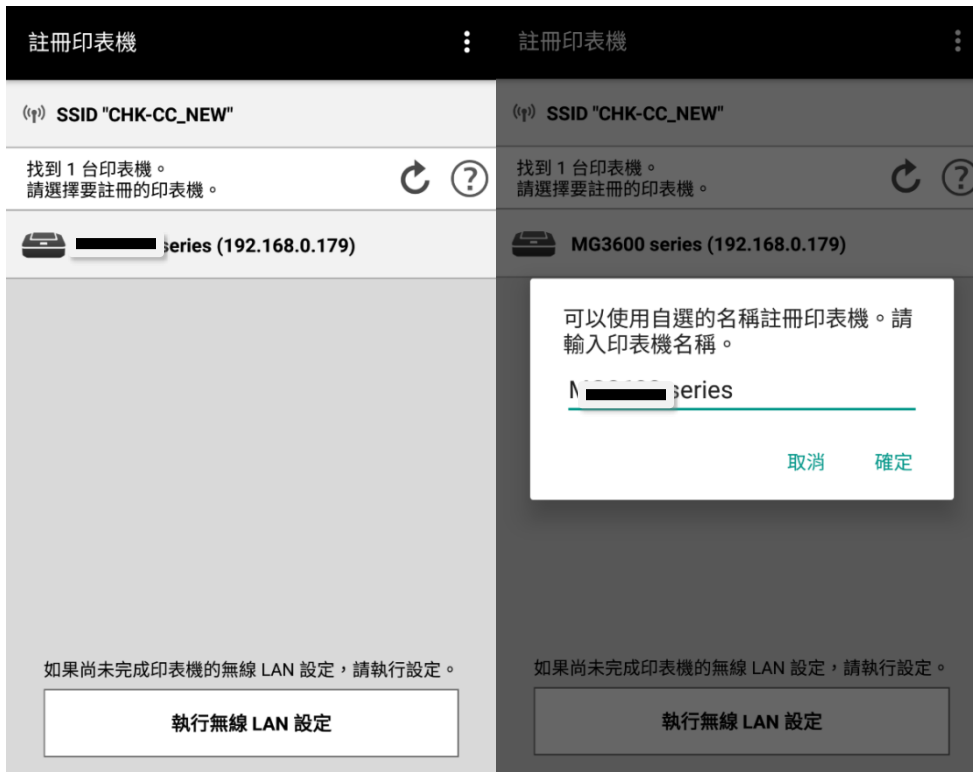

-完-  
-End-