

**LBP162dw 在 Windows 透過 LAN 連線連接印表機之驅動程式步驟**  
**Driver installation procedure for LBP162dw in Windows (Via LAN)**

1. 先將打印機連接到網路，詳細可參考以下步驟  
(Connect the printer to a Wired LAN)

2. 在主畫面中選「功能表」  
(Select “Menu” in the Home Screen)

3. 選「網路設定」  
(Select “Network Settings”)

若顯示 PIN 碼輸入畫面，請使用數字鍵輸入 PIN 碼，然後選「套用」  
(If the screen for entering a PIN appears, enter the correct PIN and select “Apply”)


4. 選擇「選擇有線/無線區域網路」  
(Select “Select Wired/Wireless LAN”)

5. 點選「有線區域網路」  
(Select “Select Wired LAN”)

6. 連接區域網路纜線 (Connect a LAN cable)

使用區域網路纜線將本機連接到路由器  
推入接頭，直至聽到喀嗒聲

(Connect the machine to a router by using a LAN cable, push the connector in until it clicks into place)

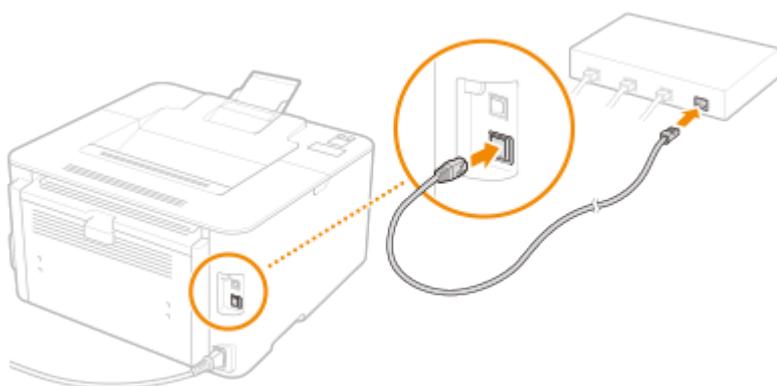

等待約 2 分鐘 (Wait approximately 2 minutes)

等待時，會自動設定 IP 位址 (While you wait, the IP address is set automatically)

## 下載及安裝步驟

### Driver download and Installation procedure

1. 到佳能網站 <https://hk.canon/en/support/imageCLASS%20LBP162dw/model>，下載印表機的驅動程式

Go to: <https://hk.canon/en/support/imageCLASS%20LBP162dw/model>, download the printer driver

2. 選擇並下載以下檔案


Choose and download below file:

- 打印機驅動程式 / Printer Driver

**[Windows xbit] LBP162dw/LBP161dn UFR II LT Printer Driver Ver.xx.xx**

3. 下載的文件以自解壓縮檔檔案(.exe 格式)保存在指定的文件夾中，打開文件解壓縮。將在同一文件夾中創建新文件夾。新文件夾的名稱與解壓縮文件的名稱相同，進入新文件夾開啟「Setup.exe」開始安裝

Open the downloaded file, a same name new folder will be created. Go into new folder open "Setup.exe" start installation"

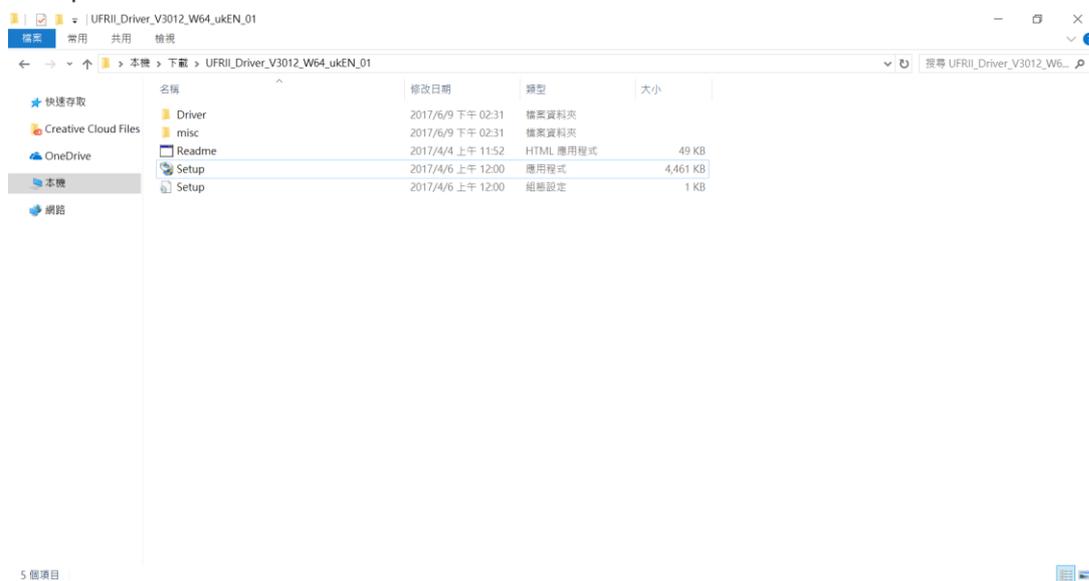

4. 選擇「Yes」  
Choose “Yes”

License Agreement

Please read the following license agreement completely and carefully. Click [Yes] to agree to the license agreement.



**CANON SOFTWARE LICENSE AGREEMENT**

**IMPORTANT**

This is a legal agreement ("Agreement") between you and Canon Inc. ("Canon") and governing your use of Canon's software programs including the related manuals or any printed material thereof (the "SOFTWARE") for certain Canon's copying machines, printers and multifunctional peripherals (the "Products").

**READ CAREFULLY AND UNDERSTAND ALL OF THE RIGHTS AND RESTRICTIONS DESCRIBED IN THIS AGREEMENT BEFORE**

Do you agree to the terms in license agreement?


5. 選擇「Standard」，按「Next」  
Choose “Standard”, press “Next”

The UFR II printer driver will be installed on your computer.

Select a setup method, and then click [Next].



Printer Setup

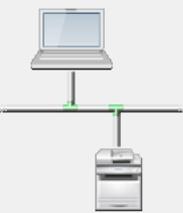


Standard  
Search for printers on the network and install.  
 Reactivate Printers in the Sleep Mode and Search


Custom  
Specify a port or an IP address manually to install drivers of local or network printers.  
You can also specify other settings, such as setting a printer as a shared printer.

USB Connection  
Connect the printer with a USB cable and install.


6. 按「Next」  
Press “Next”

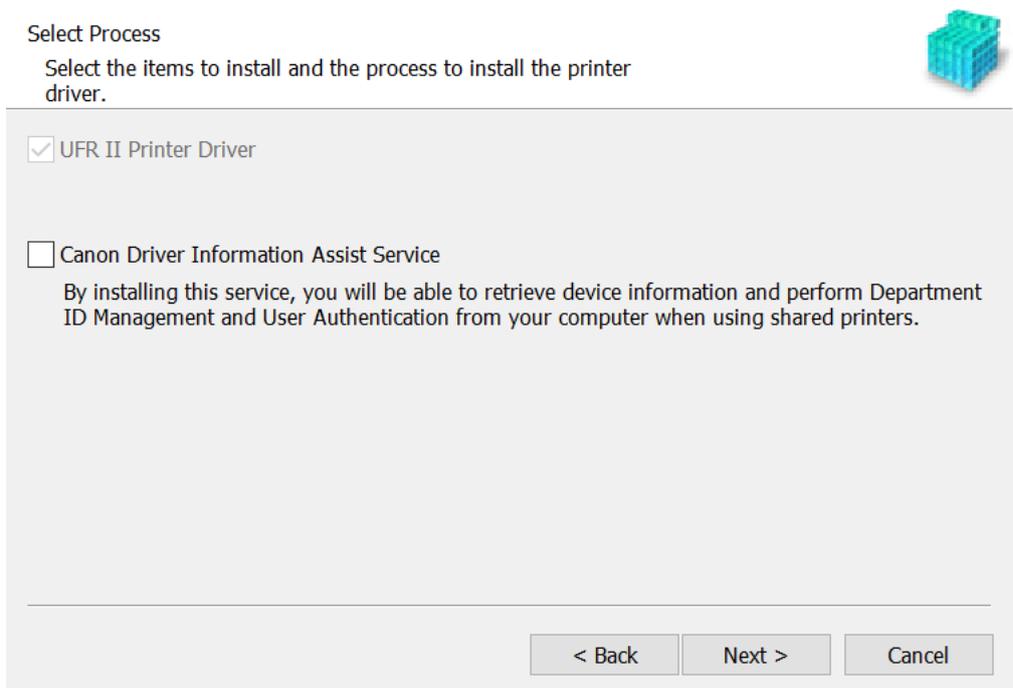

7. 等待搜尋印表機  
Wait for searching printer

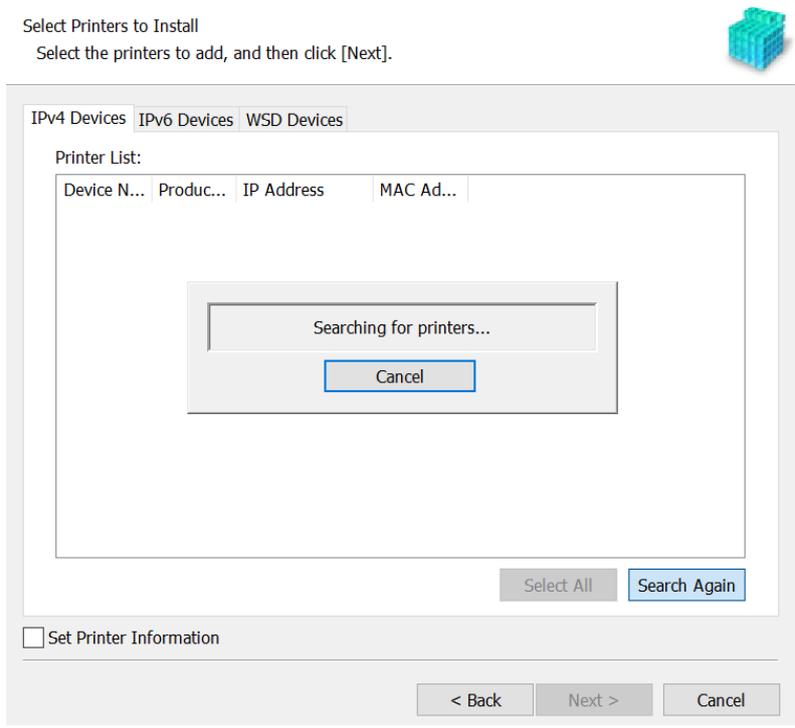


8. 勾選印表機，按「Next」  
Select the printer, press “Next”

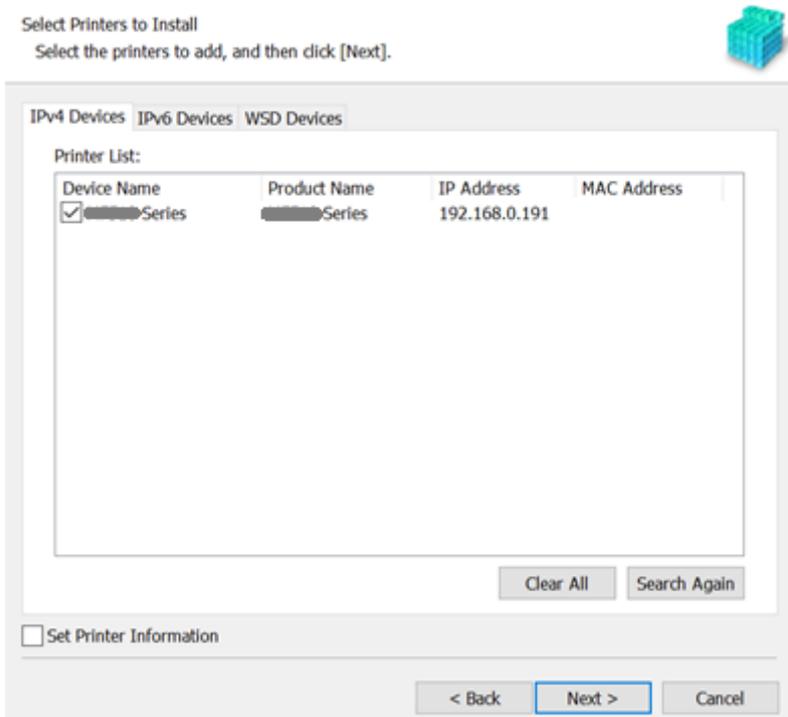

9. 確定印表機資料，按「Start」  
Confirm printer information, press “Start”


The setup program will install the drivers with the following settings.  
\* Installation cannot be canceled once started.

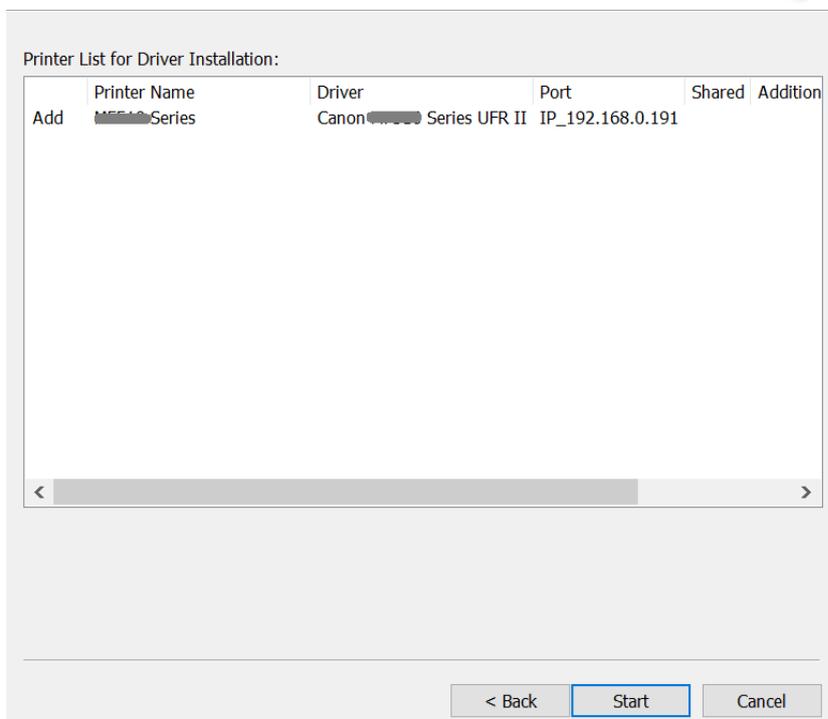


10. 等待安裝程序完成  
Wait for the installation progress

Installing...

The program features you selected are being installed.

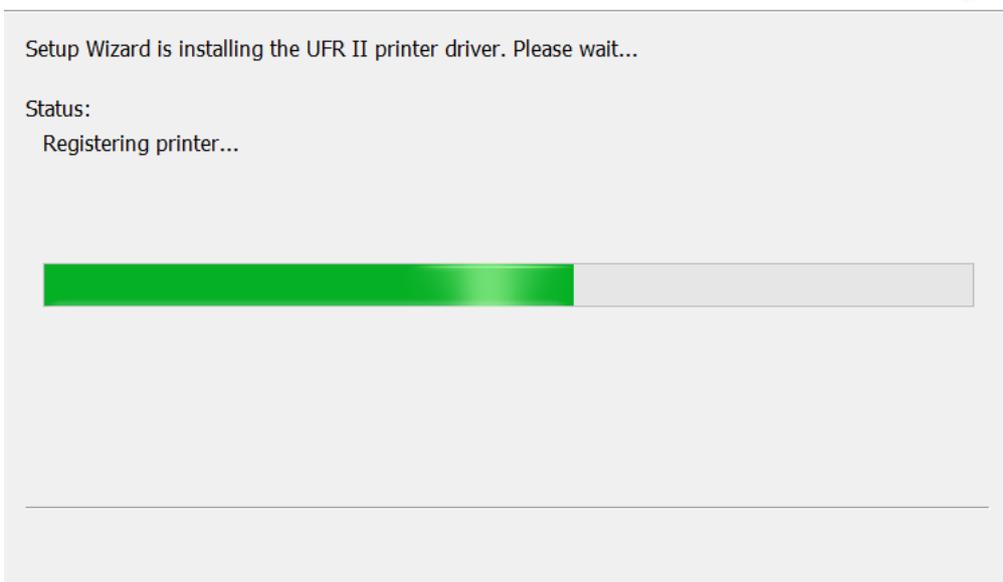

11. 按「Exit」完成安裝  
Click "Exit" to finish installation

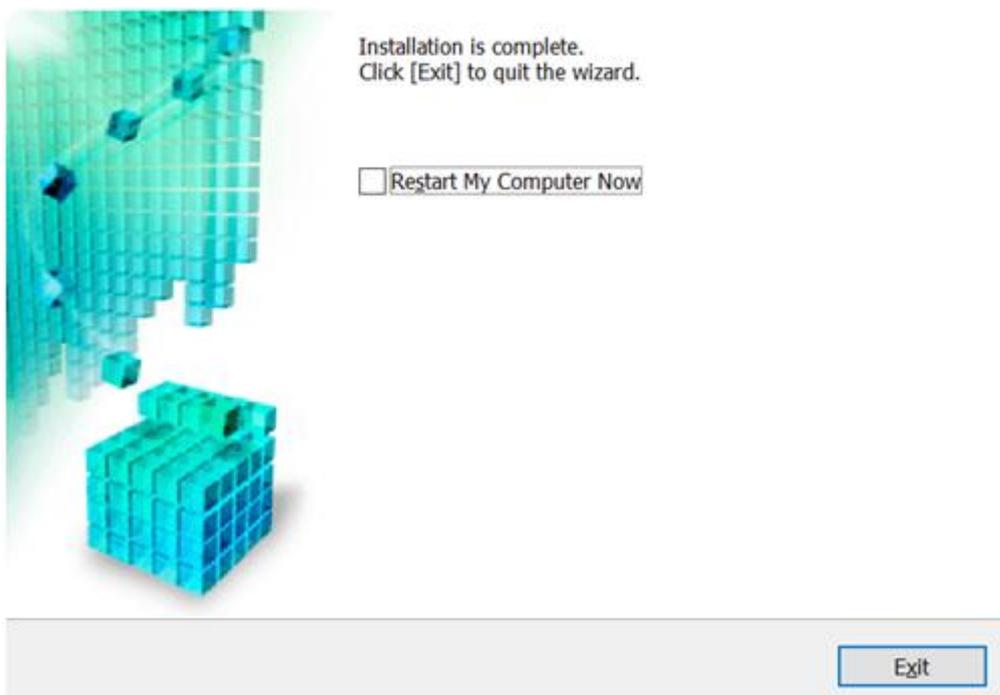

-完-  
-End-