

## CP1200 以無線 LAN 連線連接印表機安裝驅動程式步驟 (以 Win 8.1 作示範) The driver installation procedure for CP1200 (Via Wireless LAN)(Win 8.1 as example)

先將印表機連接到路由器，詳細可參考以下步驟  
 (Follow below steps to connect printer to the router)

### ■ Non-WPS Access Points

#### 1 Check the access point.

- Confirm that the access point is on and ready for communication.

#### 2 Prepare SELPHY.

- Remove any inserted memory cards or USB flash drives.
- Insert a loaded paper cassette and an ink cassette in SELPHY (☞8 – 10).

#### 3 Access the setting screen.

- Press the **<☰>** button.
- Press the **<▲><▼>** buttons to select [Wi-Fi Settings], and then press the **<OK>** button.
- Press the **<▲><▼>** buttons to select [Connection Settings], and then press the **<OK>** button.



### ■ 非 WPS 的存取點

#### 1 查看存取點

- 確認存取點已開啟，並已準備通訊。

#### 2 準備 SELPHY

- 取出任何已插入的記憶卡或 USB 快閃磁碟。
- 將已裝入紙張的紙盒及墨盒插入 SELPHY (☞8 – 10)。

#### 3 進入設定畫面

- 按下 **<☰>** 鍵。
- 按下 **<▲><▼>** 鍵選擇 [Wi-Fi 設定 (Wi-Fi Settings)]，然後按下 **<OK>** 鍵。
- 按下 **<▲><▼>** 鍵選擇 [連接設定 (Connection Settings)]，然後按下 **<OK>** 鍵。



#### 4 Check the printer name.

- Check the displayed printer name and press the **<OK>** button.
- You can change the printer name by pressing the **EDIT** button (☞48).



#### 4 查看打印機的名稱

- 查看所顯示的打印機名稱，然後按下 **<OK>** 鍵。
- 您可以按下 **EDIT** (編輯) 鍵變更打印機名稱 (☞48)。


 

#### 5 Choose the connection method.

- Press the **<▲><▼>** buttons to select [Via Wi-Fi Network], and then press the **<OK>** button.



#### 5 選擇連接方法

- 按下 **<▲><▼>** 鍵選擇 [透過 Wi-Fi 網絡 (Via Wi-Fi Network)]，然後按下 **<OK>** 鍵。

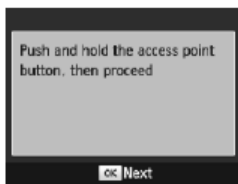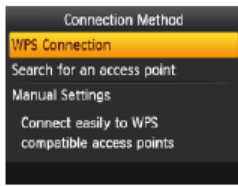

## 6 Choose the access point connection method.

- Press the <▲><▼> buttons to select [WPS Connection], and then press the <OK> button.

## 7 Choose the WPS connection method.

 

 

- Press the <▲><▼> buttons to select [PBC Method], and then press the <OK> button.
- The screen at left is displayed.

## 8 On the access point, hold down the WPS connection button for a few seconds.

- For details on where the button is located and how long to press it, check the access point user manual.

## 9 Establish the connection.

- On the printer, press the <OK> button.
- [Connecting] is displayed on the printer, followed by [Connected to access point] when connected. Press the <OK> button.
- The screen at left is displayed, indicating the name of the access point.

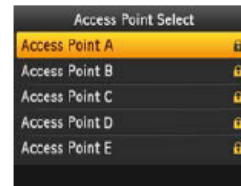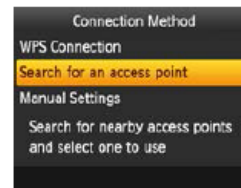

## 6 選擇存取點的連接方法




- 按下 <▲><▼> 鍵選擇 [搜尋存取點 (Search for an access point)]，然後按下 <OK> 鍵。
- 螢幕會列出附近的存取點。

## 7 選擇存取點

- 按下 <▲><▼> 鍵選擇存取點，然後按下 <OK> 鍵。

## 8 輸入密碼

- 按下 EDIT (編輯) 鍵進入輸入畫面，然後輸入密碼 (49)。
- 按下 <OK> 鍵。

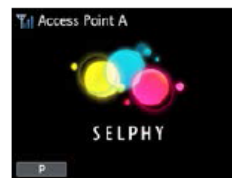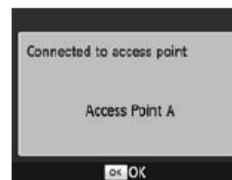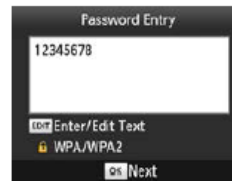


## 9 查看存取點


- 打印機連接到存取點後，即會顯示左方的畫面。查看所顯示的存取點名稱，然後按下 <OK> 鍵。

- 螢幕會顯示左方的畫面。


1. 到佳能網站 [https://hk.canon/zh\\_HK/support/selphy%20cp1200/model](https://hk.canon/zh_HK/support/selphy%20cp1200/model)，下載印表機的驅動程式 - CP1200 Printer Driver  
(Go to: <https://hk.canon/en/support/selphy%20cp1200/model>, then download the printer driver - CP1200 Printer Driver)
2. 下載的文件「cp1200-\*\*\*.zip」以壓縮檔檔案保存在指定的文件夾中，打開壓縮檔檔案。(A downloaded zip file “cp1200-\*\*\*.zip” will be saved at specified location, open the zip file.)

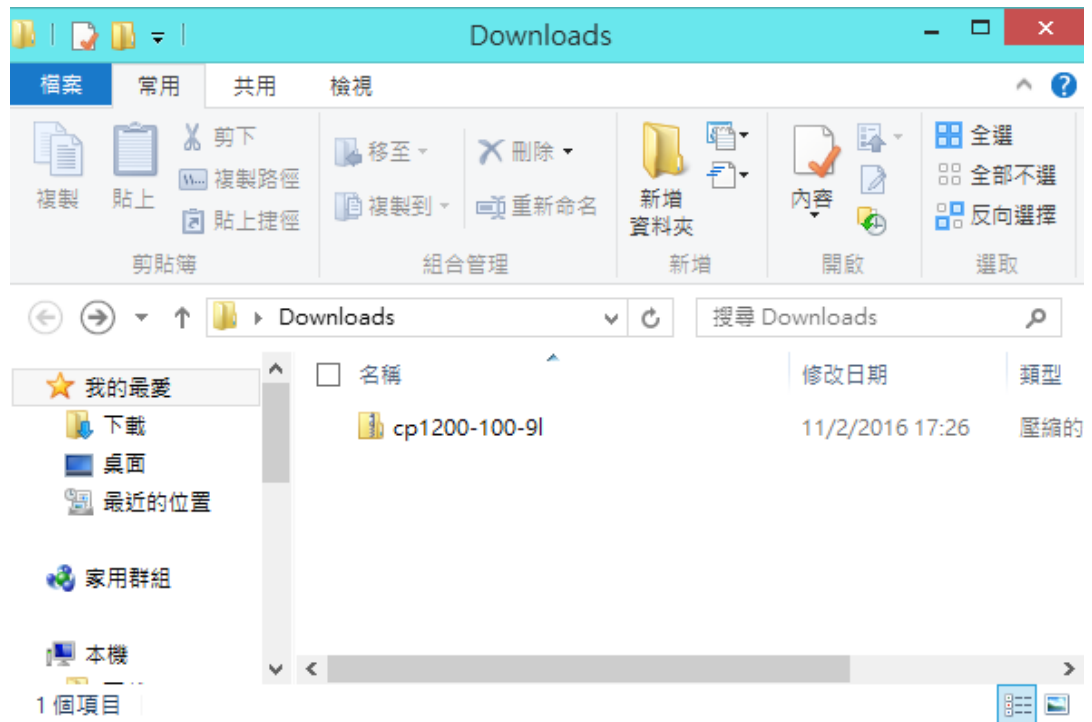


3. 開啟“cp1200-\*\*\*.exe” (Open “cp1200-\*\*\*.exe”)

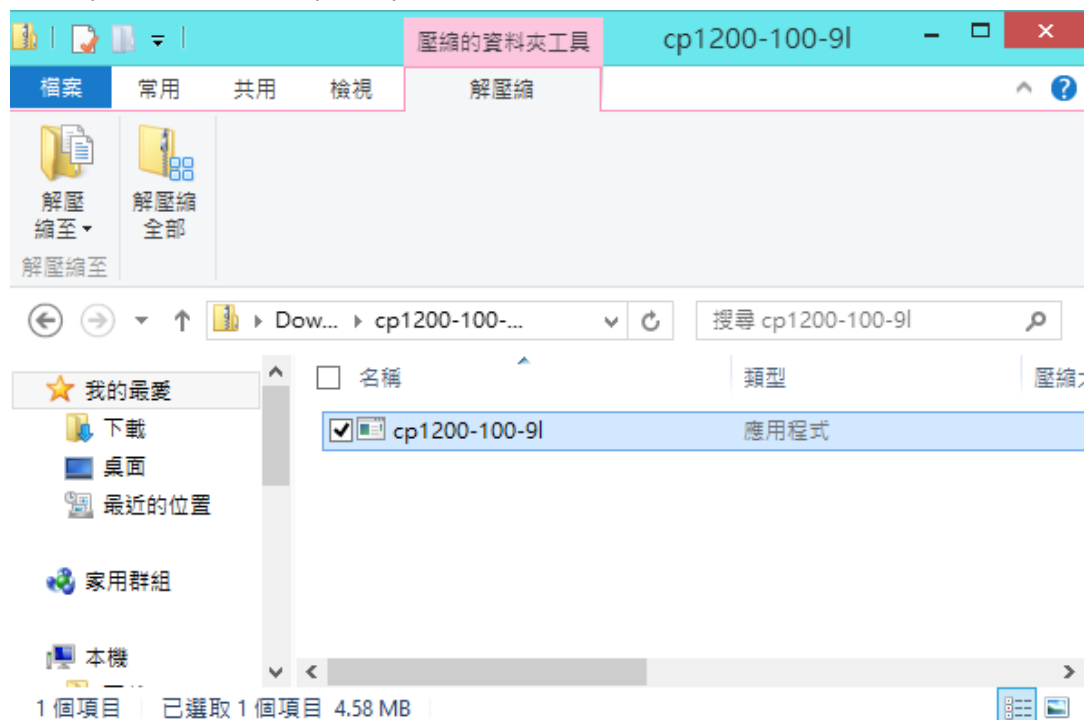


4. 按「Next>」 (Click “Next>”)

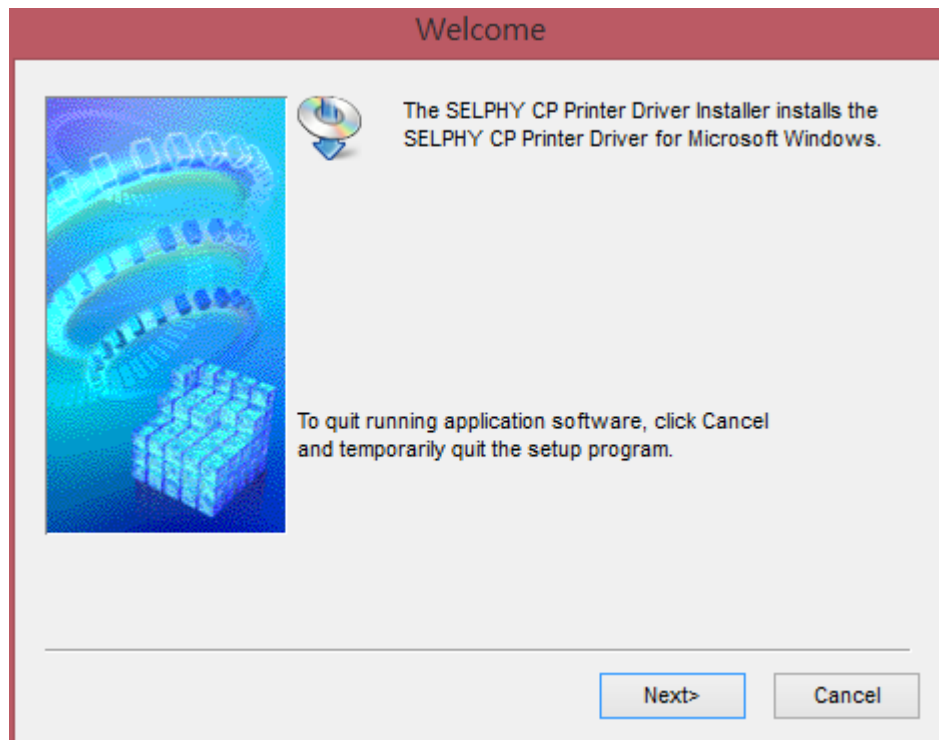


5. 選「Asia」，按「Next>」 (Choose “Asia”, and then click “Next>”)

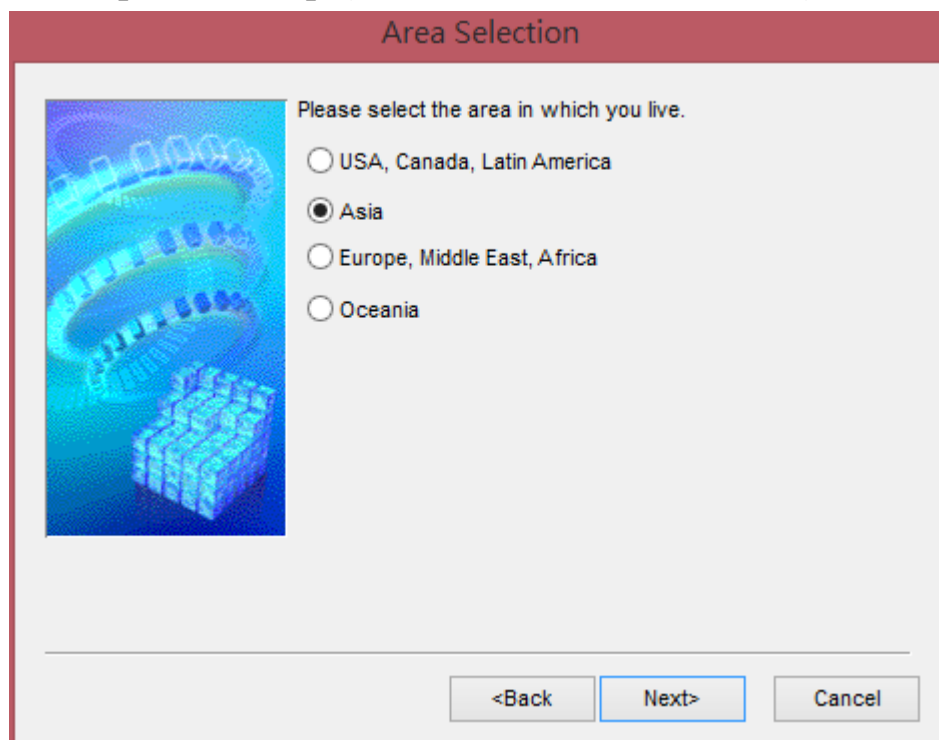


6. 按「Yes」(Click “Yes”)

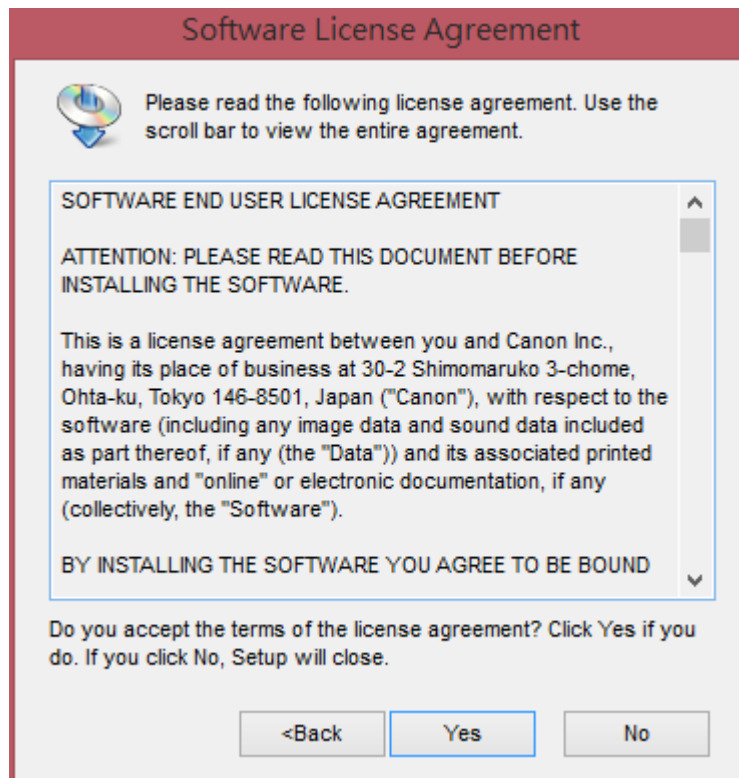


7. 選「Use with a wireless network」, 按「Next>」(Choose “Use with a wireless network”, and then click “Next>”)

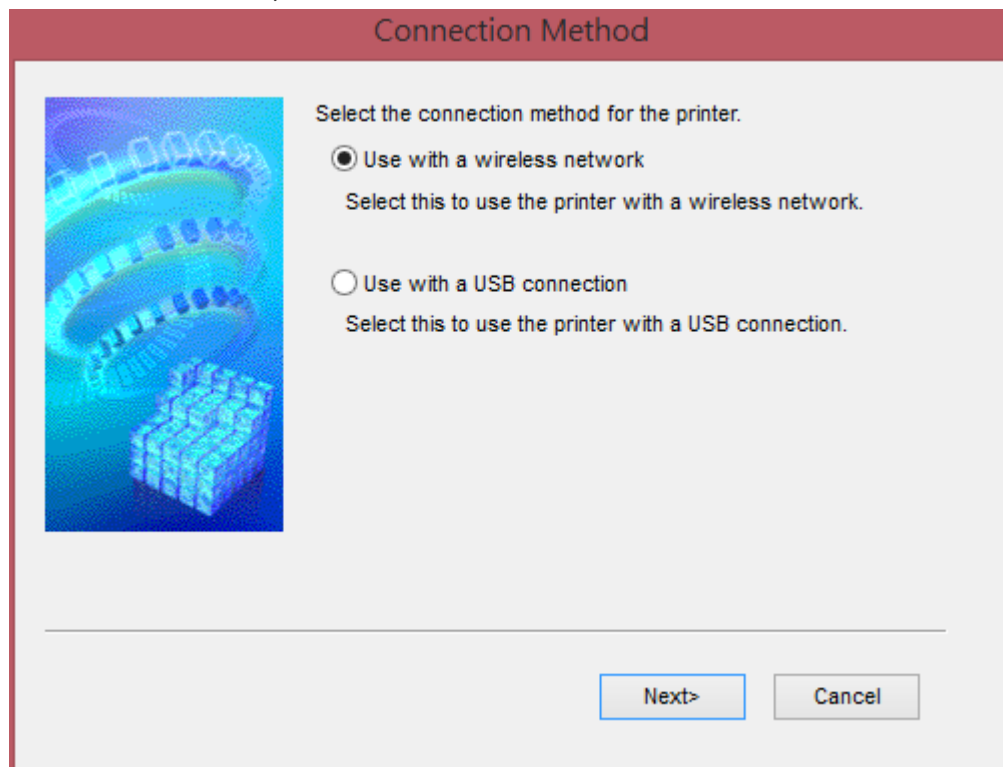

8. 點選「Canon SELPHY CP1200」, 按「Next>」 (Choose “Canon SELPHY CP1200”, and then click “Next>”)

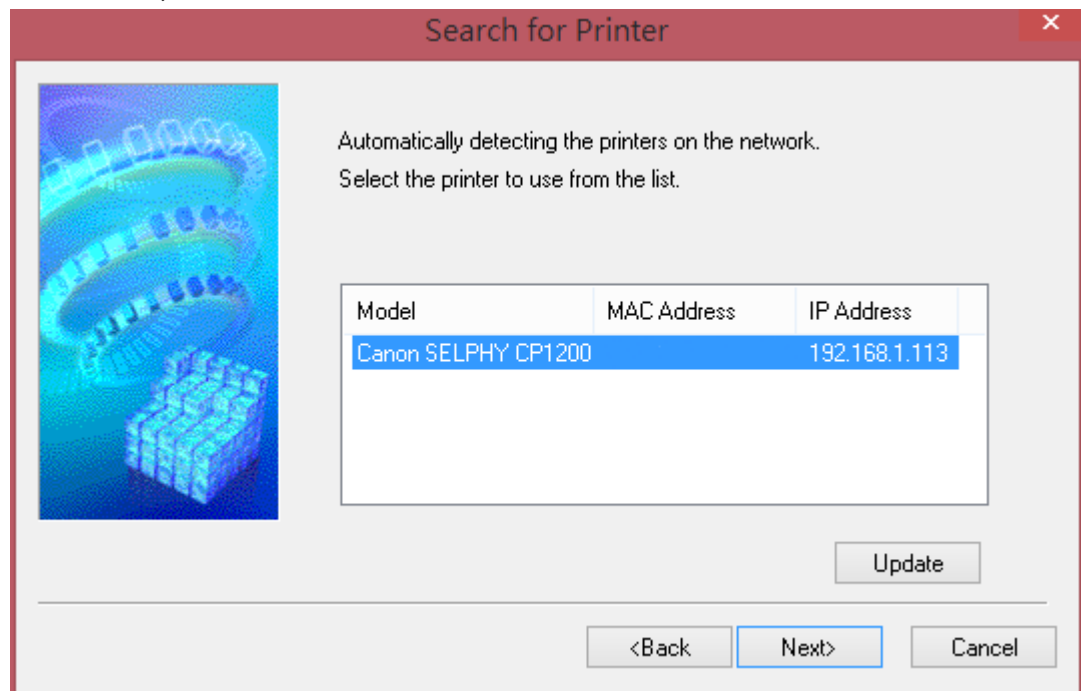

9. 按「Finish」 (Click “Finish”)

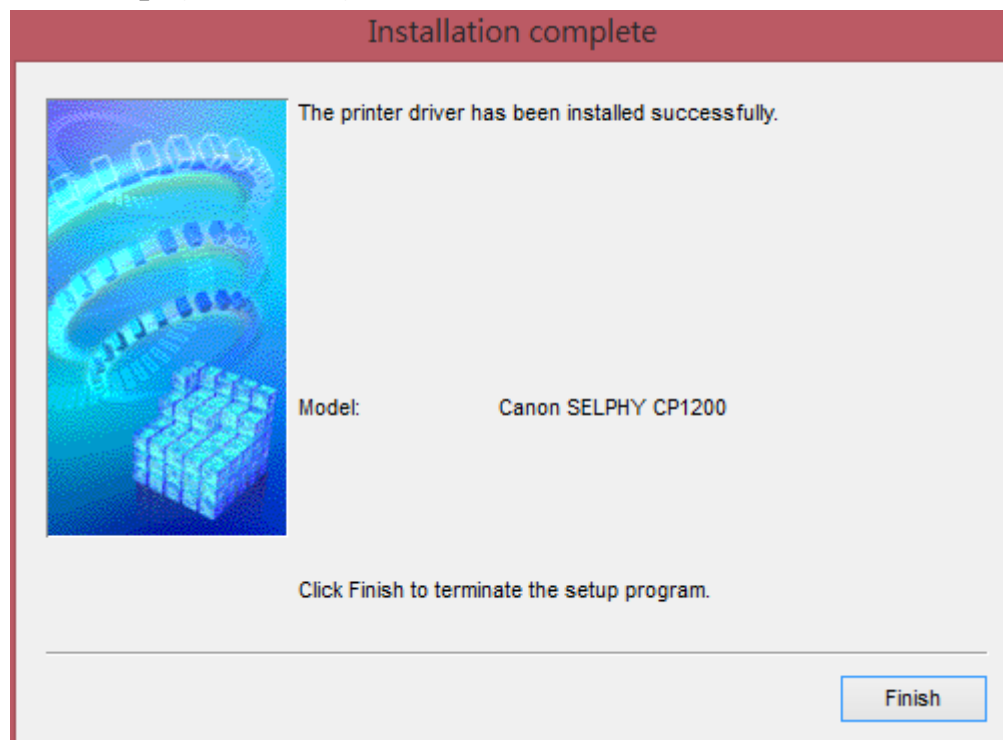

-完-  
-End-