

無屏幕印表機的維護方法

印表機型號 \ 維護	列印噴嘴檢查圖案	清潔列印頭	深度清潔列印頭	校準列印頭	清潔送紙滾軸	底板清潔
MG2470 / MG2570	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色一次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色兩次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色三次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色四次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色七次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色八次
MG2970	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色一次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色兩次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色三次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色四次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色七次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色八次
MG3570	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色一次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色兩次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色三次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色四次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色七次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色八次
MG3670	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色一次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色兩次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色三次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色四次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色七次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色八次
G3000	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色一次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色兩次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍橙色三次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍八次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍十一次	按住停止(Stop)按鈕，直至警告(Alarm)指示燈閃爍十二次
iP2870	按住電源/重試(ON/RESUME)按鈕，直至電源(POWER)指示燈閃爍綠色兩次	按住電源/重試(ON/RESUME)按鈕，直至電源(POWER)指示燈閃爍綠色一次	僅限電腦操作	僅限電腦操作	僅限電腦操作	按住電源/重試(ON/RESUME)按鈕，直至電源(POWER)指示燈閃爍綠色五次
iP110	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍兩次	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍一次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍四次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍五次
iP7270	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色兩次	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色一次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色四次	僅限電腦操作	不適用
iX6770	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色兩次	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色一次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色四次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色五次
iX6870	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色兩次	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色一次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色四次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色五次
iP8770	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色兩次	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色一次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色四次	僅限電腦操作	按住重試/取消(RESUME/CANCEL)按鈕，直至電源(POWER)指示燈閃爍白色五次

Maintenance for printer without screen

Printer Model \ Maintenance	Printing the Nozzle Check Pattern	Cleaning the Print Head	Cleaning the Print Head Deeply	Aligning the Print Head	Cleaning the Paper Feed Roller	Bottom Plate Cleaning
MG2470 / MG2570	Hold down the Stop button until the Alarm lamp flashes once	Hold down the Stop button until the Alarm lamp flashes twice	Hold down the Stop button until the Alarm lamp flashes three times	Hold down the Stop button until the Alarm lamp flashes four times	Hold down the Stop button until the Alarm lamp flashes seven times	Hold down the Stop button until the Alarm lamp flashes eight times
MG2970	Hold down the Stop button until the Alarm lamp flashes once	Hold down the Stop button until the Alarm lamp flashes twice	Hold down the Stop button until the Alarm lamp flashes three times	Hold down the Stop button until the Alarm lamp flashes four times	Hold down the Stop button until the Alarm lamp flashes seven times	Hold down the Stop button until the Alarm lamp flashes eight times
MG3570	Hold down the Stop button until the Alarm lamp flashes once	Hold down the Stop button until the Alarm lamp flashes twice	Hold down the Stop button until the Alarm lamp flashes three times	Hold down the Stop button until the Alarm lamp flashes four times	Hold down the Stop button until the Alarm lamp flashes seven times	Hold down the Stop button until the Alarm lamp flashes eight times
MG3670	Hold down the Stop button until the Alarm lamp flashes once	Hold down the Stop button until the Alarm lamp flashes twice	Hold down the Stop button until the Alarm lamp flashes three times	Hold down the Stop button until the Alarm lamp flashes four times	Hold down the Stop button until the Alarm lamp flashes seven times	Hold down the Stop button until the Alarm lamp flashes eight times
G3000	Hold down the Stop button until the Alarm lamp flashes once	Hold down the Stop button until the Alarm lamp flashes twice	Hold down the Stop button until the Alarm lamp flashes three times	Hold down the Stop button until the Alarm lamp flashes eight times	Hold down the Stop button until the Alarm lamp flashes eleven times	Hold down the Stop button until the Alarm lamp flashes twelve times
iP2870	Hold down the ON/RESUME button until the POWER lamp flashes green twice	Hold down the ON/RESUME button until the POWER lamp flashes green one	Computer Only	Computer Only	Computer Only	Hold down the ON/RESUME button until the POWER lamp flashes green five times
iP110	Hold down the RESUME/CANCEL button until the POWER lamp flashes twice	Hold down the RESUME/CANCEL button until the POWER lamp flashes once	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes four times	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes five times
iP7270	Hold down the RESUME/CANCEL button until the POWER lamp flashes white twice	Hold down the RESUME/CANCEL button until the POWER lamp flashes white once	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white four times	Computer Only	N/A
iX6770	Hold down the RESUME/CANCEL button until the POWER lamp flashes white twice	Hold down the RESUME/CANCEL button until the POWER lamp flashes white once	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white four times	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white five times
iX6870	Hold down the RESUME/CANCEL button until the POWER lamp flashes white twice	Hold down the RESUME/CANCEL button until the POWER lamp flashes white once	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white four times	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white five times
iP8770	Hold down the RESUME/CANCEL button until the POWER lamp flashes white twice	Hold down the RESUME/CANCEL button until the POWER lamp flashes white once	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white four times	Computer Only	Hold down the RESUME/CANCEL button until the POWER lamp flashes white five times