






於遠端控制台預覽傳真/ Review Fax in remote UI interface

需在「遠端控制介面」設定，跟從以下程序檢查印表機IP位址

Please follow below procedure to check the IP address, in order to open Remote UI to set up


1. 按  (Status Monitor)
Press  (Status Monitor)
2. 點選「網路資訊 (Network Information)」
Tap “Network Information”
3. 點選「IPv4」
Tap “IPv4”
4. 點選「IP 位址 (IP Address)」
Tap “IP Address”
5. IP 位址會顯示 (每部印表機 IP 位址可能不相同)
IP Address is shown (IP Address may differ in different printers)

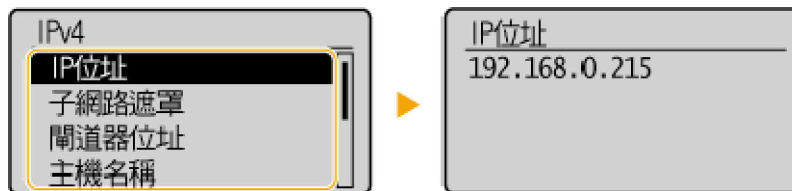

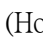6. 按  (Home)鍵回到主畫面
Press  button return to Home screen


7. 在電腦瀏覽器網址欄輸入印表機 IP 位址，以系統管理員模式登入遠端控制台（如已設定管理員識別碼及密碼，須在此輸入）

Enter the IP address of the print in the URL field, then log on to Remote UI as a System Manager Mode (System Manager ID and PIN may need to input if “System Manager ID” was set)

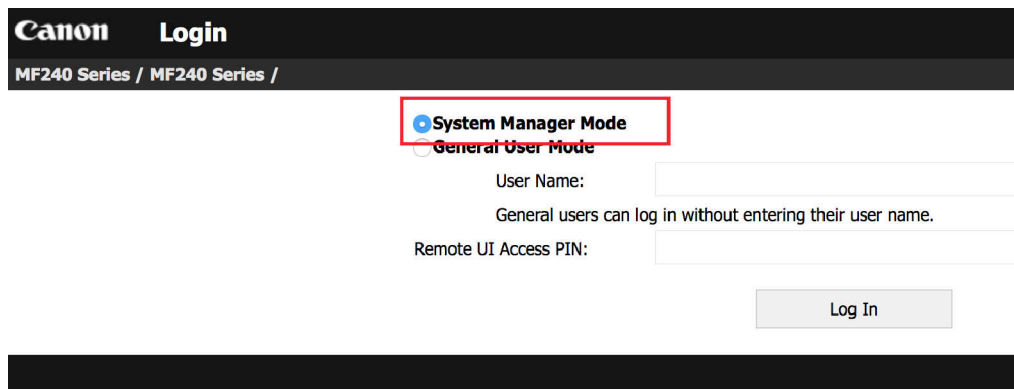

8. 按一下 [狀態確認/取消]


Click [Status Monitor/Cancel].

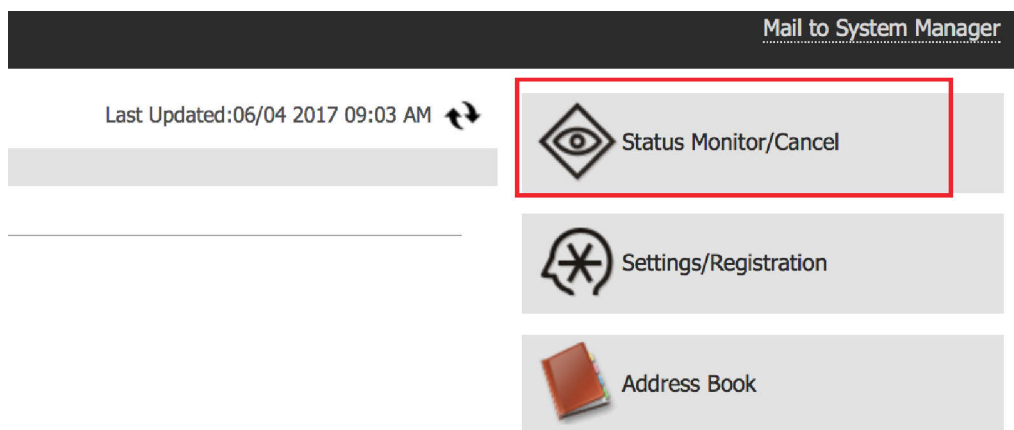


9. [接收] ▶[工作狀態] ▶按一下您要檢查的文件。

[RX] ▶[Job Status] ▶Click the document you want to check

- 最多可預覽文件開頭前 3 頁。Up to 3 pages starting from the top of a document can be previewed.
- 實際的列印結果可能與預覽的文件不同。Actual print results may be different from the document as previewed.
- 用戶可以直接刪除不需要的文件。User can delete the useless document directly.
- 如用戶需要列印所需文件，客戶可以：If user want to print out the documents, user can:
 - i. 記下所需列印的工作編號到打印機上列印。Print specific document in printer by select the job number.

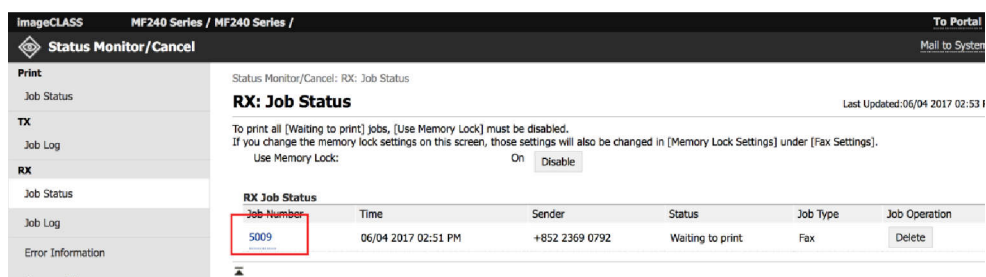

- ii. 刪除所有不需要的文件後將記憶鎖定功能轉為[停用]，記憶體內的所有文件即會自動列印（列印完成後可再次將記憶鎖定功能〔開啟〕）。After delete all useless document in Remote UI, all documents in printer will print out automatically by click [Disable] button under memory lock (User can turn the memory lock function [ON] again after all documents printed) .

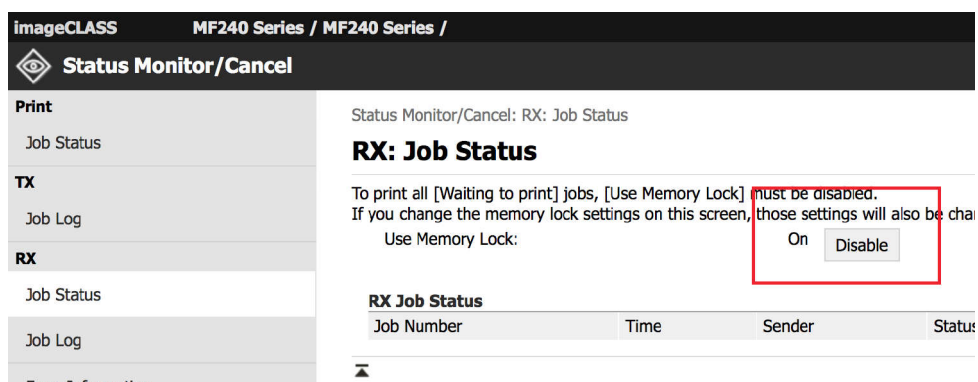

END