

MG3070 / MG3077 - 無線設定 (流動裝置)


MG3070/ MG3077 - WiFi Setup (Mobile Device)

於流動裝置下載及安裝Canon PRINT Inkjet / SELPHY
Install Canon PRINT Inkjet/SELPHY on the mobile device

Android: <https://play.google.com/store/apps/details?id=jp.co.canon.bsd.ad.pixmapprint&hl=en>
iOS: <https://itunes.apple.com/hk/app/canon-print-inkjet-selphy/id664425773?mt=8>


1. 確認印表機電源已開啟

Confirm the printer was turned on

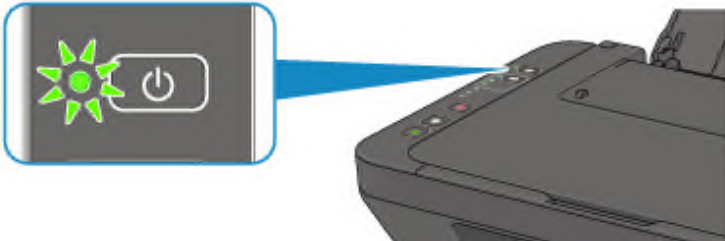


2. 按住印表機上的無線按鈕直至無線指示燈閃爍

Press and hold the Wireless button on the printer until the Wireless lamp is flashing

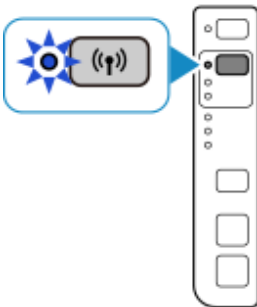


3. 按彩色按鈕

Press the Color button

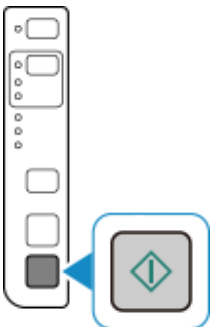


4. 重複按無線按鈕直至網路指示燈亮起

Press the Wireless button repeatedly until the Network lamp lights up

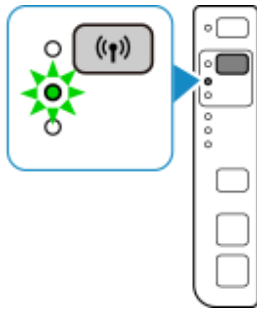


5. 按彩色按鈕

Press the Color button

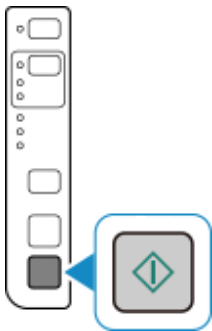

6. 確保無線指示燈閃爍

Make sure the Wireless lamp is flashing

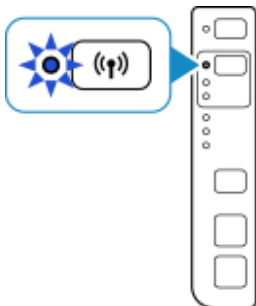

7. 從裝置上的 Wi-Fi 設定中選擇印表機的網路名稱(以「Canon_ij_」開頭的 SSID)

Select the printer's network name start with (Canon_ij_) from the Wi-Fi settings on your smart device

8. 執行 Canon PRINT Inkjet / SELPHY

Run the Canon PRINT Inkjet / SELPHY

9. 點選 

Tap 



10. 點選“註冊印表機”

Tap “Register Printer”




11. 按“確定”

Tap “OK”




12. 請稍候

Please wait

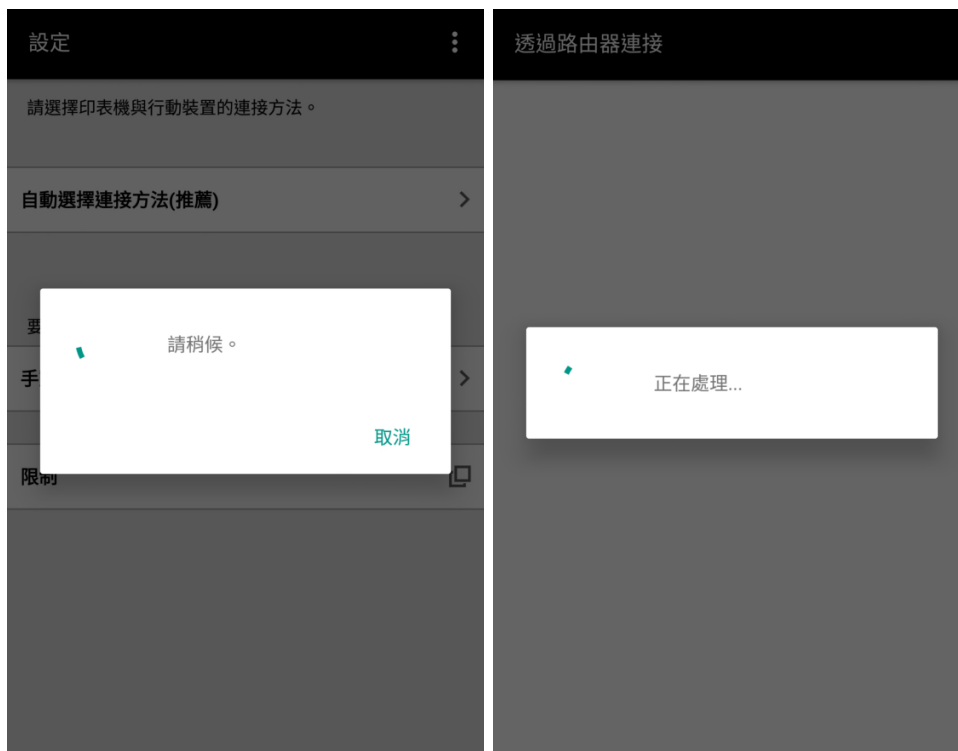

13. 點選要連接印表機的無線路由器 SSID

Tap the SSID of wireless router which you want the printer to connect

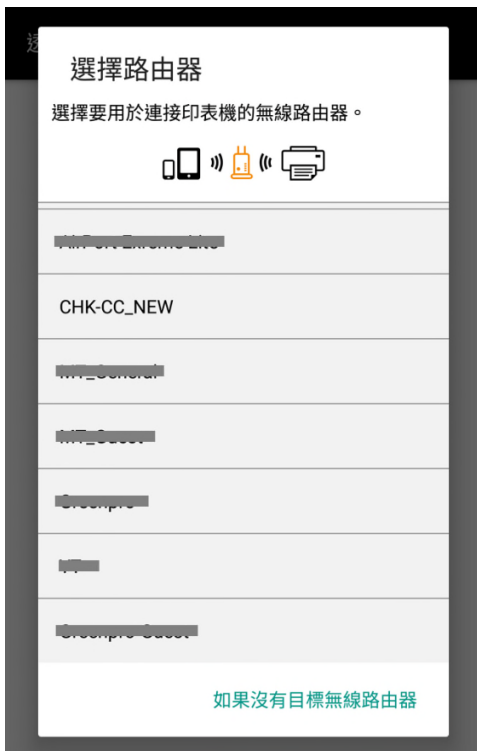

14. 輸入無線路由器的密碼，然後按“確定”

Enter the passphrase of wireless router, then tap “OK”




15. 按“確定”

Tap “OK”




16. 請稍候

Please wait

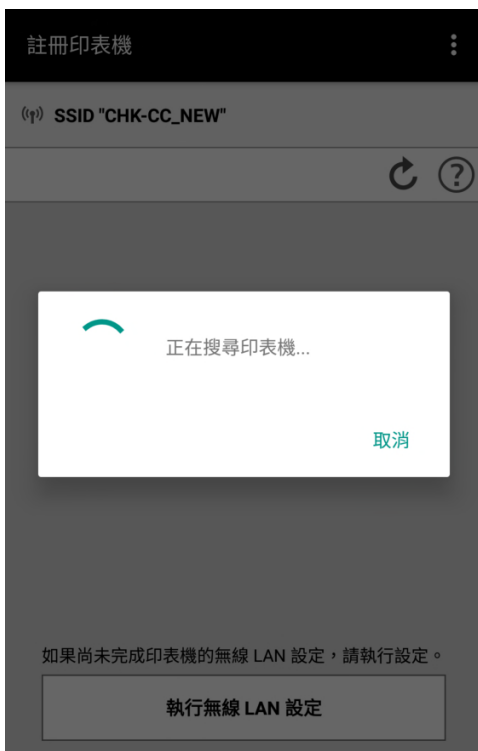

17. 點選印表機，然後按“確定”完成無線設定

Tap the printer name, then tap “OK” to finish the WiFi setup

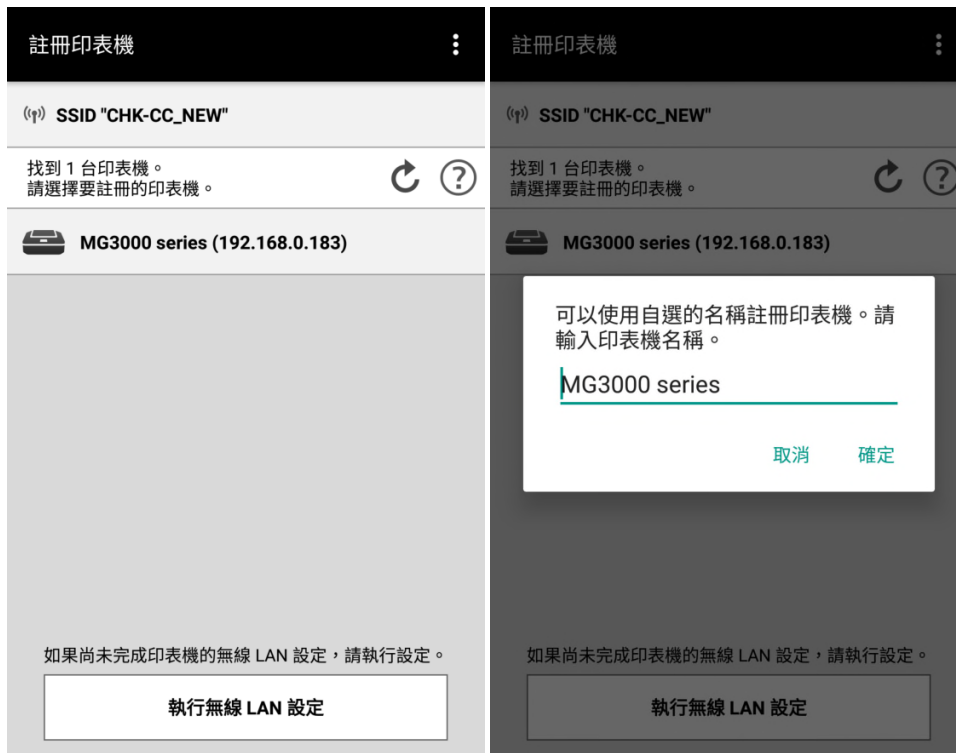

-完-
-End-