

LBP611Cn 在 Windows 透過 LAN 連線連接印表機之驅動程式步驟
Driver installation procedure for LBP611Cn in Windows (Via Wired LAN)

先將打印機連接到網路，詳細可參考以下步驟


Connect printer to network first, please refer to following procedure

1. 開啟印表機

Turn on the printer

2. 使用區域網路纜線將本機連接到路由器
推入接頭，直至聽到喀嗒聲

Connect the machine to router by using a LAN cable, push the connector in until it clicks into place

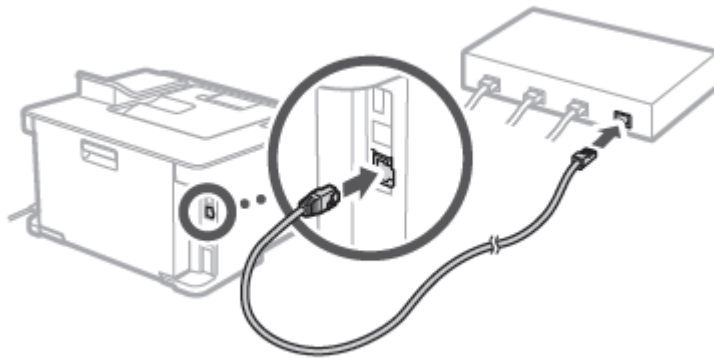

等待約 2 分鐘，直到本機的 IP 位址設定完成

Wait approximately 2 minutes until IP address settings of the machine complete

下載及安裝步驟

Driver download and installation procedure

1. 到佳能網站 <https://hk.canon/en/support/imageCLASS%20LBP611Cn/model>，下載印表機的驅動程式

Go to: <https://hk.canon/en/support/imageCLASS%20LBP611Cn/model>, download the printer driver


2. 選擇並下載以下檔案

Choose and download below file:


- 打印機驅動程式 / Printer Driver

[\[Windows x32bit\] UFR II Printer Driver Vxx.xx](#)


3. 執行檔案 [UFR II_Driver_Vxxxx_Wxx_ukEN_xx.exe] 按 「 Yes 」
Run File [UFR II_Driver_Vxxxx_Wxx_ukEN_xx.exe], click “Yes”

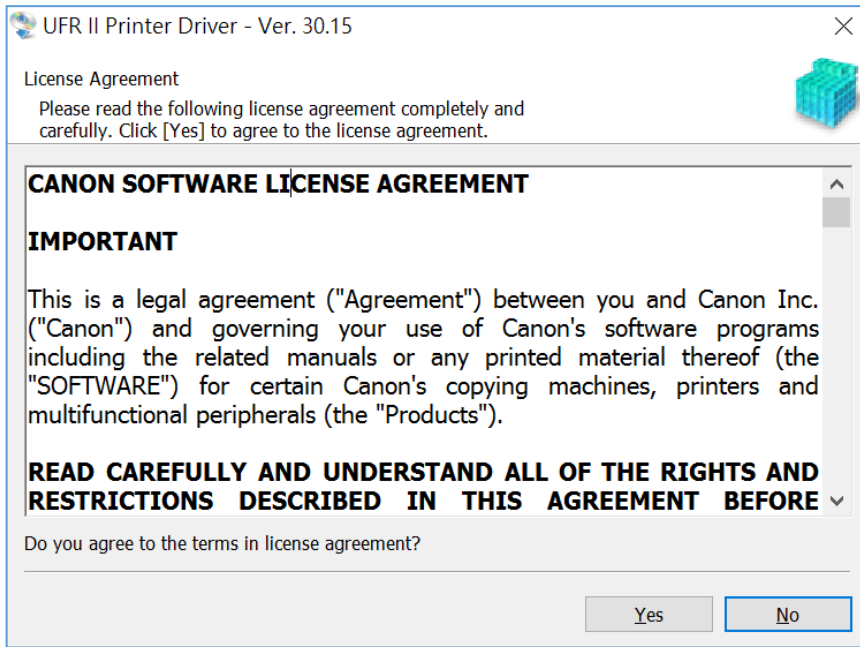


4. 選擇 「 Standard (for Network Models) 」 ， 按 「 Next 」
Choose “Standard (for Network Models)”, click “Next”

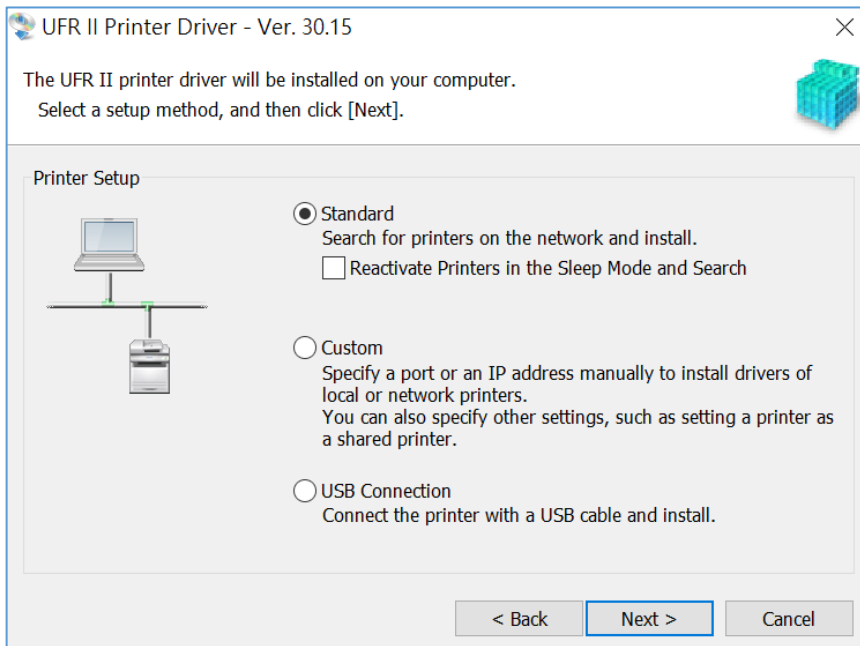

5. 按「是」
Click "Yes"

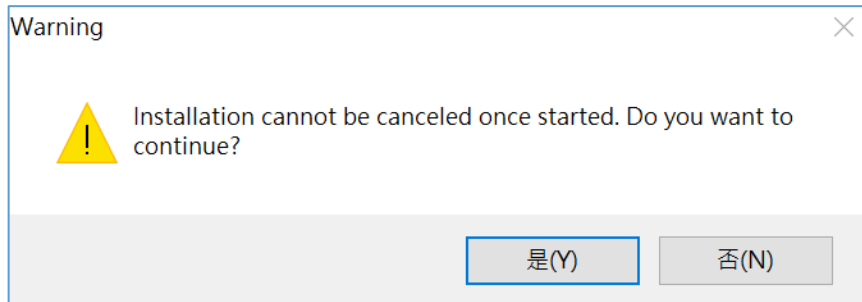


6. 按「Next」
Click "Next"

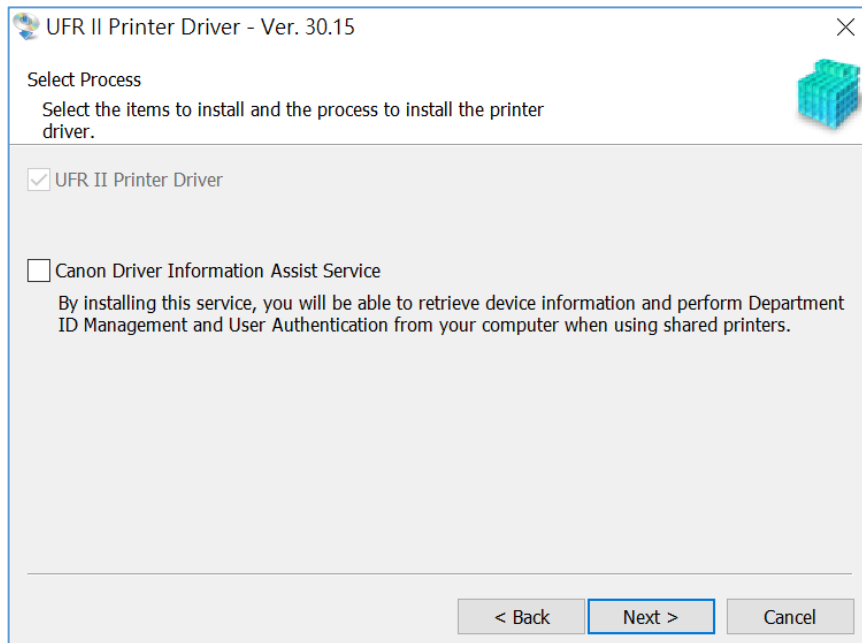


7. 程式會自動偵測網絡上的印表機，選擇後按「Next」

Program will automatic detect the network printer, choose printer and click “Next”

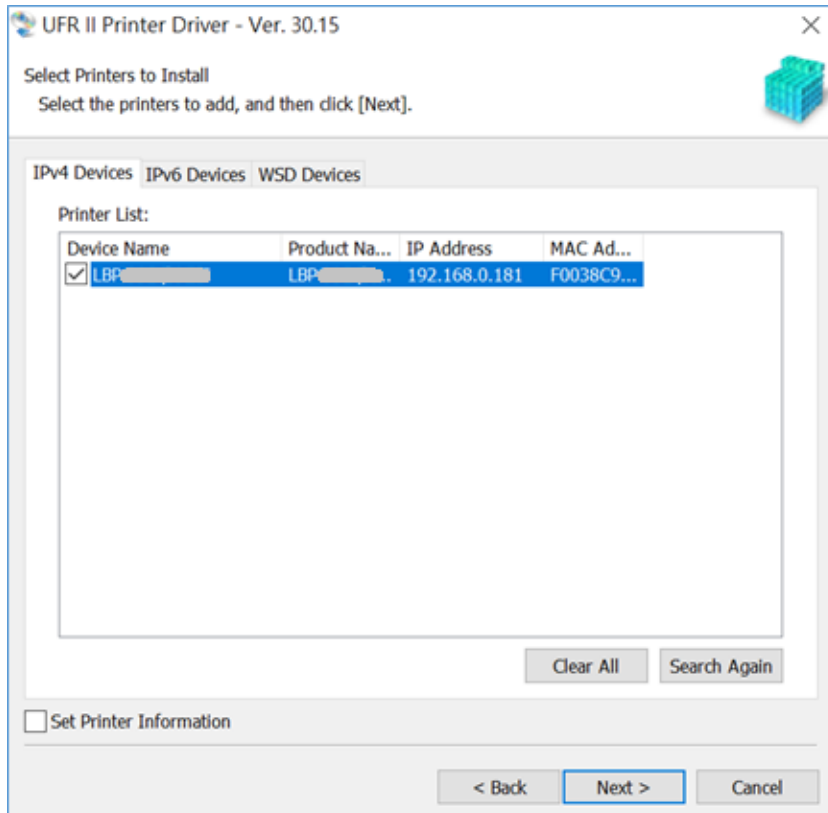


8. 按「Start」

Click “Start”

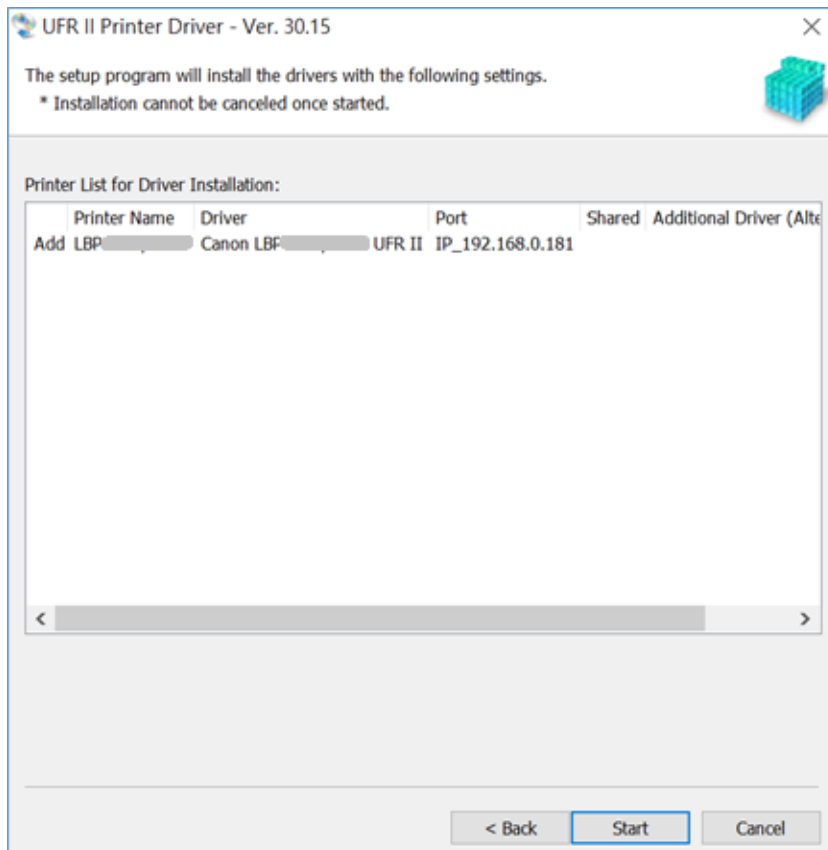


9. 等待安裝程序完成

Waiting for the installation progress

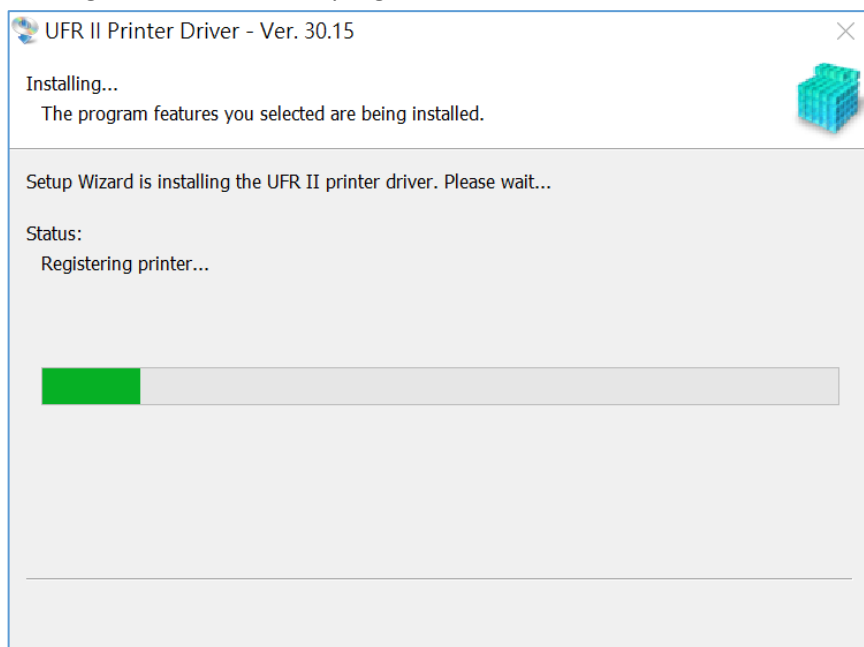

10. 安裝完成，按「Restart」

Installation is complete. Click "Restart"

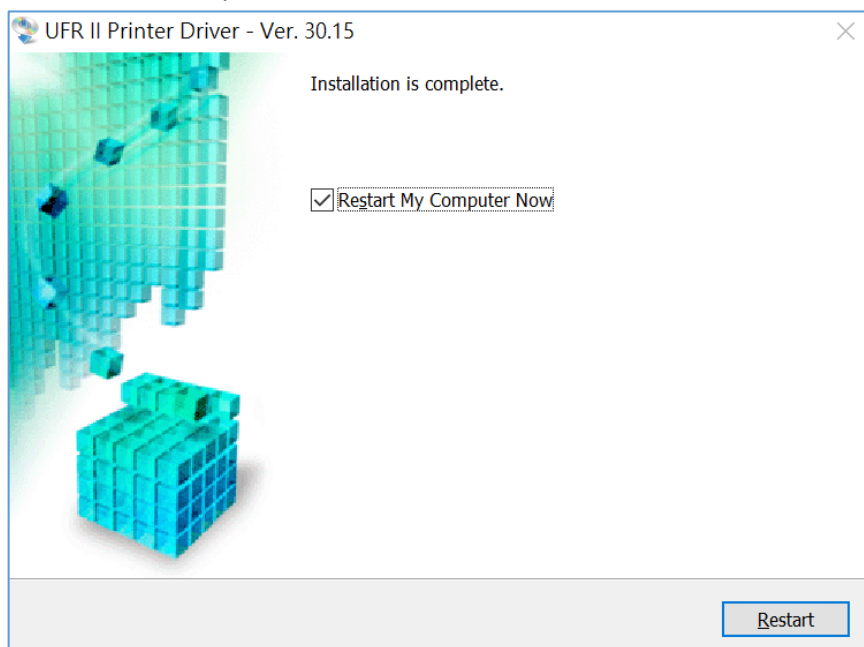

-完-
-End-