

在 Windows 以無線方式安裝及連接 PIXMA G4770 打印機


Installing PIXMA G4770 on Windows via WiFi connection

無線設定 Wireless Setup


1. 確保在開始無線連接設定之前，印表機已開啟。
如果電源開啟，電源指示燈閃爍，然後持續亮起。

Make sure printer is turned on before starting wireless connection setup.

If the power is on, the ON lamp flashes and then remains lit.

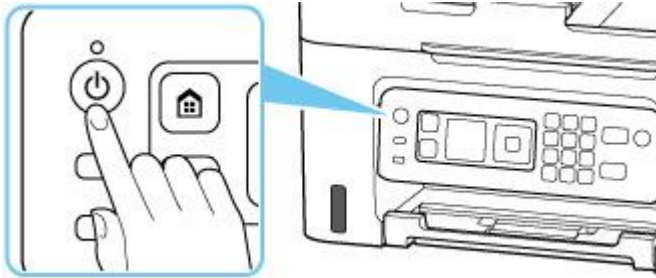


 2. 按  (主頁)。


根據印表機的網路連接狀態， (網路) 的外觀會有所不同。

Press  (HOME).

The appearance of  (Network) varies depending on the printer's network connection status.

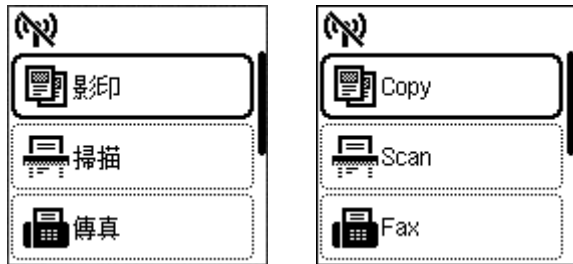

3. 使用 ▲ 或 ▼ 按鈕選擇設定並按 OK 按鈕。
Use the ▲ or ▼ button to select **Settings** and press the **OK** button.

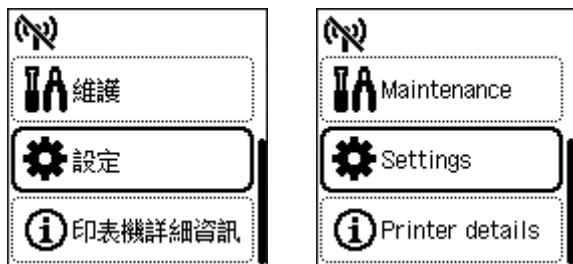


4. 選擇 **LAN 設定** 並按 **OK** 按鈕。

Select **LAN settings** and press the **OK** button.




5. 選擇 **Wi-Fi** 並按 **OK** 按鈕。

Select **Wi-Fi** and press the **OK** button.

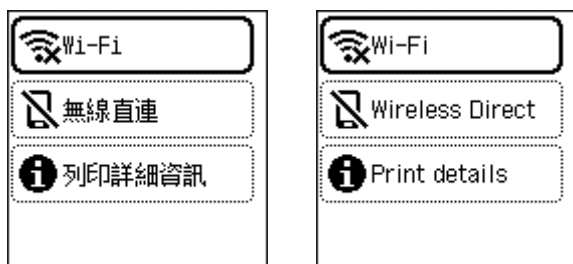


6. 選擇 **Wi-Fi 設定** 並按 **OK** 按鈕。

Select **Wi-Fi setup** and press the **OK** button.

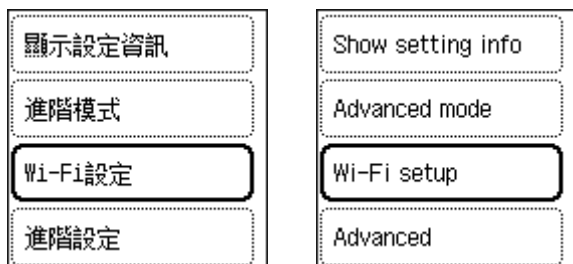


7. 選擇 **手動連接** 並按 **OK** 按鈕。

Select **Manual connect** and press the **OK** button.

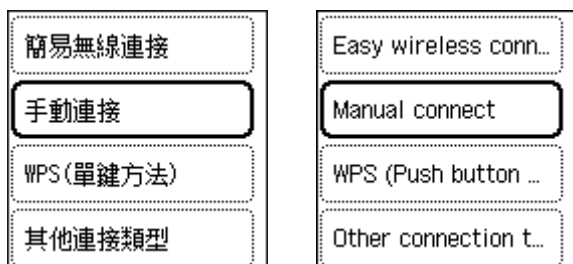

8. 選擇無線路由器並按 **OK** 按鈕。

Select your wireless router and press the **OK** button.

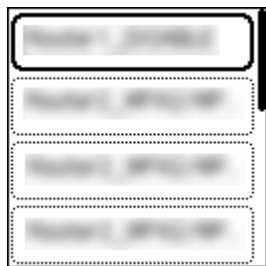

如果未找到您的路由器，請確定您的路由器設定符合以下打印機的規格：

If you do not find your router, please ensure your router setting meets the below printer requirement:

a. 頻率 Frequency: 2.4GHZ


b. 頻道 Channel: 1-11 (其中一條 either one)

9. 如果顯示以下螢幕，請按 **OK** 按鈕。

如果未顯示以下螢幕，請繼續執行下一步。

If the following screen is displayed, press the **OK** button.

If the following screen is not displayed, proceed to the next step.


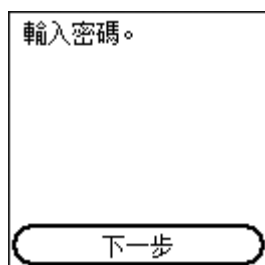


10. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[輸入數字、字母和符號](#)」(在新視窗中顯示)。

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Entering Numbers, Letters, and Symbols](#)" (appears in a new window).

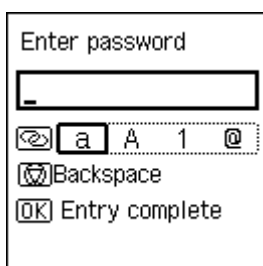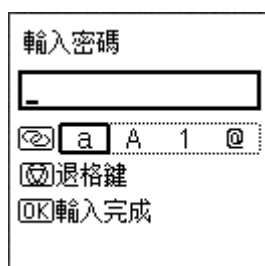

11. 完成輸入。

按 **OK** 按鈕完成輸入。

Complete entry.

press the **OK** button to complete the entry.

12. 顯示以下螢幕時，請按 **OK** 按鈕。

When the following screen appears, press the **OK** button.



13. 按  (主頁)。

Press  (**HOME**).



網路連接設定完成。

The network connection setup is now complete.

連接完成後， 會出現在螢幕左上方。

Once connection is complete,  appears at the upper left of the screen.

下載及安裝步驟

Driver download and Installation procedure

14. 到以下佳能網站並下載印表機的驅動程式
Go to below Canon webpage and download the printer driver


<https://hk.canon/en/support/pixma%20g4770/model>

15. 選擇並下載以下檔案
Choose and download below file

G4770 series MP Driver Ver.x.xx (Windows)

16. 按上面網頁內的〔Download〕，下載完成後開啟該檔案安裝

Click [Download] in the webpage above, and then execute the file after download was completed

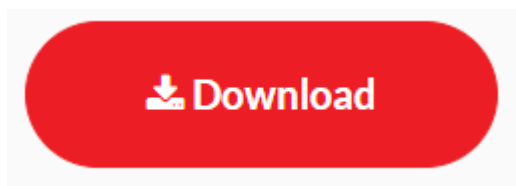


17. 按〔下一步〕

Click [Next]




18. 選擇〔亞洲〕，按〔下一步〕

Select [Asia]; click [Next]

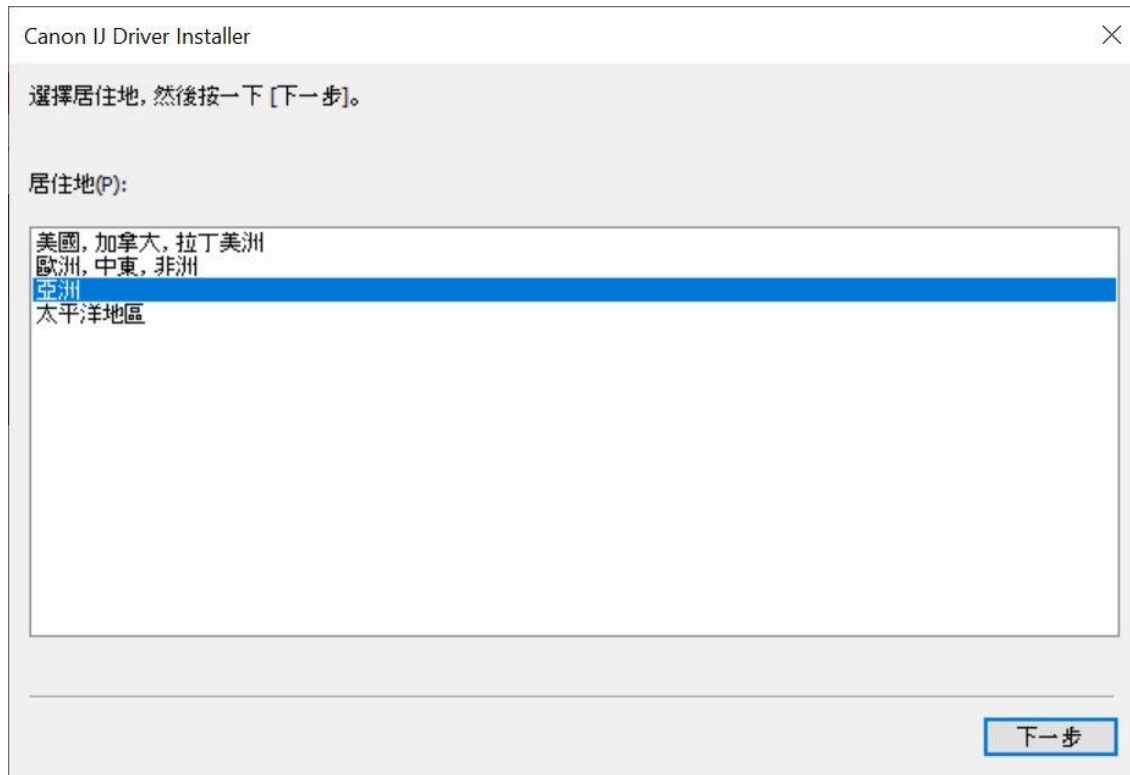


19. 按〔是〕

Click [Yes]

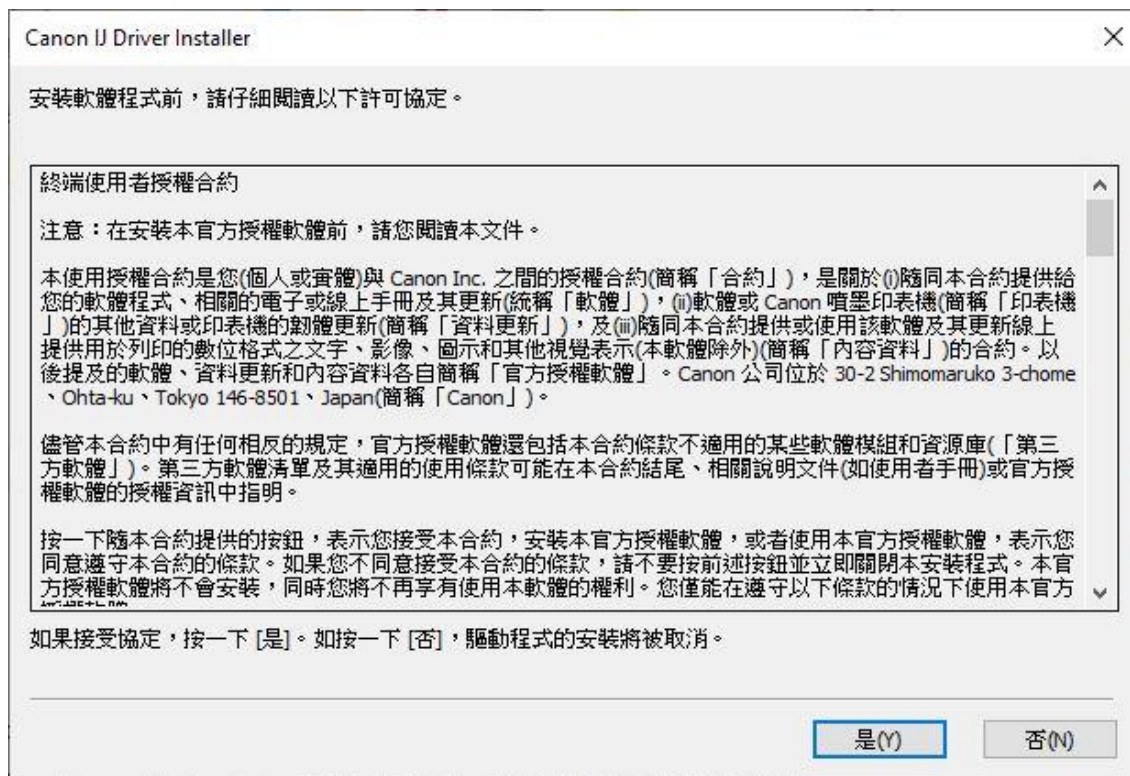


20. 選擇連接方法為 Wi-Fi 的打印機，按〔 下一步 〕

Select the printer with connection method as Wi-Fi, click [Next]

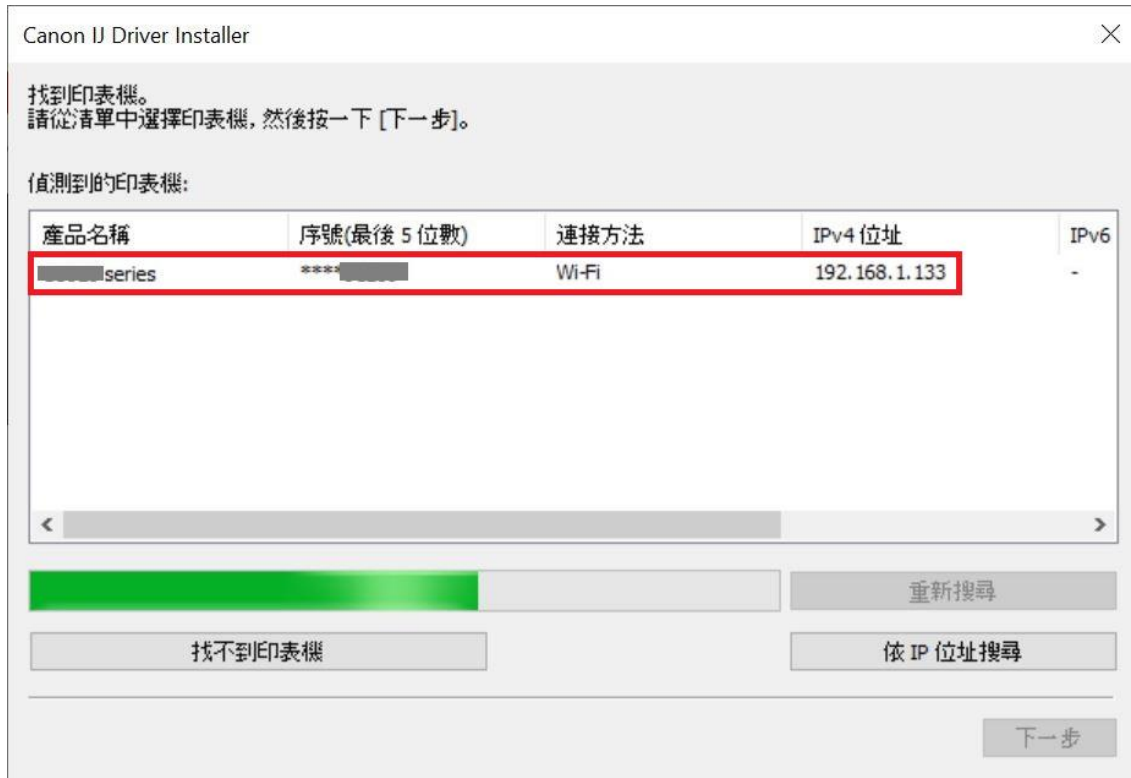


21. 正在安裝印表機驅動程式，請稍候

Installing the driver, please wait

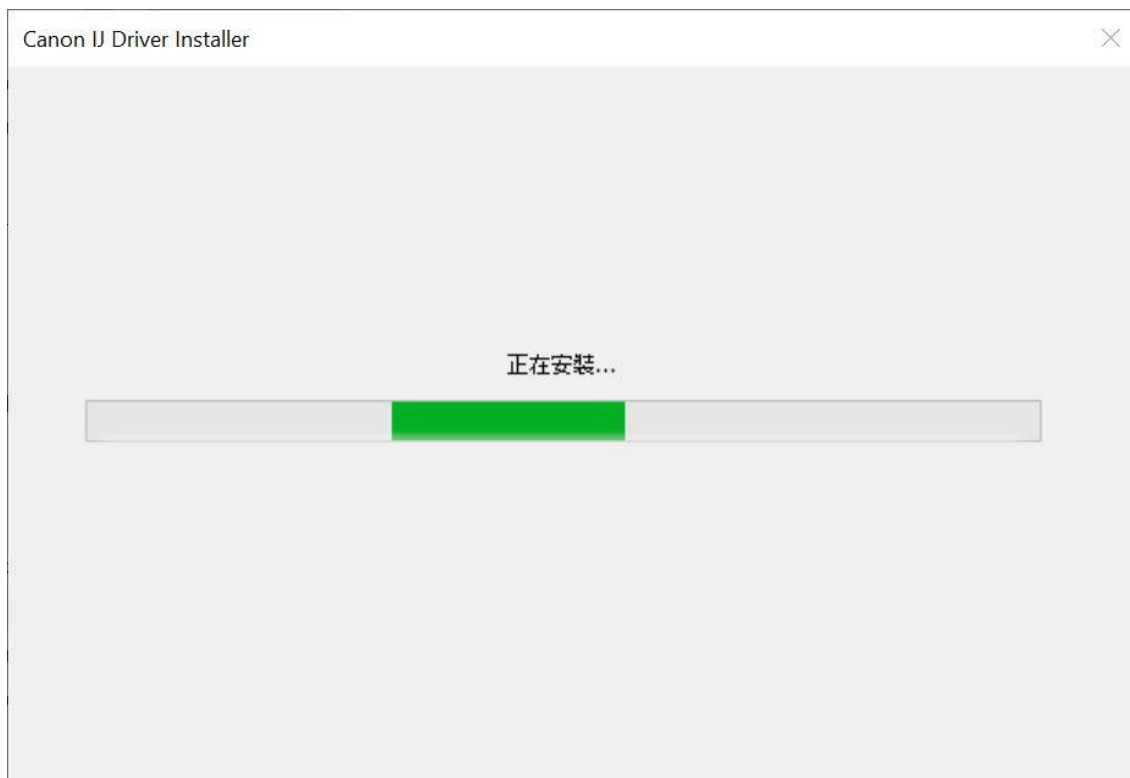

22. 安裝完成，按〔結束〕

Driver installation was completed; click [Finish]

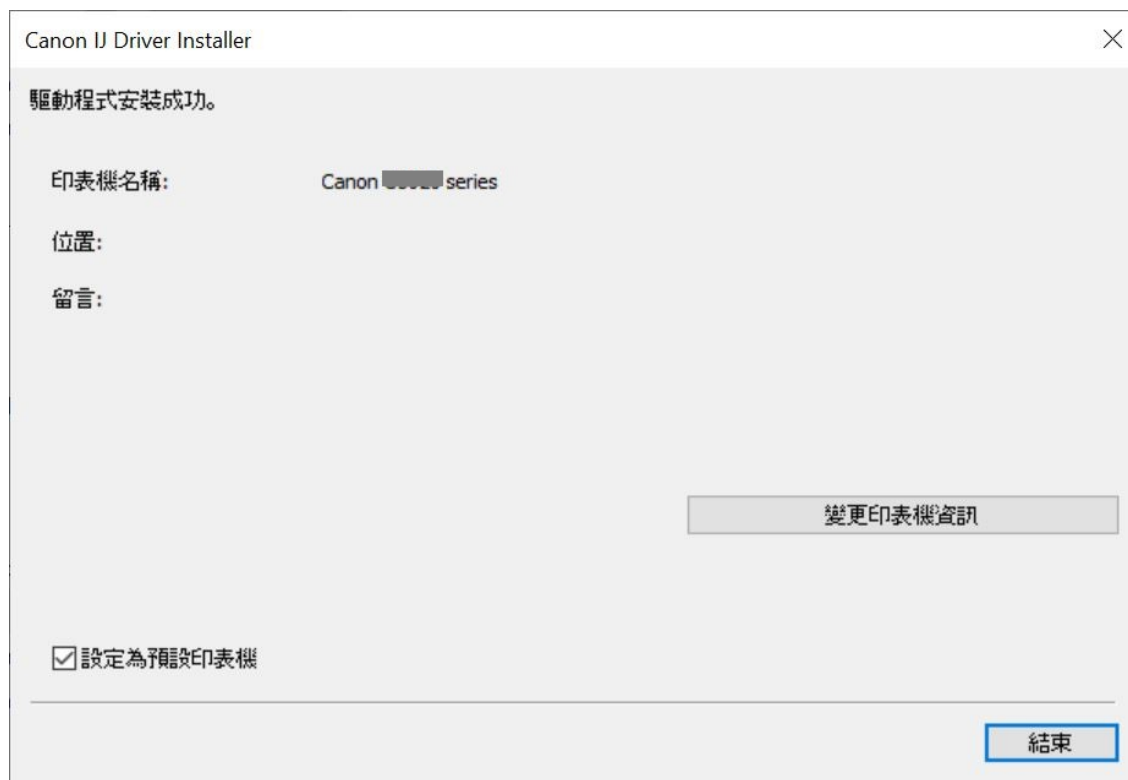

-完-

-End-