

## 在 Windows 以無線方式安裝及連接 PIXMA TS7770 打印機


### Installing PIXMA TS7770 on Windows via WiFi connection



以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.

#### 無線設定 Wireless Setup

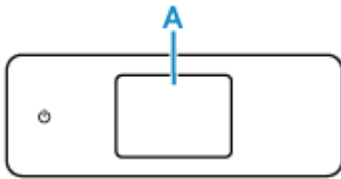1. 確保在開始無線連接設定之前，印表機已開啟。  
如果電源開啟，請輕觸觸控式螢幕(A)以顯示以下螢幕(A)。  
Make sure printer is turned on before starting wireless connection setup.  
If the power is on, touch the touch screen (A) to display the screen (A).



2. 選擇  [主頁(HOME)]。  
Select  (HOME).

3. 點選 。

根據印表機的網路連接狀態， [網路]的外觀會有所不同。

Tap .

The appearance of  (Network) varies depending on the printer's network connection status.



4. 點選 **Wi-Fi**。

Tap **Wi-Fi**.

LAN設定	LAN settings
<b>Wi-Fi</b>	<b>Wi-Fi</b>
無線直連	Wireless Direct
<a href="#">列印詳細資訊</a>	<a href="#">Print details</a>

5. 點選 **Wi-Fi 設定**。

Tap **Wi-Fi setup**.

Wi-Fi	Wi-Fi
檢視設定	See settings
啟用/禁用Wi-Fi	Enable/disable Wi-Fi
<b>Wi-Fi設定</b>	<b>Wi-Fi setup</b>
<a href="#">進階設定</a>	<a href="#">Advanced</a>





6. 點選**手動連接**。

Tap **Manual connect**.

Wi-Fi設定	Wi-Fi setup
簡易無線連接	Easy wireless connect
<b>手動連接</b>	<b>Manual connect</b>
WPS (單鍵方法)	WPS (Push button method)
其他連接類型	Other connection types

7. 點選所用無線路由器。

Tap your wireless router.

選擇無線路由器	Select wireless router
	
	
<input type="button" value="重新搜尋"/>	<input type="button" value="Search again"/>

如果未找到您的路由器，請確定您的路由器設定符合以下打印機的規格：



If you do not find your router, please ensure your router setting meets the below printer requirement:

a. 頻率 Frequency: 2.4GHZ

b. 頻道 Channel: 1-11 (其中一條 either one)

8. 點選輸入區域。

Tap the input area.

輸入密碼	Enter password
8到64個字元	8-64 characters
 請輸入。	 Please enter.
<input type="button" value="顯示密碼"/>	<input type="button" value="Show password"/>
<input type="button" value="OK"/>	<input type="button" value="OK"/>

9. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[輸入數字、字母和符號字](#)」。

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Entering Numbers, Letters, and Symbols](#)".




10. 點選 **OK**。

Tap **OK**.




11. 點選 **OK**。

Tap **OK**.

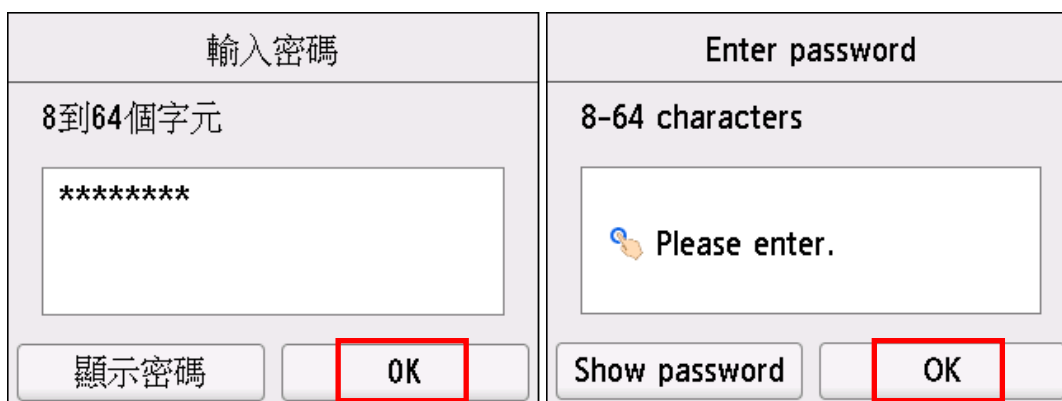

12. 顯示以下螢幕時，請點選 **OK**。

When the screen on the below appears, tap **OK**.

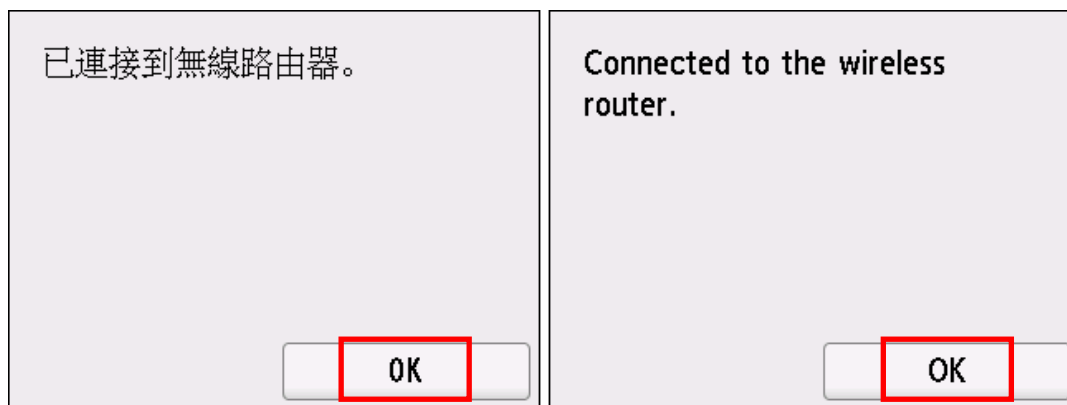

13. 按主頁  按鈕。

Press the **HOME**  button.



網路連接設定完成。

連接完成後， 會出現在螢幕左下方。

The network connection setup is now complete.

Once connection is complete,  appears at the lower left of the screen.

## 下載及安裝步驟

### Driver download and Installation procedure

14. 到以下佳能網站並下載印表機的驅動程式

Go to below Canon webpage and download the printer driver

<https://hk.canon/en/support/pixma%20ts7770/model>

15. 選擇並下載以下檔案

Choose and download below files

**TS7770 MP Drivers v.1.01 (Windows)**

16. 按上面網頁內的〔Download〕，下載完成後開啟該檔案安裝

Click [Download] in the webpage above, and then execute the file after download was completed


17. 按〔下一步〕

Click [Next]




18. 選擇〔亞洲〕，按〔下一步〕

Select [Asia]; click [Next]

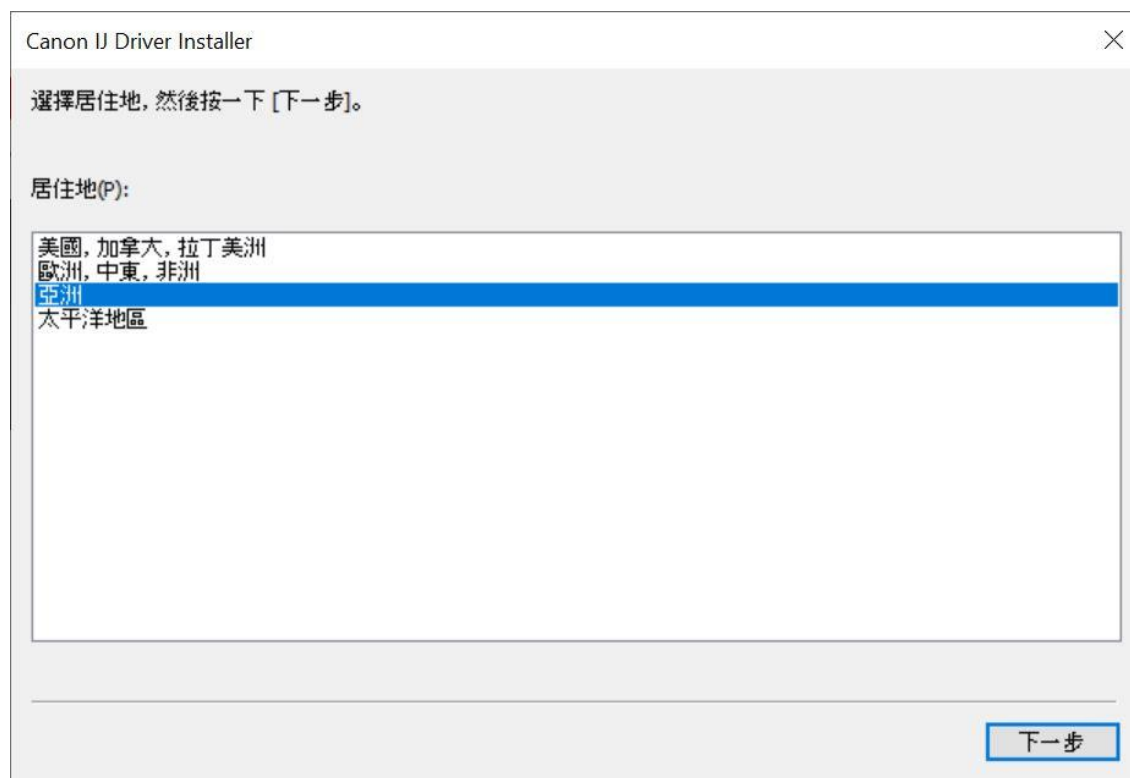


19. 按〔是〕

Click [Yes]

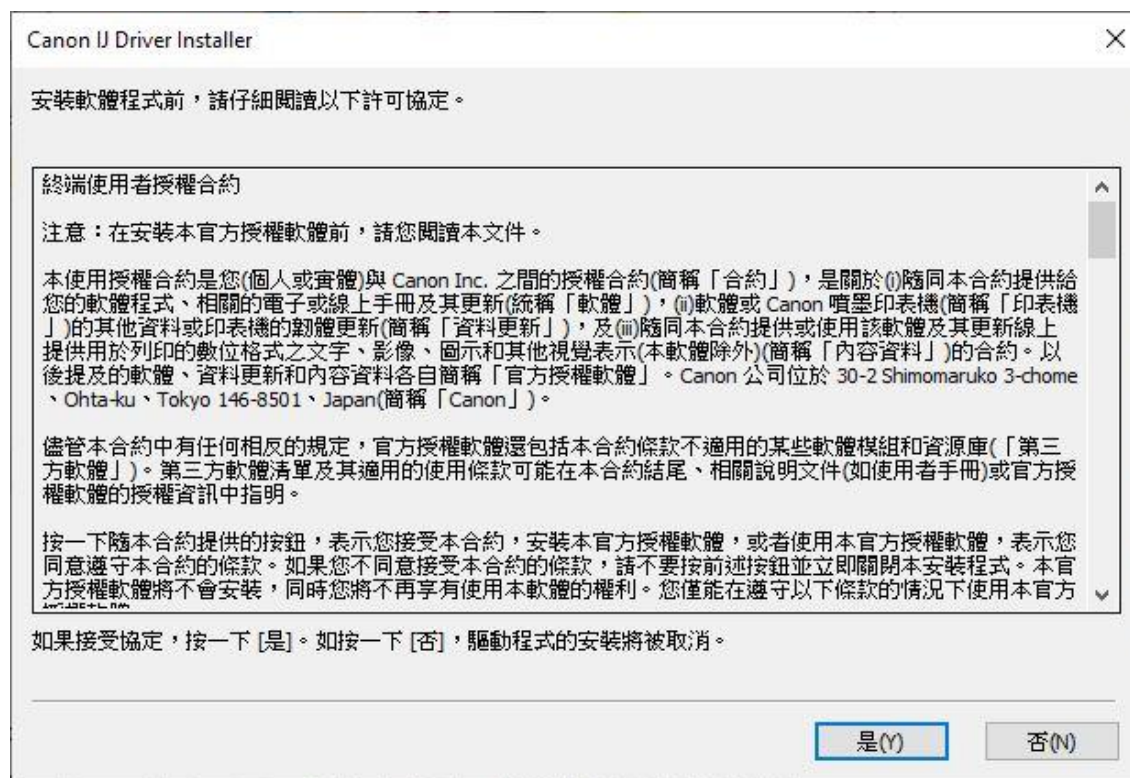


20. 選擇連接方法為 Wi-Fi 的打印機，按〔 下一步 〕

Select the printer with connection method as Wi-Fi, click [Next]

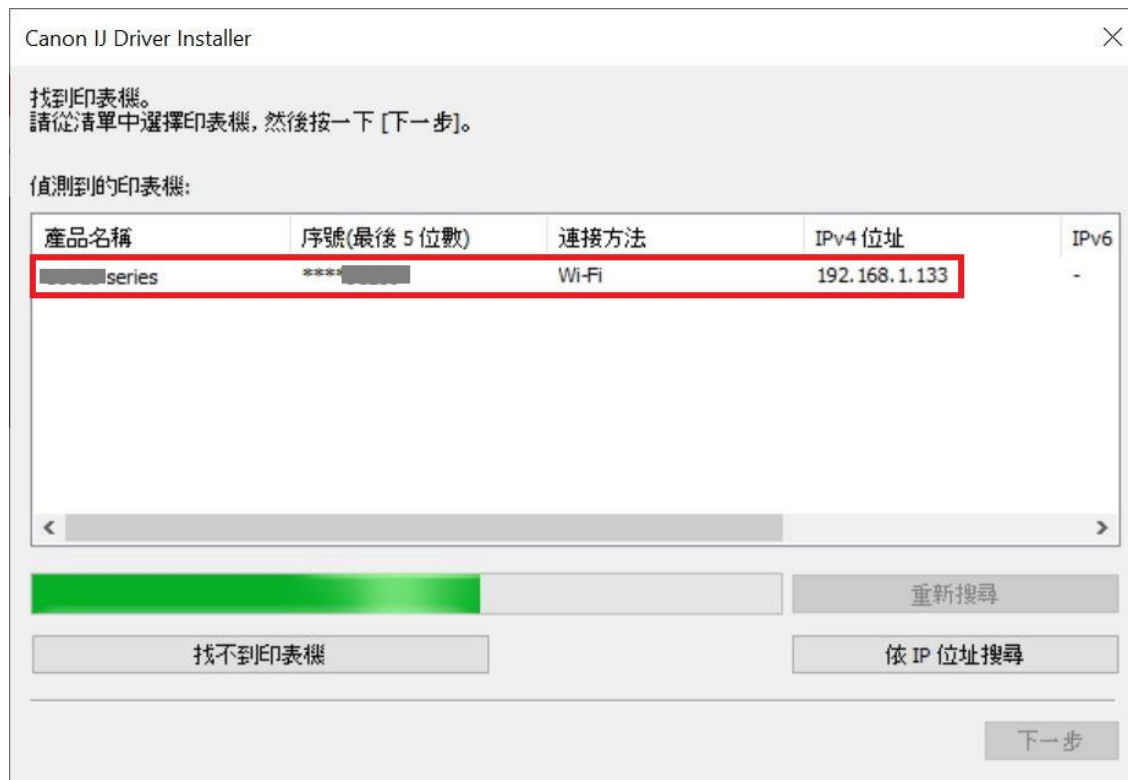

21. 正在安裝印表機驅動程式，請稍候


Installing the driver, please wait

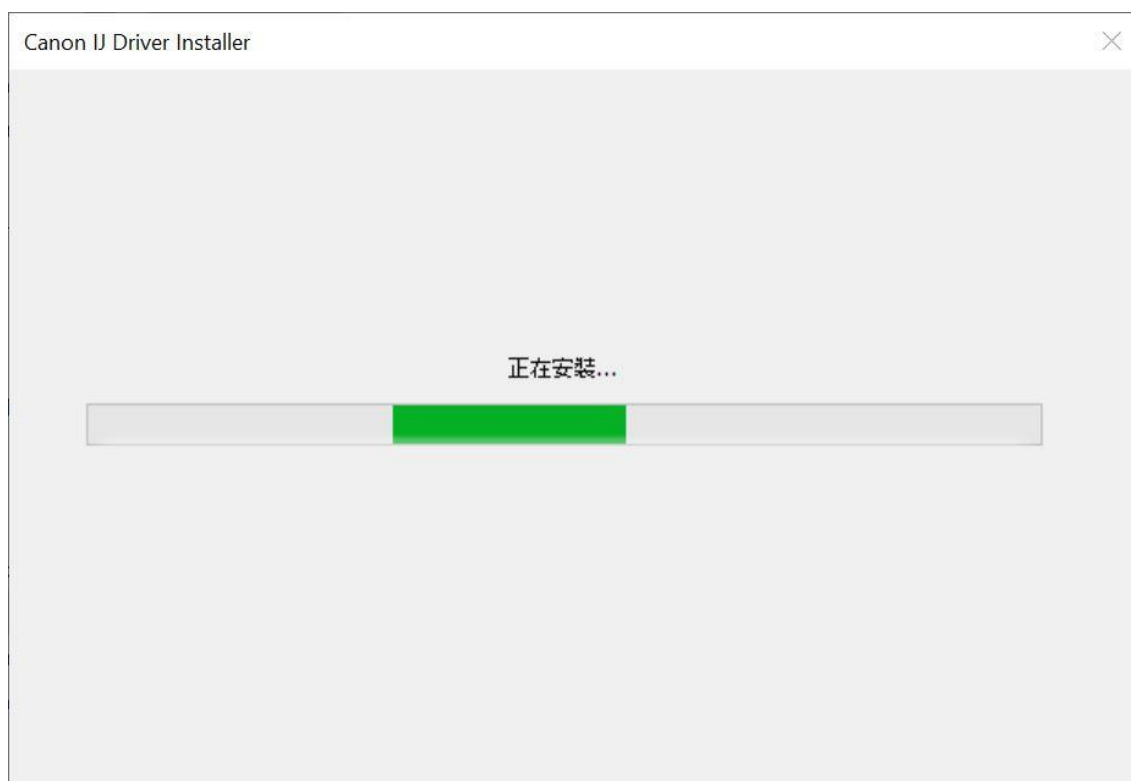



22. 安裝完成，按〔結束〕

Driver installation was completed; click [Finish]

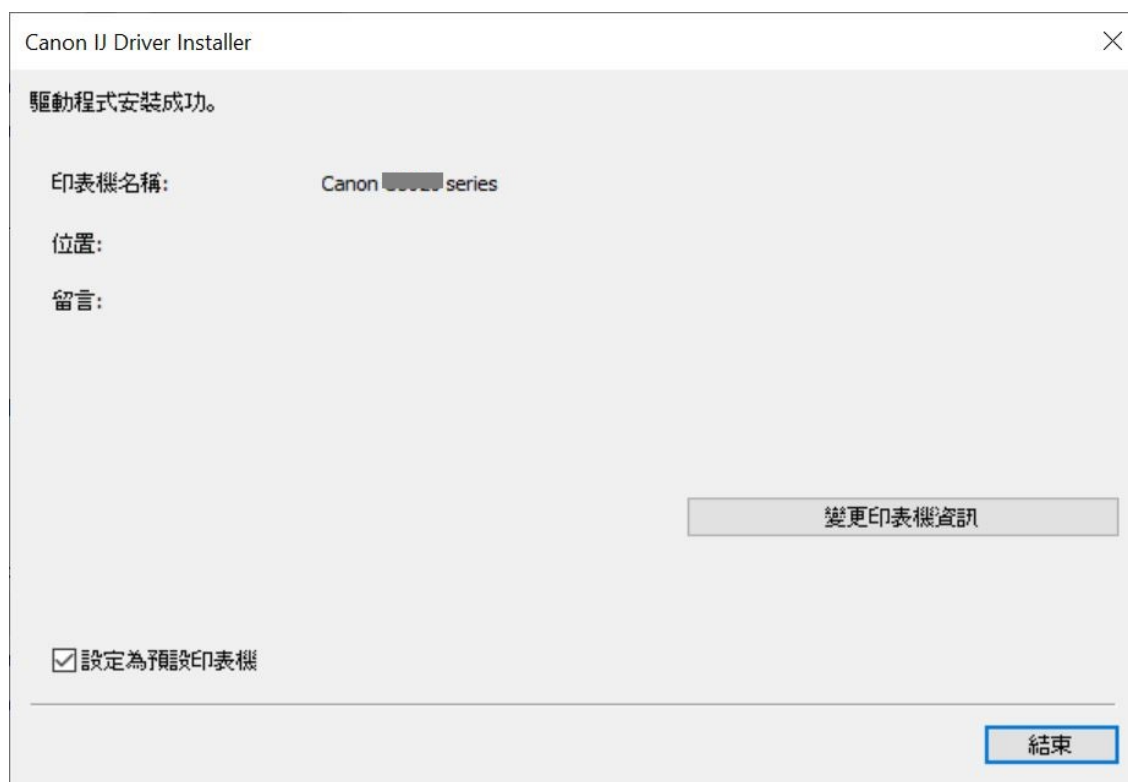

-完-

-End-