


在 Windows 以無線方式安裝及連接 MAXIFY GX2070 打印機
Installing MAXIFY GX2070 on Windows via WiFi connection

以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.

無線設定 Wireless Setup

1. 確保在開始無線連接設定之前，印表機已開啟。
如果電源開啟，請輕觸觸控式螢幕(A)以顯示以下螢幕(A)。
Make sure printer is turned on before starting wireless connection setup.
If the power is on, touch the touch screen (A) to display the screen (A).

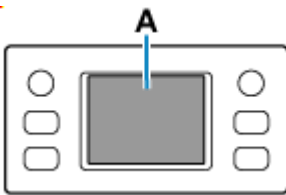


2. 如果未顯示以下螢幕，請選擇  (停止)，然後選擇  (主頁)。



If the following screen is not displayed, select  (Stop), and then select  (HOME).



3. 點選  。

根據印表機的網路連接狀態，  的外觀會有所不同。

Tap  .

The appearance of   varies depending on the printer's network connection status



4. 點選 **Wi-Fi**。

Tap **Wi-Fi**.




5. 點選 **Wi-Fi 設定**。

Tap **Wi-Fi setup**.




6. 點選**手動連接(Manual connect)**。

Tap **Manual connect**.

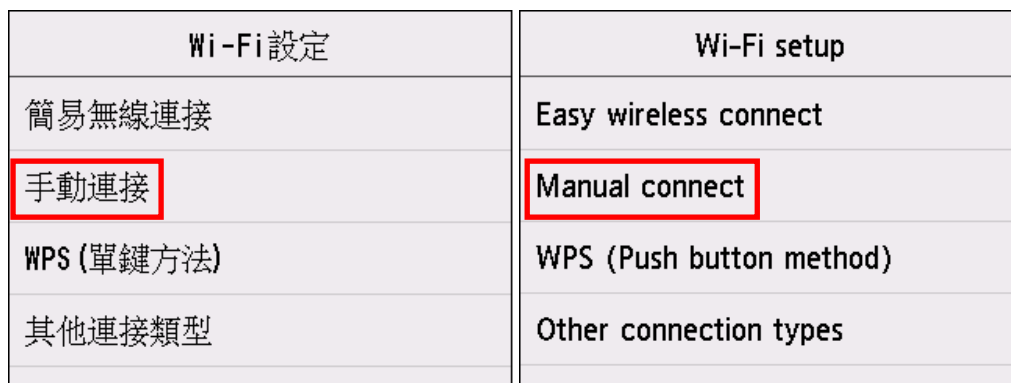

7. 點選所用無線路由器。

Tap your wireless router.

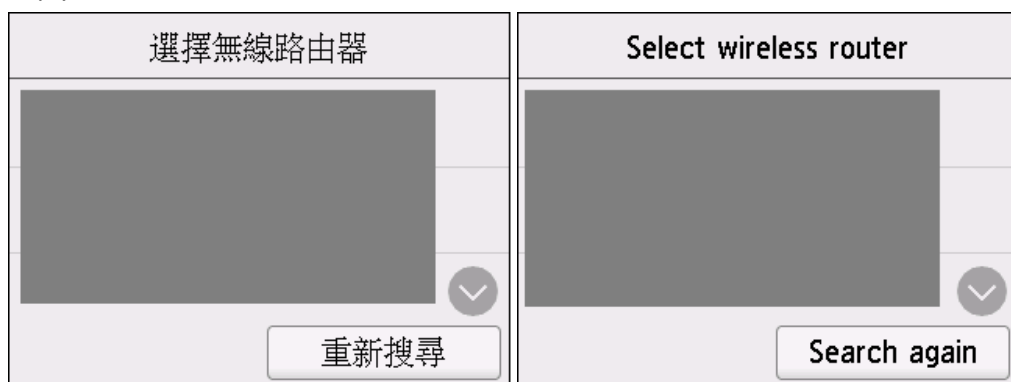


如果未找到您的路由器，請確定您的路由器設定符合以下打印機的規格：

If you do not find your router, please ensure your router setting meets the below printer requirement:

- a. 頻率 Frequency: 2.4GHZ
- b. 頻道 Channel: 1-11 (其中一條 either one)

8. 將顯示以下螢幕之一，點選輸入區域。

One of the screens below will appear, tap the input area.

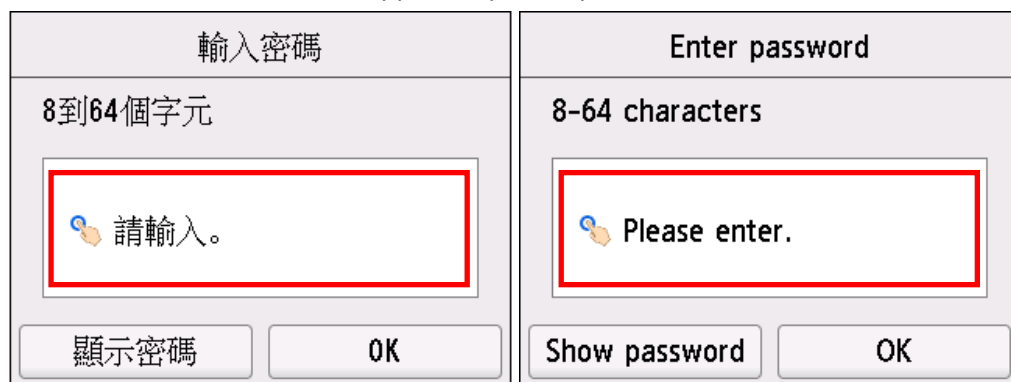

9. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[輸入數字、字母和符號](#)」。

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Entering Numbers, Letters, and Symbols](#)".




10. 點選 OK。

Tap OK.




11. 點選 OK。

Tap OK.

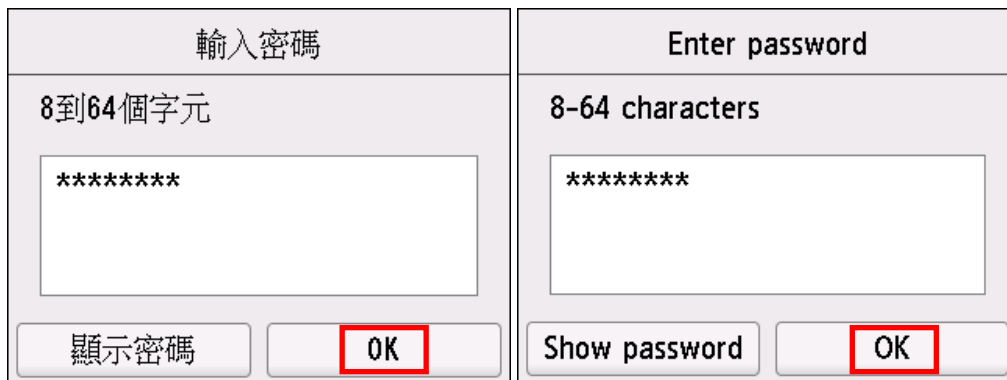

12. 顯示以下螢幕時，請點選 **OK**。

When the screen on the below appears, tap **OK**.

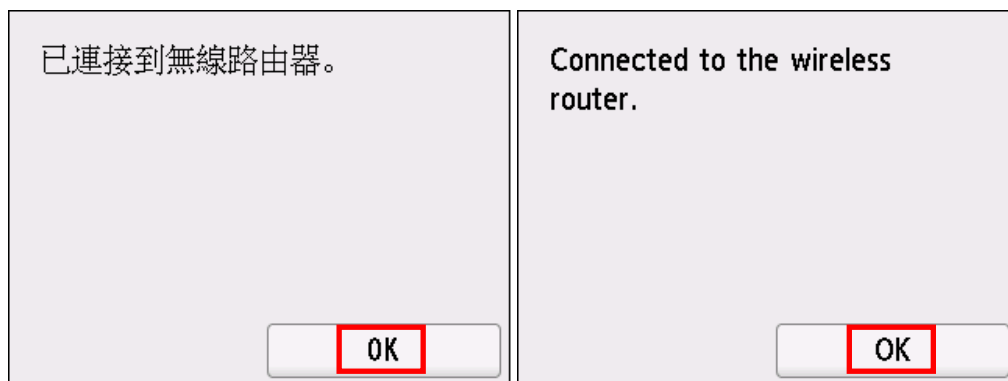

13. 按主頁(**HOME**)按鈕。

Press the **HOME** button.



連接完成後， 會出現在螢幕左下方。

Once connection is complete,  appears at the lower left of the screen.

網路連接設定完成。

The network connection setup is now complete.

下載及安裝步驟


Driver download and Installation procedure

14. 到以下佳能網站並下載印表機的驅動程式
Go to below Canon webpage and download the printer driver
<https://hk.canon/en/support/MAXIFY%20GX2070/model>
15. 選擇並下載以下檔案
Choose and download below files
[GX2070 series MP Drivers Ver.1.xx \(Windows\)](#)
16. 按上面網頁內的〔Download〕，下載完成後開啟該檔案安裝
Click [Download] in the webpage above, and then execute the file after download was completed
17. 按〔下一步〕
Click [Next]



18. 選擇〔亞洲〕，按〔下一步〕

Select [Asia]; click [Next]

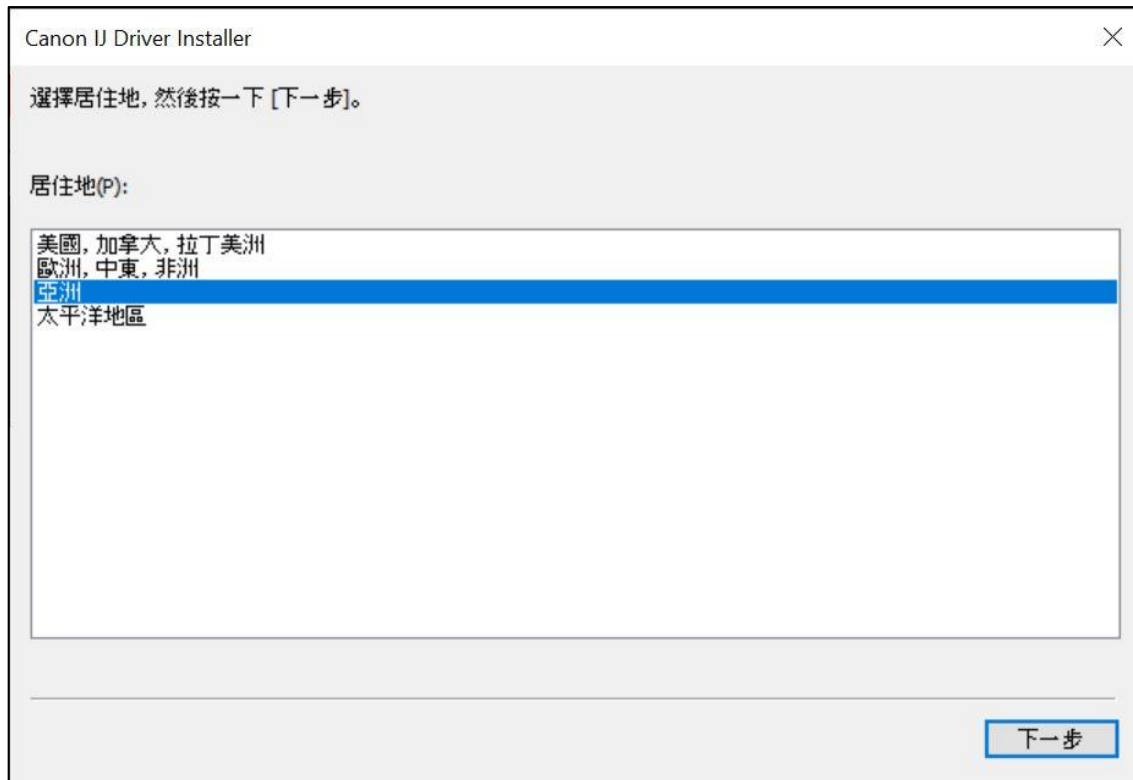


19. 按〔是〕

Click [Yes]




20. 選擇連接方法為 Wi-Fi 的打印機，按〔 下一步〕

Select the printer with connection method as Wi-Fi, click [Next]

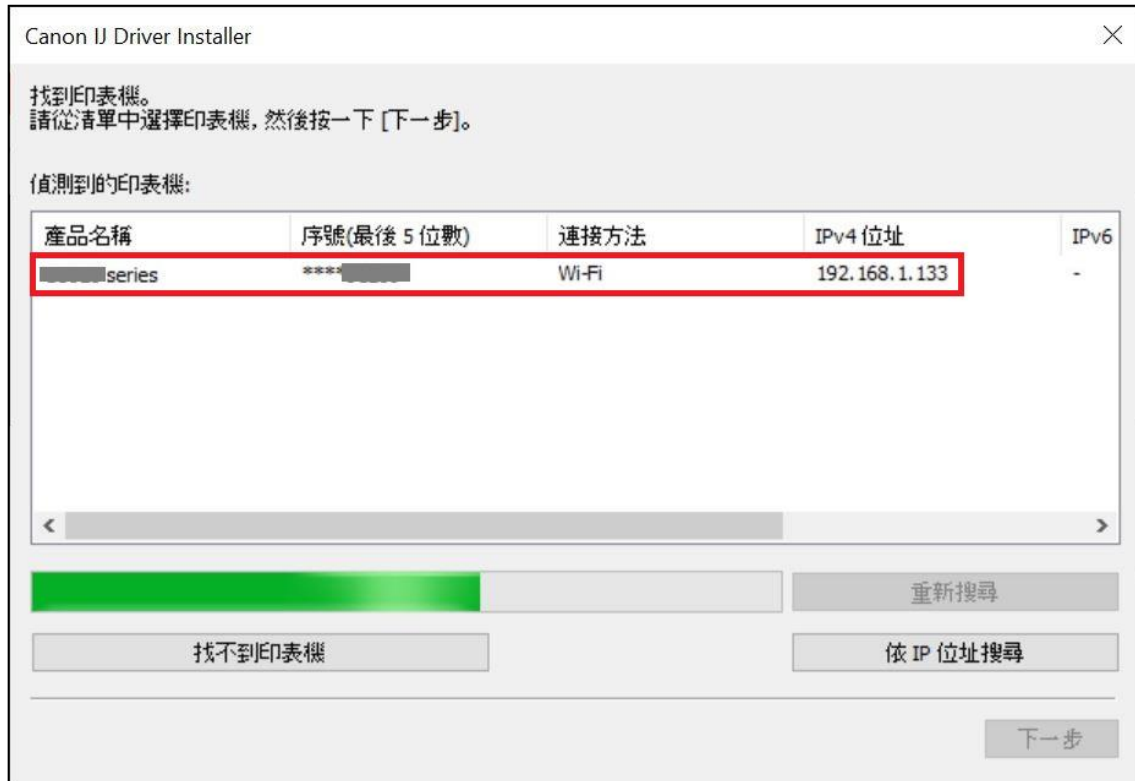


21. 正在安裝印表機驅動程式，請稍候

Installing the driver, please wait

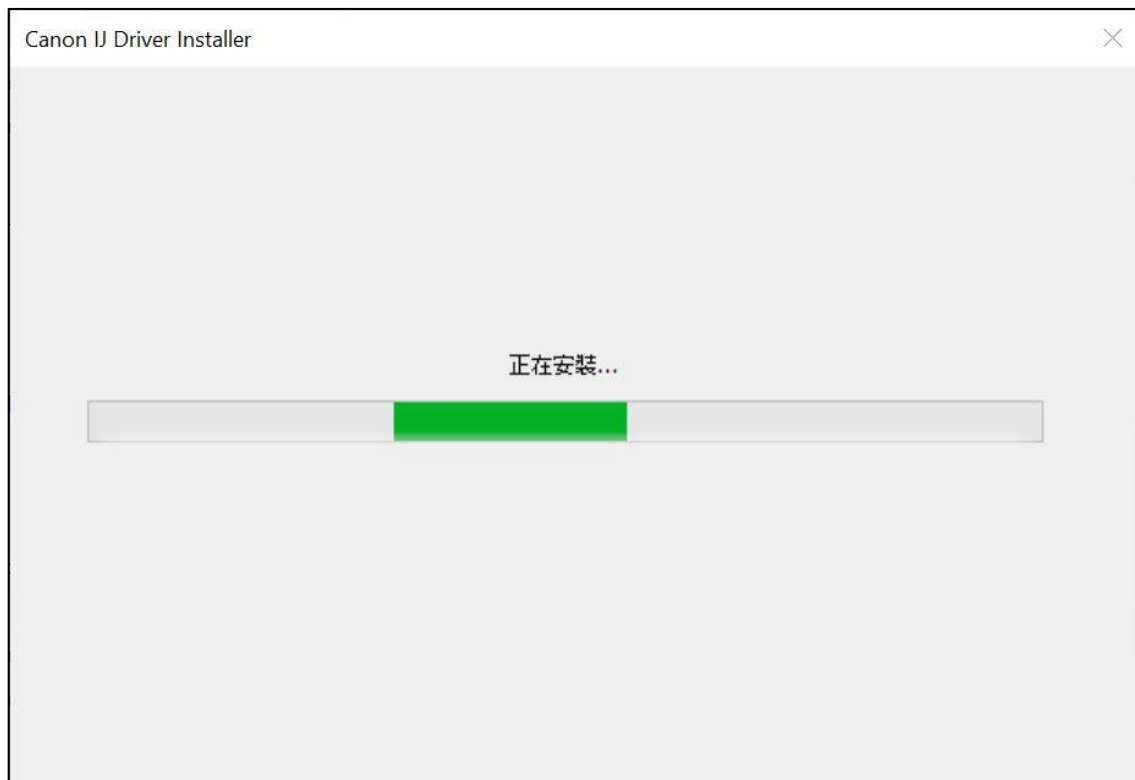

22. 安裝完成，按〔結束〕

Driver installation was completed; click [Finish]

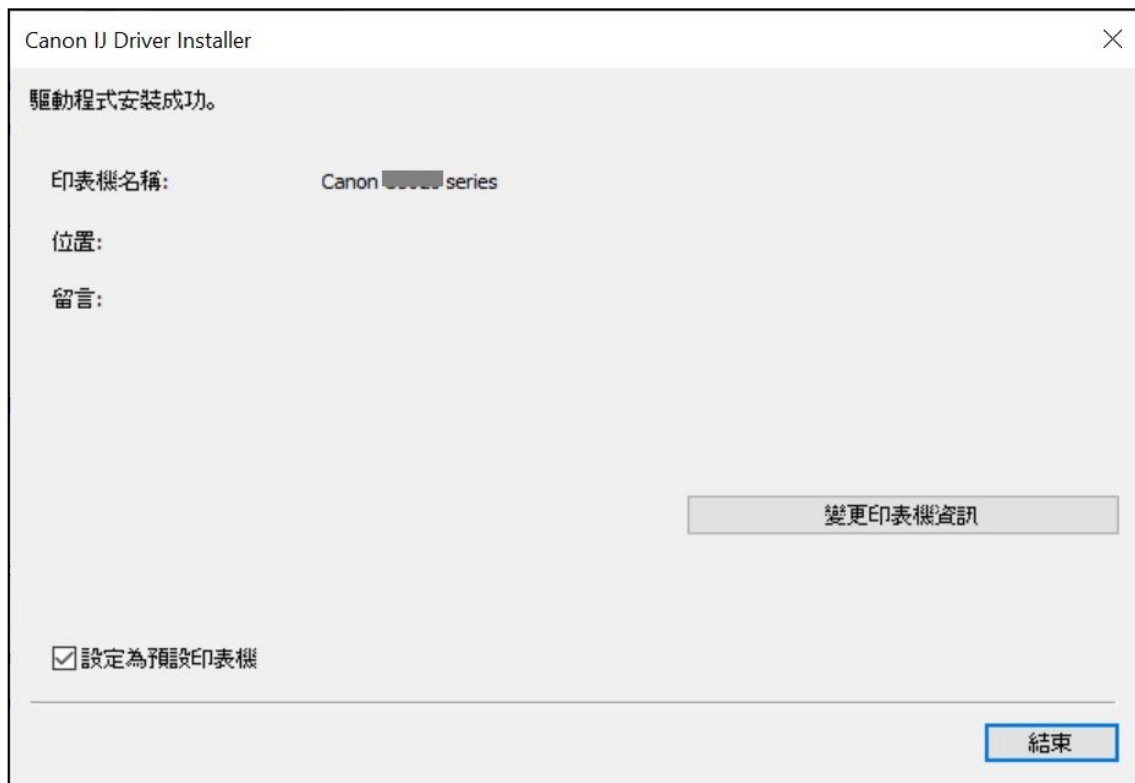

-完-

-End-