


在G4770傳真功能表中設定接收模式

Set the Receive Mode in the G4770 Fax Menu

1. 確保印表機已開啟
Make sure the printer power is ON
2. 在主螢幕按下箭咀 ▼ 2 次到"傳真", 然後按 OK 按鈕
Press down arrow ▼ 2 times from main menu to "Fax" and then press OK button

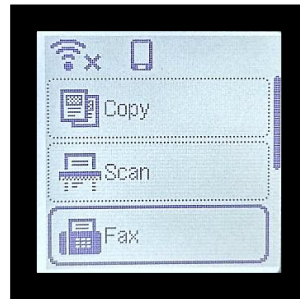


3. 選擇功能表, 然後按 OK 按鈕
Choose menu and then press OK button



4. 按下箭咀 ▼ 5 次到 “接收模式設定”, 然後按 OK 按鈕

Press down arrow ▼ 5 times to “Receive mode setting” and press OK button

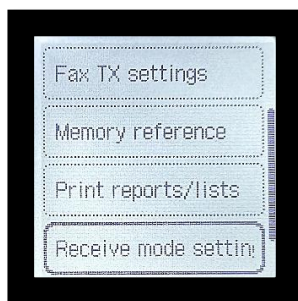




接收模式設定 / Receive mode set :

- [僅傳真模式 / Fax only mode](#)
- [電話優先模式 / TEL priority mode](#)
- [雙音辨號模式 / Duplex ringing mode](#)

[僅傳真模式 / Fax only mode](#)

 
5. 如要選擇 “僅傳真模式”, 使用  按鈕選擇 “僅傳真模式”, 然後按 OK 按鈕

For choosing “Fax only mode”, use the  button to select “Fax only mode”, and press the OK button

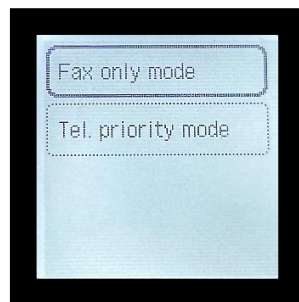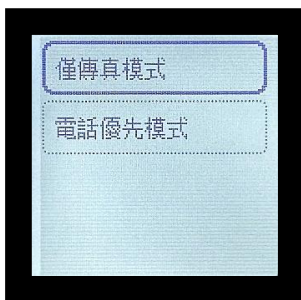

- 5.1. 如要進行進階設定, 請選擇 <是>

For choosing advance settings, select <Yes>

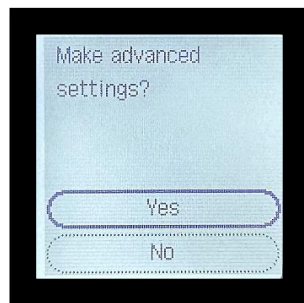

5.2. 於“僅傳真模式”之下,看到“來電響鈴”再按 OK 按鈕

Under “Fax only mode”, click the OK button for setting up “Incoming ring”




5.3. 於“響鈴次數”,可以選擇 2-30 次數,然後按 OK 按鈕完成設定


Under “Ring count”, 2 to 30 times ring count can be set, press the OK button to finish settings





電話優先模式 / TEL priority mode

6. 如要選擇“電話優先模式”，重複第 4 點之步驟，於“接收模式設定”之下，



使用  按鈕選擇“電話優先模式”，然後按 OK 按鈕

For choosing “TEL priority mode”, proceed step 4 and use the  button to select “TEL priority mode”, and press the OK button

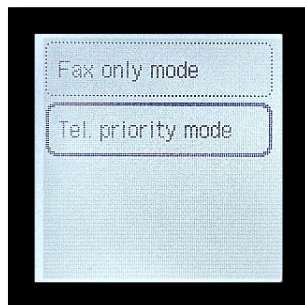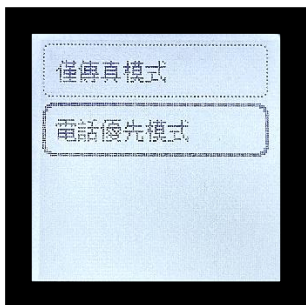


6.1. 於“進階設定”，選擇 <是>

Select <Yes> under “Make advanced Settings”

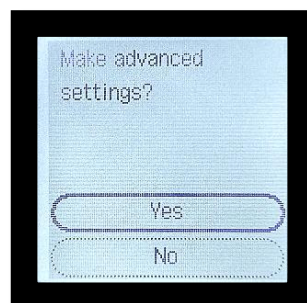
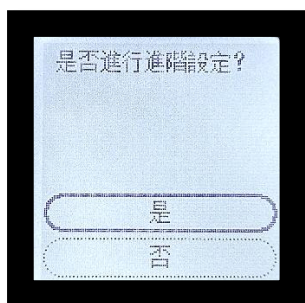


6.2. 於“電話優先模式”之下，選擇“手動/自動切換”，按 OK 按鈕


Under “TEL priority mode”, select “Manual/auto switch”, press “OK” button

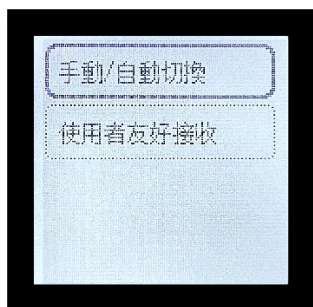


- 6.3. 於“手動/自動切換”, 選擇“開”, 按 OK 按鈕
Under “Manual/auto switch”, select “ON” and press the OK button

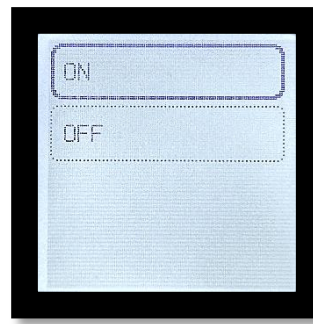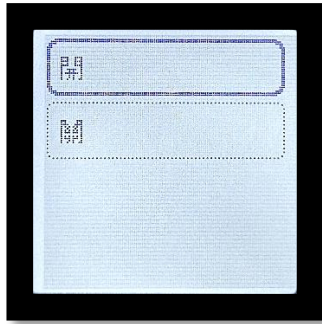


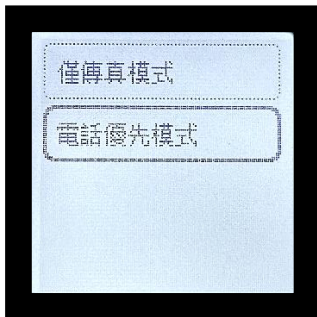
- 6.4. 於“接收開始時間”, 可以選擇 10-60 秒, 然後按 OK 按鈕完成設定
Under “Rx start time”, 10 to 60 second(s) can be set, press the OK button to finish settings

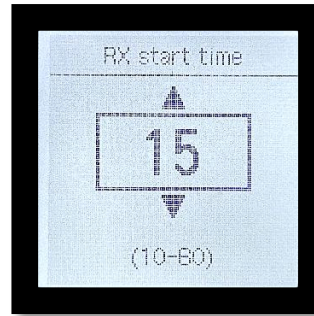



雙音辨號模式 / Duplex ringing mode

7. 如要選擇“雙音辨號模式”, 重複第 4 點之步驟, 於“接收模式 設定”之下, 使用  按鈕選擇“電話優先模式”, 然後按 OK 按鈕

For choosing Duplex ringing mode, proceed step 4 and use the  button to select “TEL priority mode”, and press the OK button



- 7.1. 於“進階設定”，選擇<是>
Select <Yes> under “Make advanced Settings”

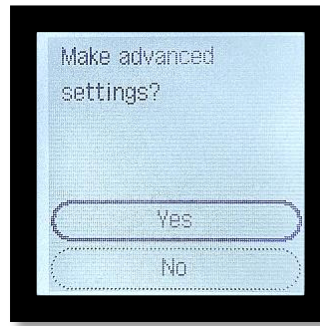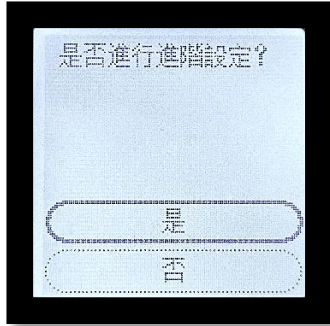

- 7.2. 於“手動/自動切換”，選擇“關”，按 OK 按鈕
Under “Manual/auto switch”, select “OFF” and press the OK button to finish settings



註：傳真線必須安裝於 LINE 的插頭中

Notes: Fax cable must be plugged into LINE socket

