


在 G4770 設定功能表中設定語言選擇  
Set the Language Selection in the G4770 Device Settings

1. 確保印表機已開啟

Make sure the printer is ON

2. 在主螢幕按下箭咀 ▼ 4 次到"設定", 然後按 OK 按鈕

Press down arrow ▼ 4 times from main menu to "Settings" and then press OK button

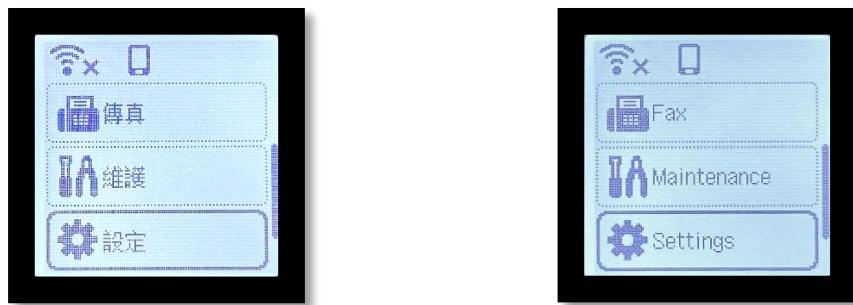

3. 再按下箭咀 ▼ 1 次到"裝置設定", 然後按 OK 按鈕 . 再次按下箭咀▼ 6 次到 "語言選擇". 然後按 OK 按鈕

Press down arrow ▼ 1 time to "Device setting" and press OK . Press down arrow ▼ 6 times again to "Language setting"



4. 於"語言選擇"之下, 使用上下箭咀  按鈕, 按到理想的語言, (例如 :

English, 繁體中文, 簡體中文, 確認後再按 OK 按鈕, 完成設定)

Under "Language Selection", use  button to select desire language display, (For example: English, Traditional Chinese, and then press the OK button to finish settings.)

