

## 在 Windows 以無線方式安裝及連接 PIXMA G3780 打印機


### Installing PIXMA G3780 on Windows via WiFi connection

以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.

#### 無線設定 Wireless Setup


1. 確保在開始無線連接設定之前，印表機已開啟。  
如果電源開啟，電源(ON)指示燈(A)將亮起。  
Make sure printer is turned on before starting wireless connection setup.  
If the power is on, the ON lamp (A) will be lit.

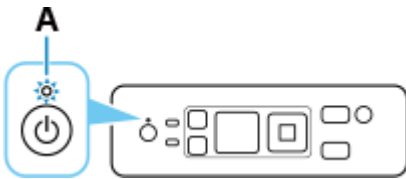


2. 按  (主頁)。  
將顯示主頁螢幕。



HOME screen is displayed.

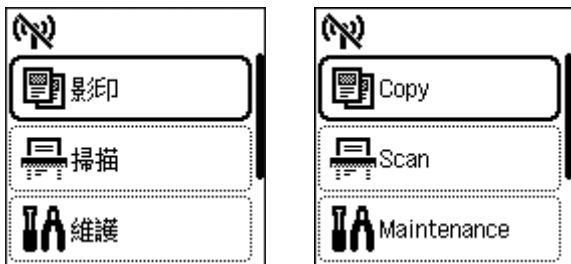

3. 使用印表機的▲▼按鈕選擇設定(Settings)，然後按 OK 按鈕。  
Select Settings with printer's ▲▼ buttons and press OK button.

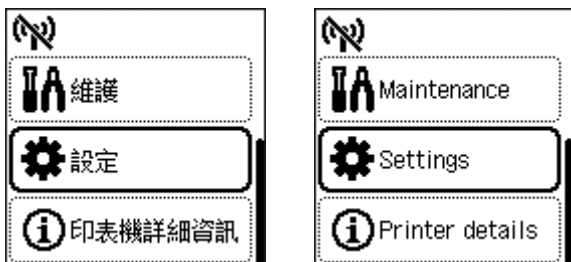


4. 選擇 **LAN 設定** 並按 **OK** 按鈕。

Select **LAN settings** and press the **OK** button.




5. 選擇 **Wi-Fi** 並按 **OK** 按鈕。

Select **Wi-Fi** and press the **OK** button.

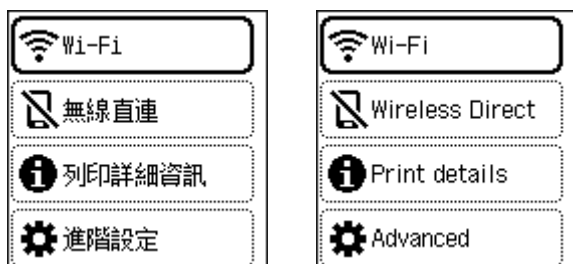


6. 選擇 **Wi-Fi 設定** 並按 **OK** 按鈕。

Select **Wi-Fi setup** and press the **OK** button.

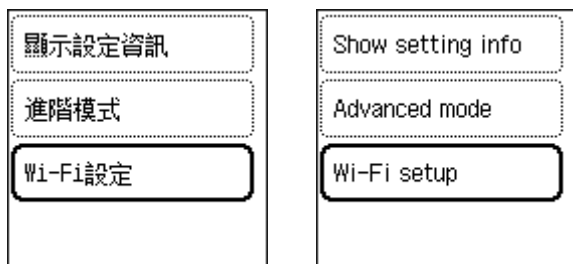


7. 選擇 **手動連接** 並按 **OK** 按鈕。

Select **Manual connect** and press the **OK** button.

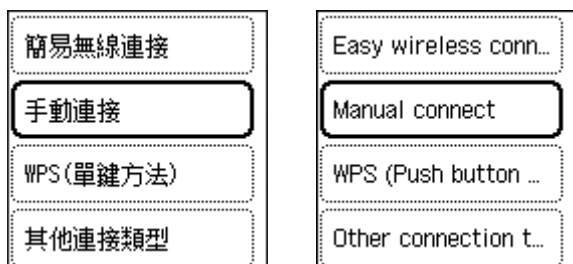

8. 選擇無線路由器並按 **OK** 按鈕。

Select your wireless router and press the **OK** button.

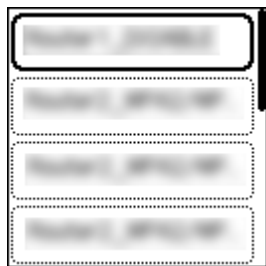

如果未找到您的路由器，請確定您的路由器設定符合以下打印機的規格：

If you do not find your router, please ensure your router setting meets the below printer requirement:


- a. 頻率 Frequency: 2.4GHz
- b. 頻道 Channel: 1-11 (其中一條 either one)

9. 如果顯示以下螢幕，請按 **OK** 按鈕。

如果未顯示以下螢幕，請繼續執行下一步。

If the following screen is displayed, press the **OK** button.

If the following screen is not displayed, proceed to the next step.

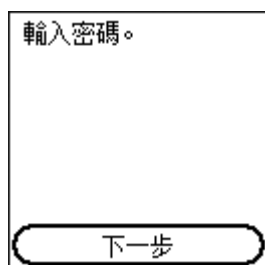

10. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[輸入數字、字母和符號](#)」(在新視窗中顯示)。

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Entering Numbers, Letters, and Symbols](#)" (appears in a new window).



11. 完成輸入。

選擇鍵盤上的 **OK**，然後按 **OK** 按鈕完成輸入。

Complete entry.

Select **OK** on the keyboard, and then press the **OK** button to complete the entry.


12. 顯示以下螢幕時，請按 **OK** 按鈕。

When the following screen appears, press the **OK** button.



13. 按  (主頁)。

Press  (HOME).

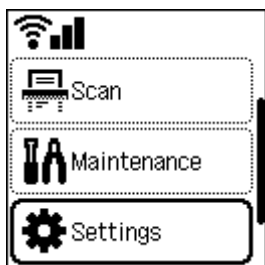

網路連接設定完成。

The network connection setup is now complete.

連接完成後， 會出現在螢幕左上方。


Once connection is complete,  appears at the upper left of the screen.

## 下載及安裝步驟

### Driver download and Installation procedure

14. 到以下佳能網站並下載印表機的驅動程式  
Go to below Canon webpage and download the printer driver  
<https://hk.canon/en/support/PIXMA%20G3780/model>


15. 選擇並下載以下檔案  
Choose and download below file

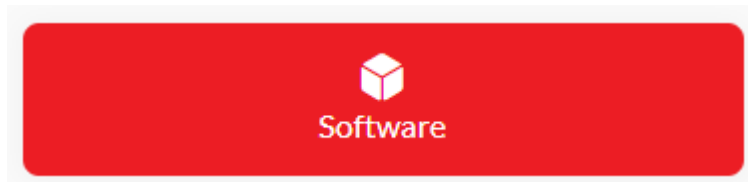


#### Master Setup (Windows)

<https://hk.canon/en/support/0101116303>


16. 按網頁內的 [ Download ]，下載完成後開啟該檔案安裝  
Click [Download] in the webpage, and then execute the file after download was completed

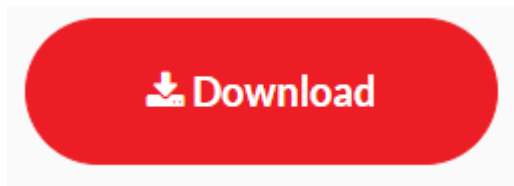

17. 選擇語言，然後按 [ OK ]  
Choose the language, then click [OK]

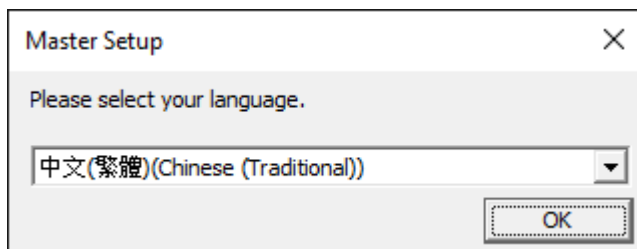

18. 選擇亞洲，然後按〔確定〕  
Choose Asia, then click [OK]

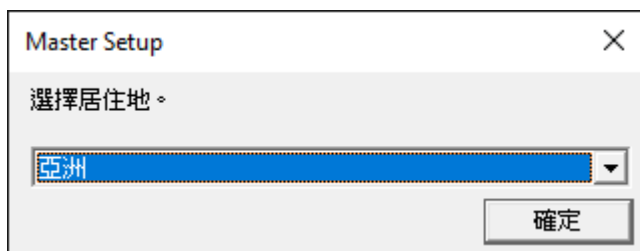

19. 按〔開始設定〕  
Click [Start Setup]



20. 請等候

Please wait



21. 按〔是〕

Click [Yes]



22. 閱後按〔同意〕或〔不同意〕

Click [Agree] or [Do not agree] after reading



23. 請等候

Please wait





24. 確認印表機電源已開啟，再按〔下一步〕

Confirm power on the printer, then click [Next]



25. 請等候

Please wait



26. 選擇印表機，再按〔下一步〕，如未能偵測印表機，請檢查網路連線

Choose the printer, then click [Next], if printer cannot be found, please check the network connection




27. 成功偵查印表機後請等候安裝

Please wait for install after detect the printer



28. 按〔下一步〕

Click [Next]

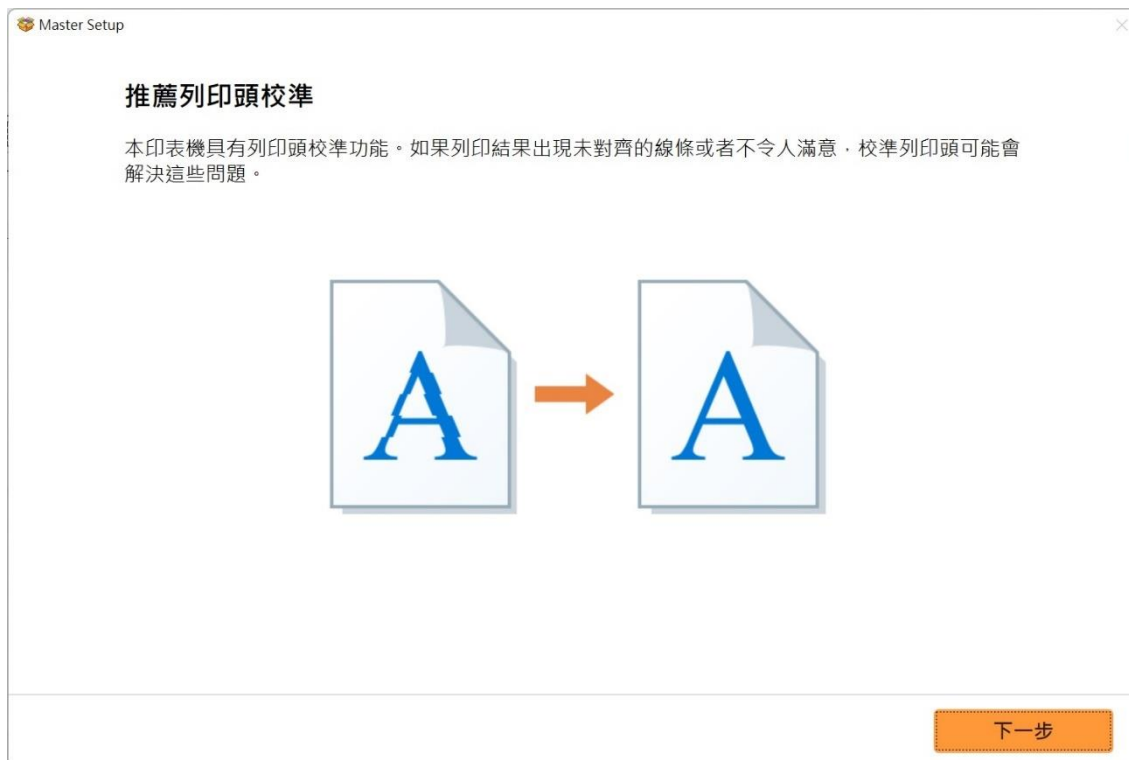


29. 請等候安裝

Please wait for install



30. 按 [ 下一步 ]

Click [Next]

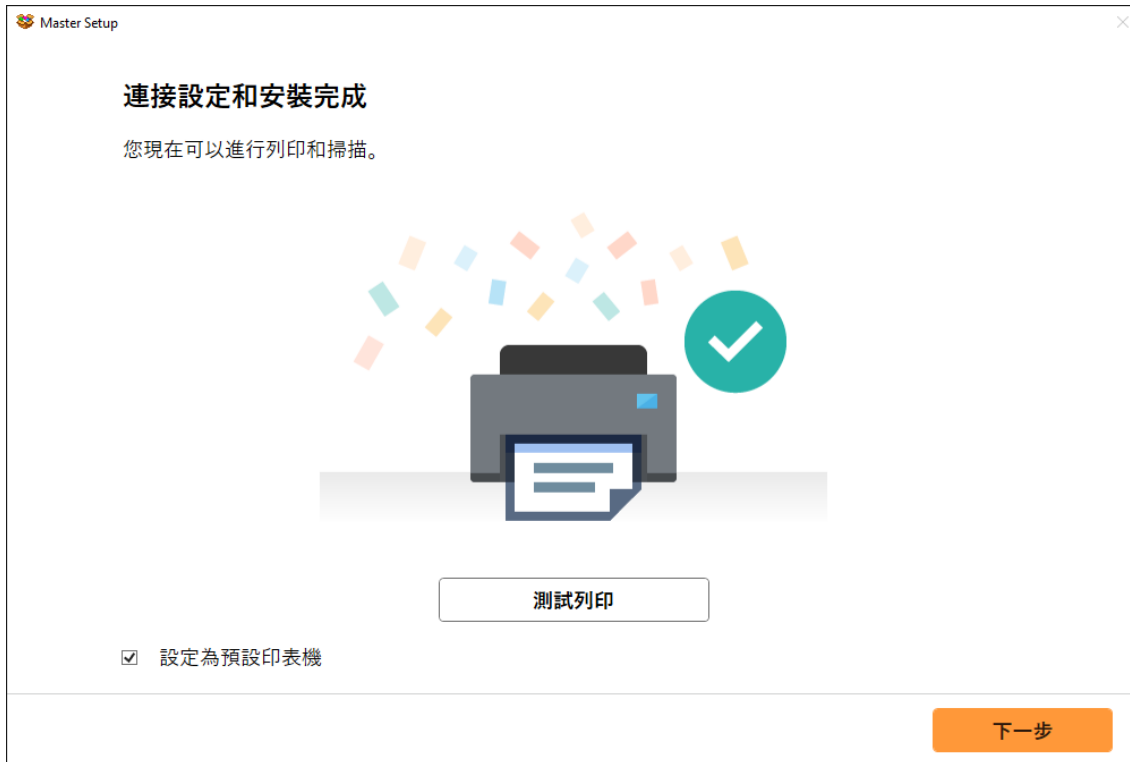

31. 安裝完成

Driver installation was completed



-完-  
-End-