

在 Windows 以無線網路方式安裝及連接 PIXMA PRO-200S 打印機

Installing PIXMA PRO-200S on Windows via WiFi connection

以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.


無線設定 Wireless Setup

1. 確保在開始無線連接設定之前，印表機已開啟。

如果電源開啟，電源指示燈將亮起。

Make sure printer is turned on before starting wireless connection setup.

If the power is on, the **ON** lamp will be lit.

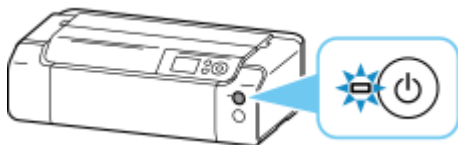


2. 按主頁按鈕。

Press the **HOME** button.




3. 使用上或下 (▼▲) 按鈕選擇 LAN 設定，然後按 OK 按鈕。

Use the up or down (▼▲) button to select **LAN settings** and press the **OK** button.

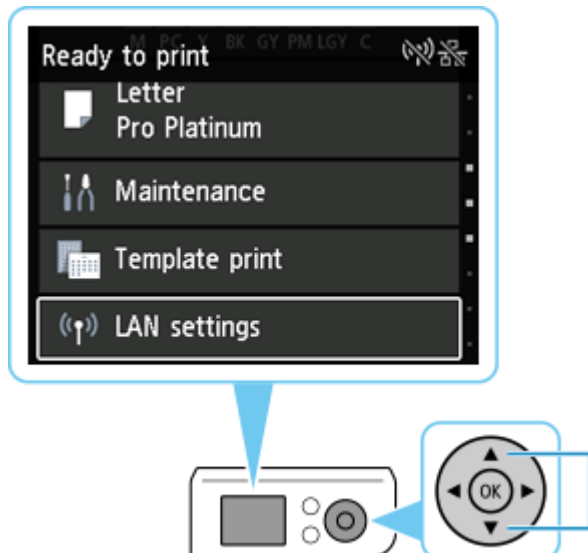

4. 選擇 **Wi-Fi** 並按 **OK** 按鈕。

Select **Wi-Fi** and press the **OK** button.

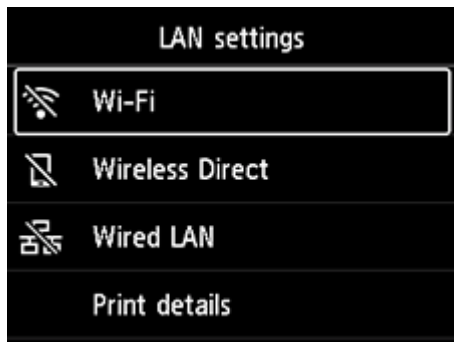


5. 選擇**設定**並按 **OK** 按鈕。

Select **Settings** and press the **OK** button.




6. 選擇 **Wi-Fi 設定**並按 **OK** 按鈕。

Select **Wi-Fi setup** and press the **OK** button.

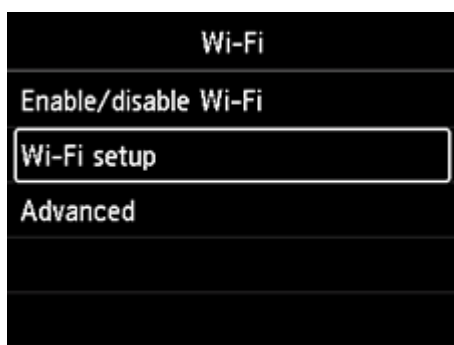

7. 選擇**手動連接**並按 **OK** 按鈕。

Select **Manual connect** and press the **OK** button.

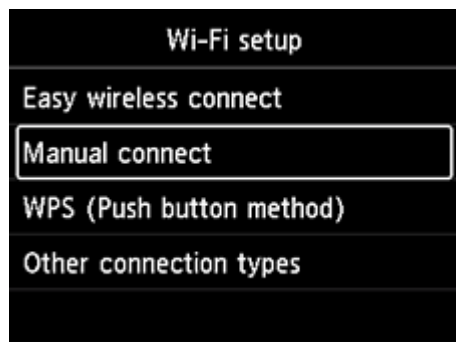

8. 選擇無線路由器並按 **OK** 按鈕。

Select your wireless router and press the **OK** button.



如果顯示其他螢幕或未找到無線路由器，請參見「[疑難排解](#)」。

If a different screen appears or no wireless router is found, see "[Troubleshooting](#)."

如果未找到您的路由器，請確定您的路由器設定符合以下打印機的規格：

If you do not find your router, please ensure your router setting meets the below printer requirement:

a. 頻率 Frequency: 2.4GHZ

9. 按 **OK** 按鈕。

Press the **OK** button.



10. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[文字輸入](#)」。

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Text Entry](#)"



11. 輸入後，在鍵盤上選擇 **OK**，然後按 **OK** 按鈕。

After entry, select **OK** on the keyboard, and then press the **OK** button.



12. 按 **OK** 按鈕。

Press the **OK** button.




13. 顯示下方的螢幕時，請按 **OK** 按鈕。

When the screen on the below appears, press the **OK** button.



14. 按主頁按鈕。

Press the **HOME** button (A).

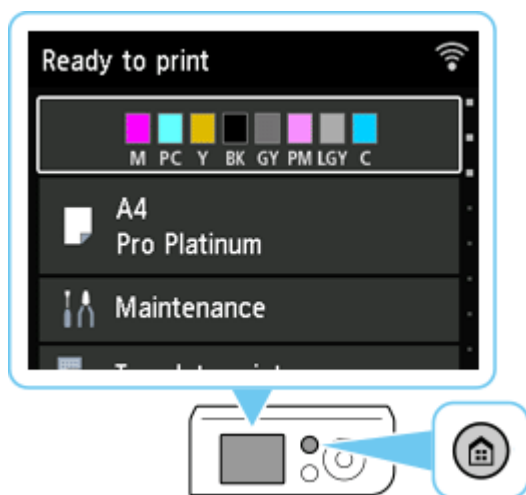

網路連接設定完成。

連接完成後，無線訊號標誌  顯示在螢幕的右上方。

The network connection setup is now complete.

Once the connection is complete, wireless signal icon  appears at the upper right of the screen.

15. 點擊以下連結下載有關之驅動程式：

Click the link below to download printer driver:

<https://hk.canon/en/support/pixma%20pro-200s/model>


16. 選擇並下載以下檔案

Choose and download the file below

PRO-200S Printer Driver Ver.x.xx (Windows)


17. 按網頁內的〔Download〕按鈕，下載完成後開啟該檔案安裝

Click [Download] button in the webpage, and then execute the file after download was completed

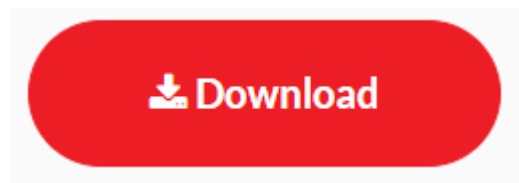


18. 打開安裝程式後按〔下一步〕


Click [Next] after open the installation program

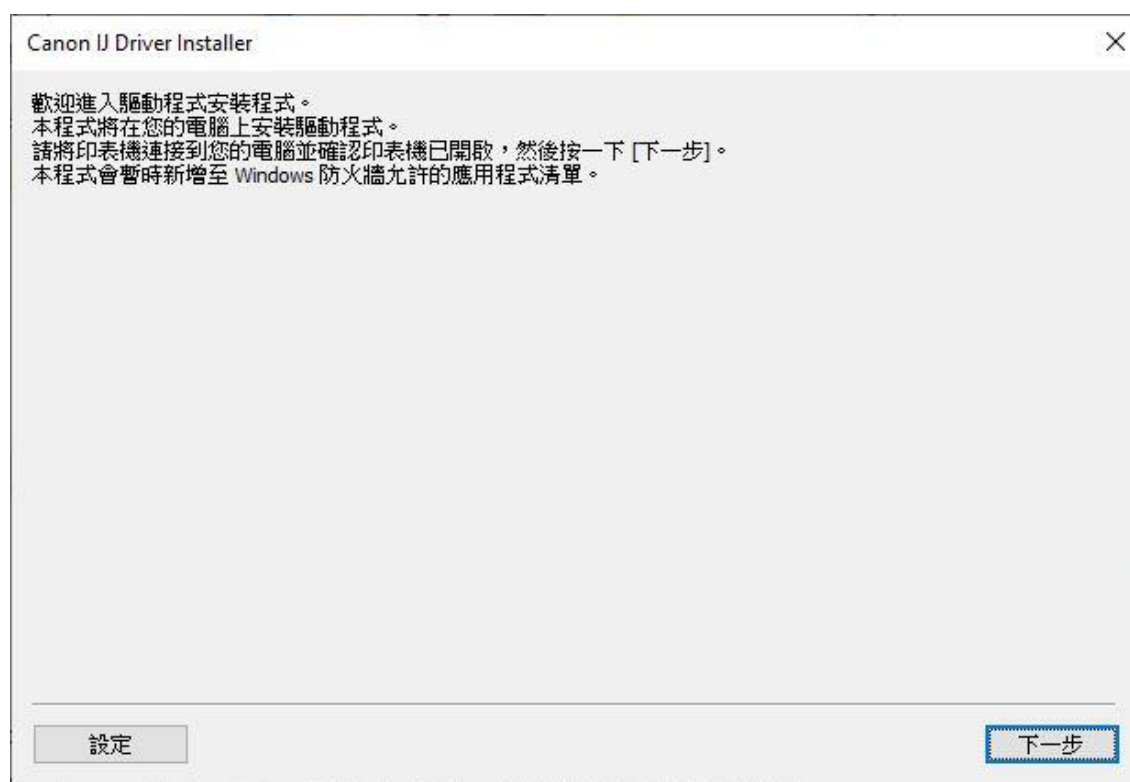


19. 在居住地選擇〔亞洲〕，然後按〔下一步〕
Select [Asia] for place of residence, then click [Next]

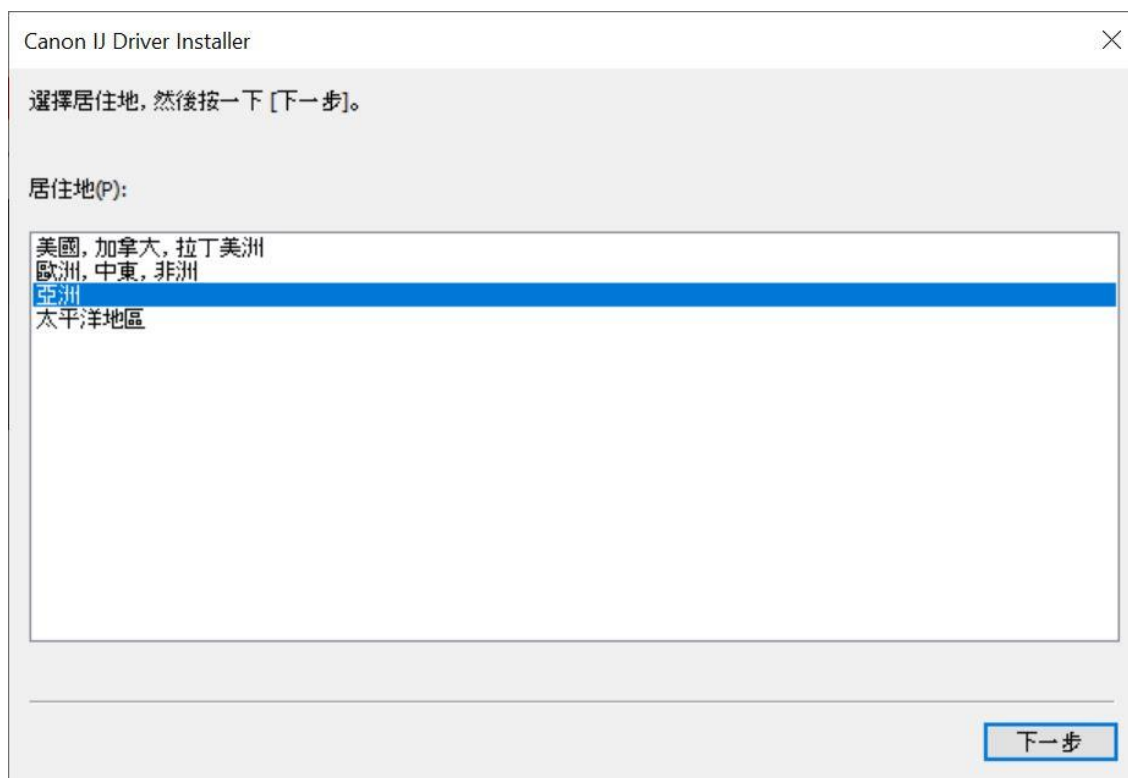


20. 按〔是〕同意許可協定
Click [Yes] to accept the license agreement

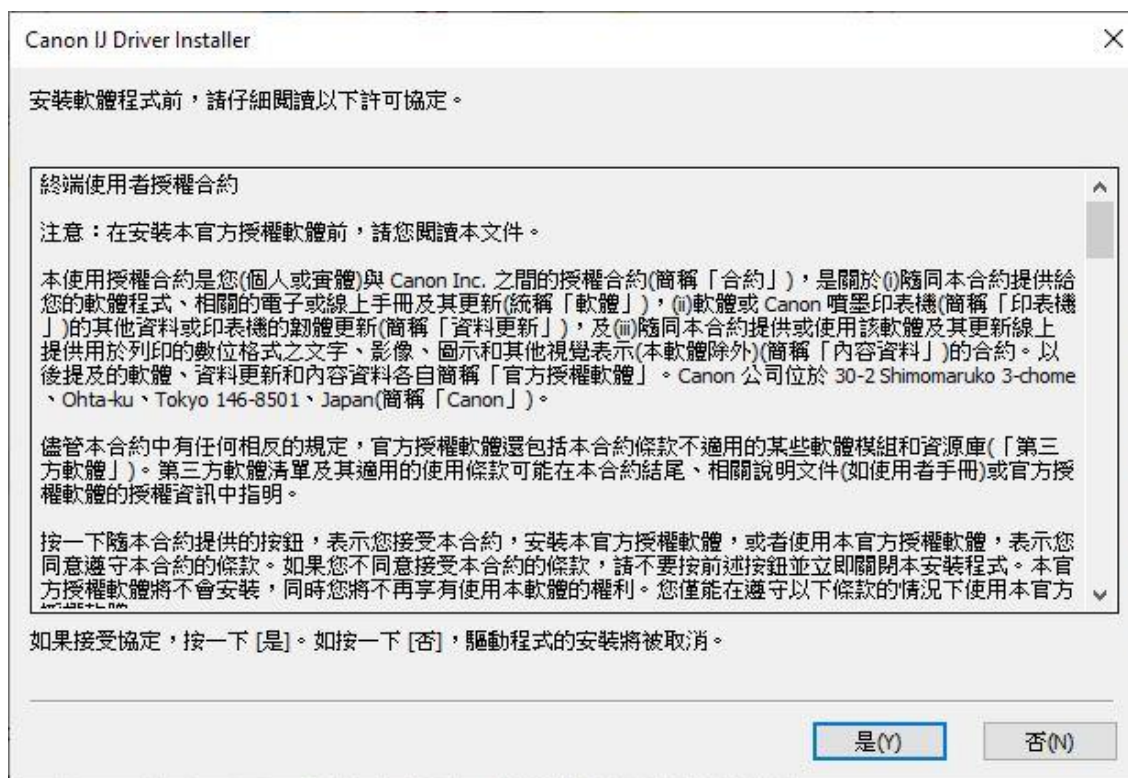

21. 選擇連接方法為 Wi-Fi 的打印機，按〔 下一步〕
Select the printer with connection method as Wi-Fi, click [Next]

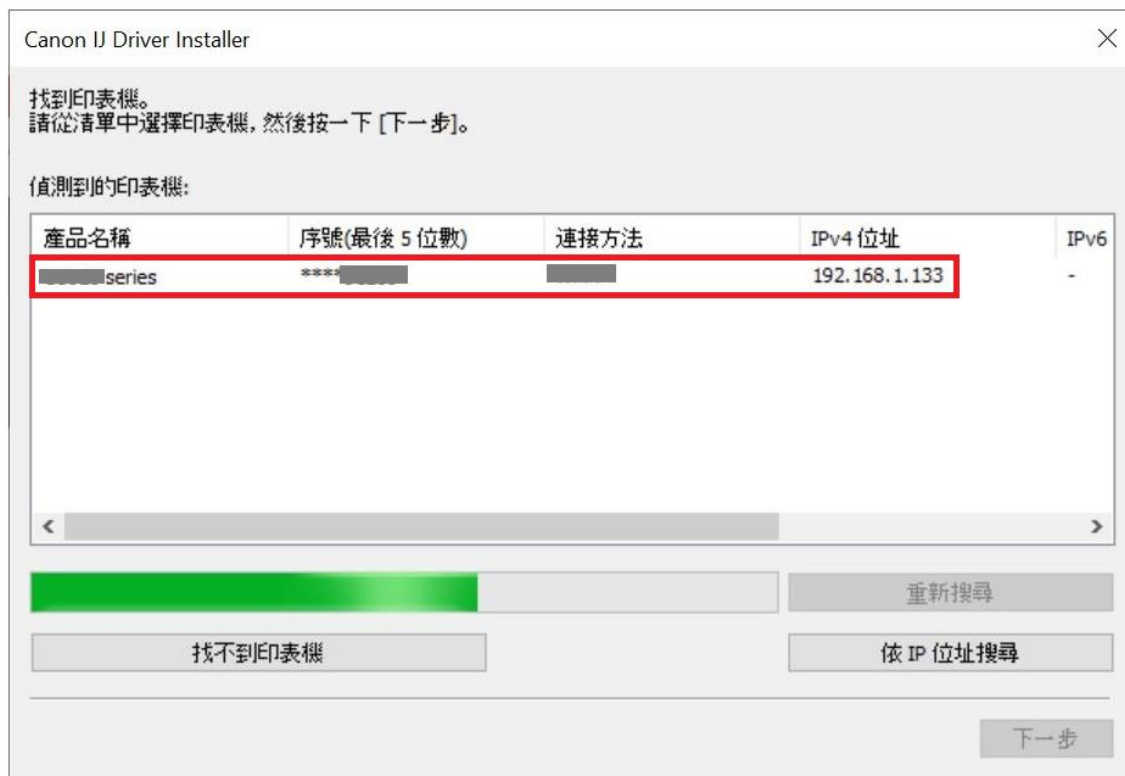


22. 正在安裝印表機驅動程式，請稍候
Installing the driver, please wait

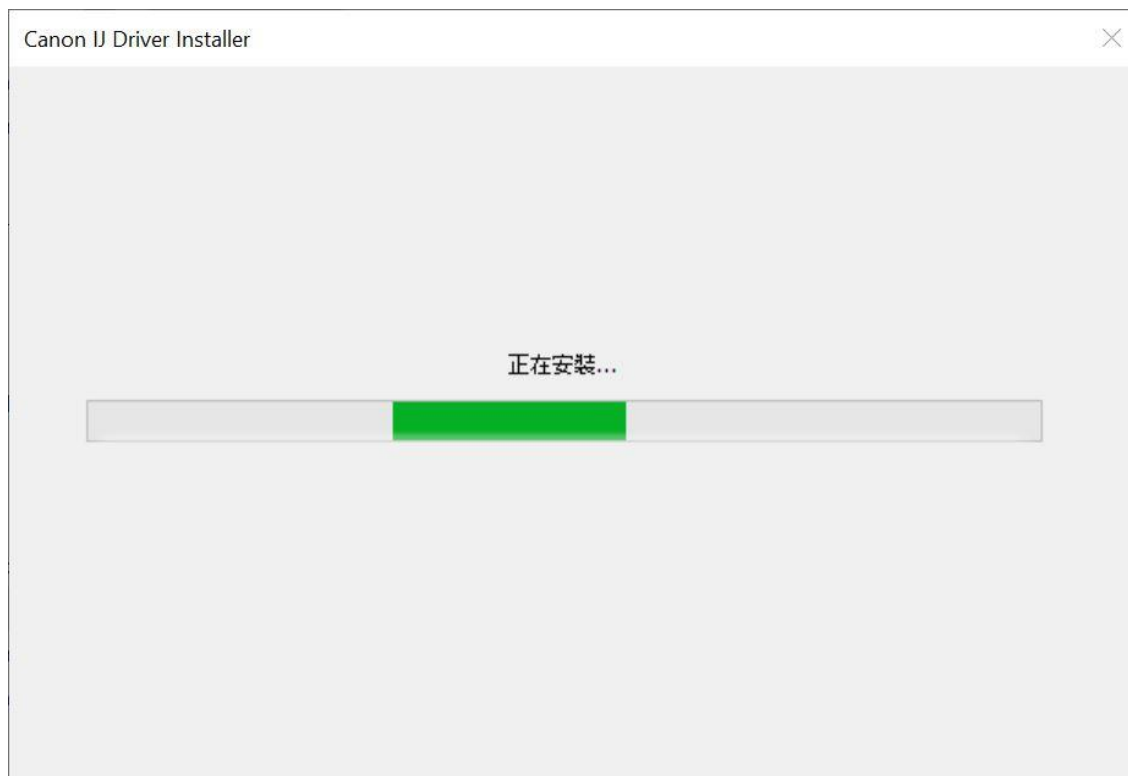

23. 安裝完成，按〔結束〕

Driver installation was completed, click [Finish]

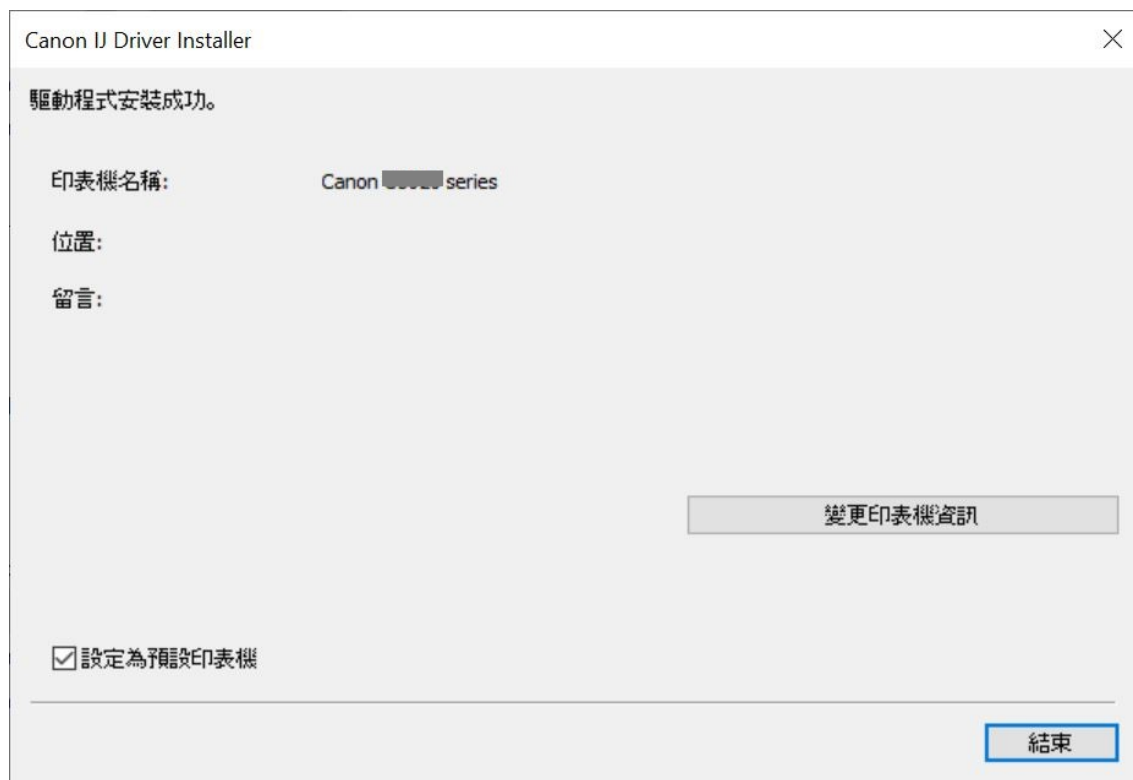

-完-

-End-