

在 Windows 以 USB 方式安裝及連接 PIXMA TR160 打印機

Installing PIXMA TR160 on Windows via USB connection

****注意: 安裝驅動程式前請勿接駁 USB 線，以免系統發生錯誤****

**** Please don't plug the USB cable until the driver asked to do so****

以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.

下載及安裝步驟

Driver download and Installation procedure

1. 到以下佳能網站並下載印表機的驅動程式

Go to below Canon webpage and download the printer driver

<https://hk.canon/en/support/PIXMA%20TR160/model>


2. 選擇並下載以下檔案

Choose and download the file below

TR160 series Printer Driver Ver.x.xx (Windows)

3. 按網頁內的〔Download〕按鈕，下載完成後開啟該檔案安裝

Click [Download] button in the webpage, and then execute the file after download was completed

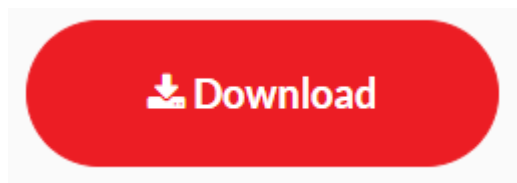


4. 打開安裝程式後按〔下一步〕

Click [Next] after open the installation program




5. 在居住地選擇〔亞洲〕，然後按〔下一步〕

Select [Asia] for place of residence, then click [Next]

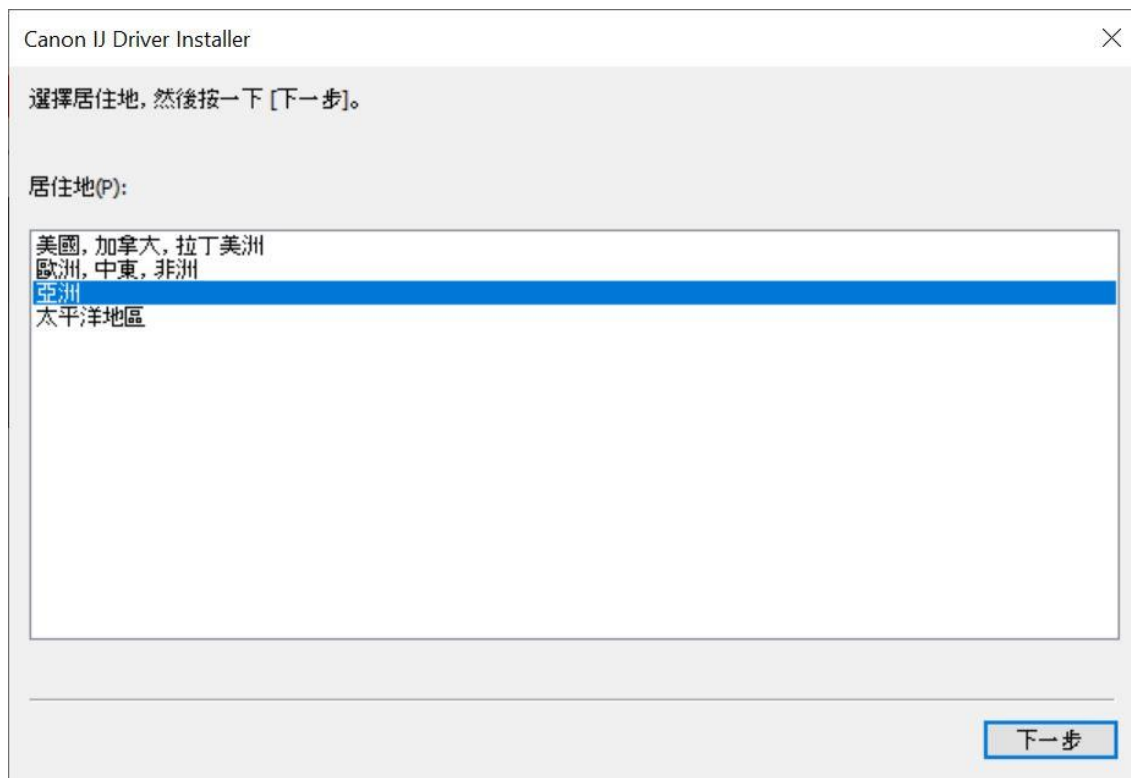


6. 按〔是〕同意許可協定

Click [Yes] to accept the license agreement

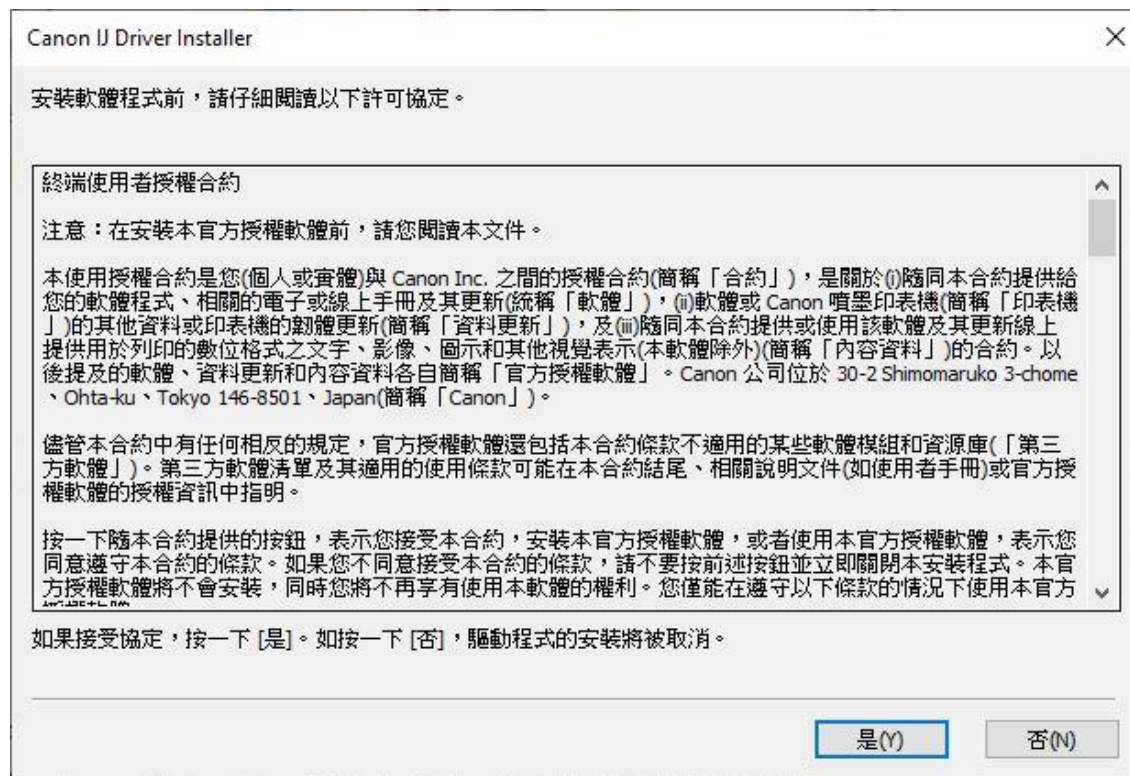

7. 使用 USB 電纜線連接印表機和電腦，然後在清單中選擇連接方法為 USB 的印表機，按〔 下一步 〕
Connect the USB cable with the printer and the computer, then select the printer with USB connection method from the list, click [Next]

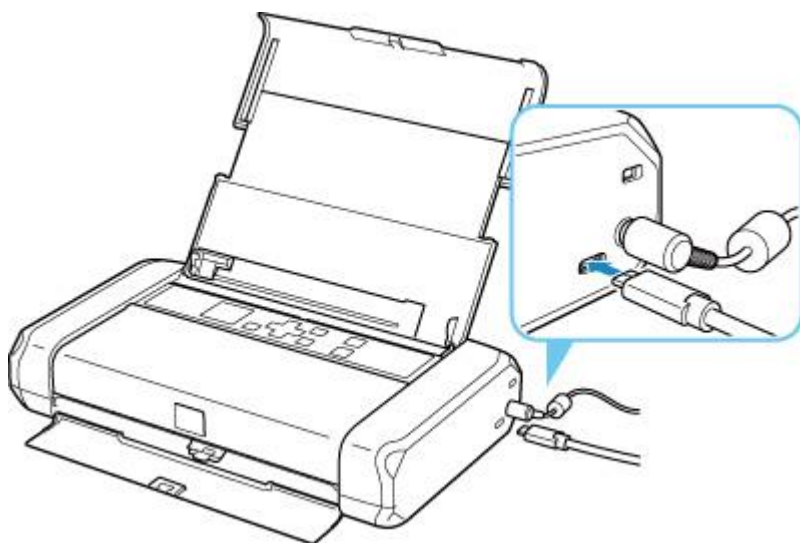

Canon IJ Driver Installer

找到印表機。
請從清單中選擇印表機，然後按一下〔下一步〕。

偵測到的印表機：

產品名稱	序號(最後 5 位數)	連接方法	IPv4 位址	IPv6
series	****	USB	-	-

< >


重新搜尋

找不到印表機


依 IP 位址搜尋

下一步

8. 正在安裝印表機驅動程式，請稍候
Installing the printer driver, please wait

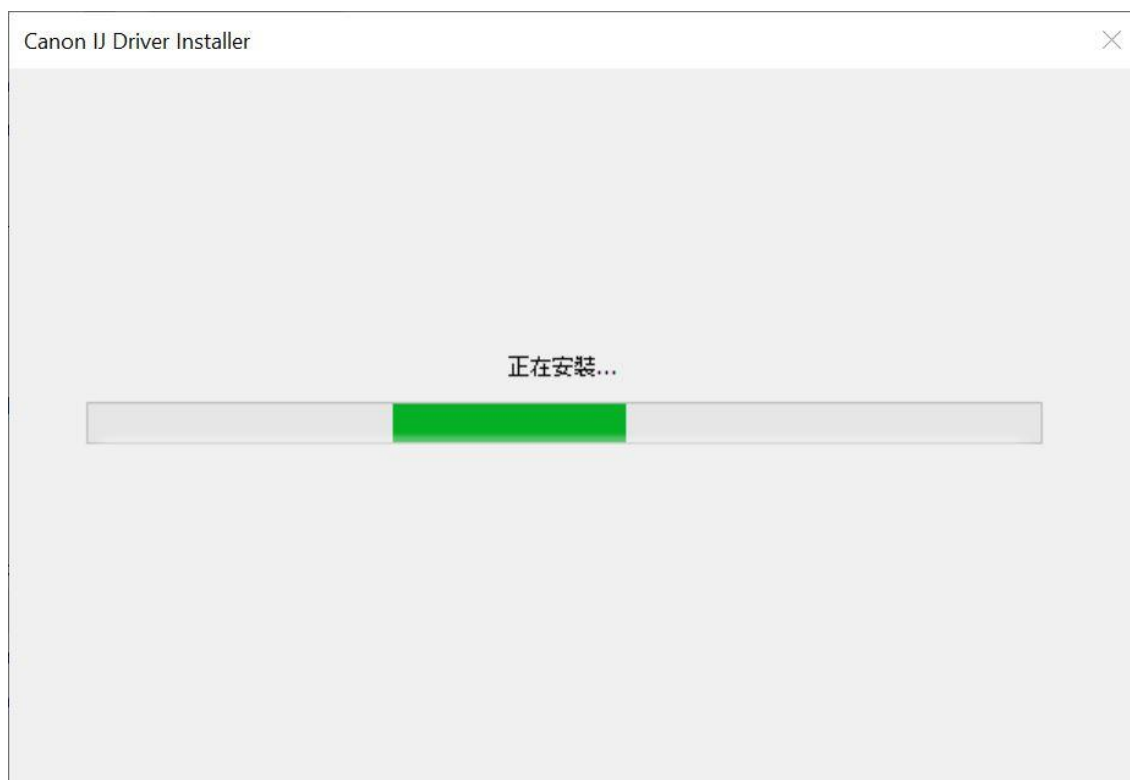

9. 安裝完成，按〔結束〕
Driver installation was completed, click [Finish]

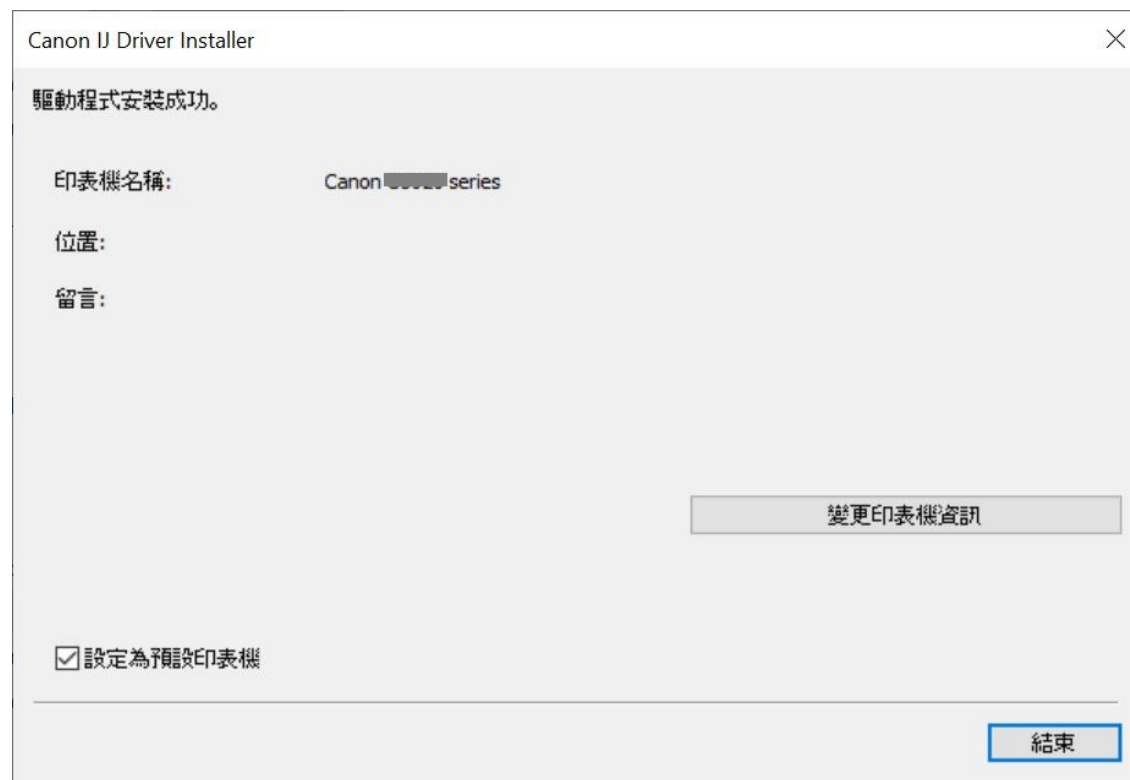

-完-
-End-