

在 Windows 以無線方式安裝及連接 PIXMA TR160 打印機

Installing PIXMA TR160 on Windows via WiFi connection

以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.


無線設定 Wireless Setup

1. 確保在開始無線連接設定之前，印表機已開啟。

如果電源開啟，電源指示燈閃爍，然後持續亮起。


Make sure the printer is turned on before starting wireless connection setup.

If the power is on, the ON lamp flashes and then remains lit.

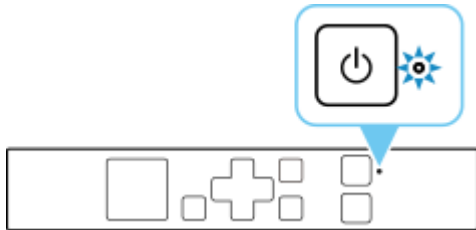


2. 在主頁螢幕選擇齒輪圖案 ，然後按 **OK** 按鈕。

Select the gear icon  on the HOME screen, then press the **OK** button.

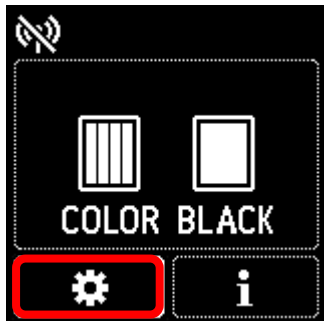

3. 選擇 **LAN 設定** 並按 **OK** 按鈕。

Select **LAN settings** and press **OK** button.

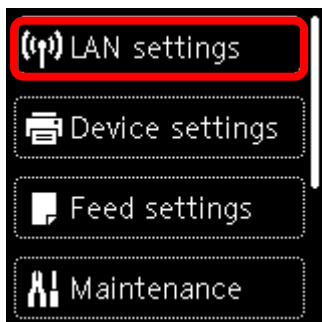

4. 選擇 **Wi-Fi** 並按 **OK** 按鈕。

Select **Wi-Fi** and press **OK** button.




5. 選擇 **Wi-Fi 設定** 並按 **OK** 按鈕。

Select **Wi-Fi setup** and press **OK** button.




6. 選擇 **手動連接** 並按 **OK** 按鈕。

Select **Manual connect** and press **OK** button.

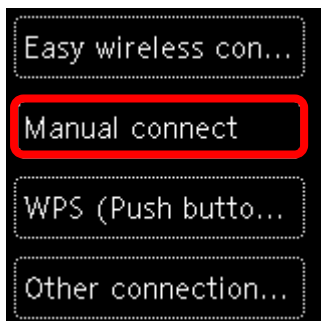


7. 選擇無線路由器並按 **OK** 按鈕。

Select your wireless router and press **OK** button.

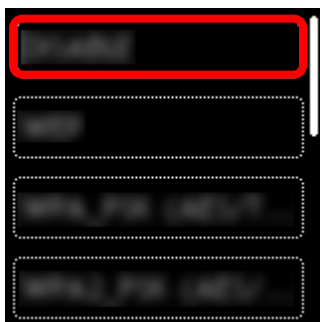

8. 如果顯示輸入密碼，請按 **OK** 按鈕。

If Enter the password is displayed, please press **OK** button.

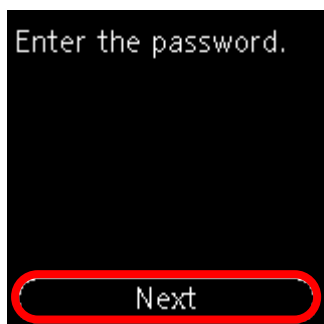

9. 輸入密碼。 [文字輸入](#)區分大小寫。

Enter the password. [Text entry](#) is case-sensitive.




10. 輸入後，在鍵盤上選擇 **OK**，然後按 **OK** 按鈕。

After entry, select **OK** on the keyboard screen, and then press the **OK** button.




11. 如顯示已連接到無線路由器時，請按 **OK** 按鈕。

When the screen on the below appears, press the **OK** button.

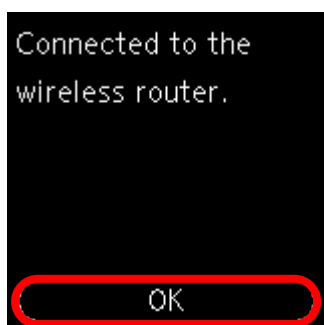

12. 按**返回**按鈕，直到顯示主頁螢幕。

Press the **Back** button until the following HOME screen appears.

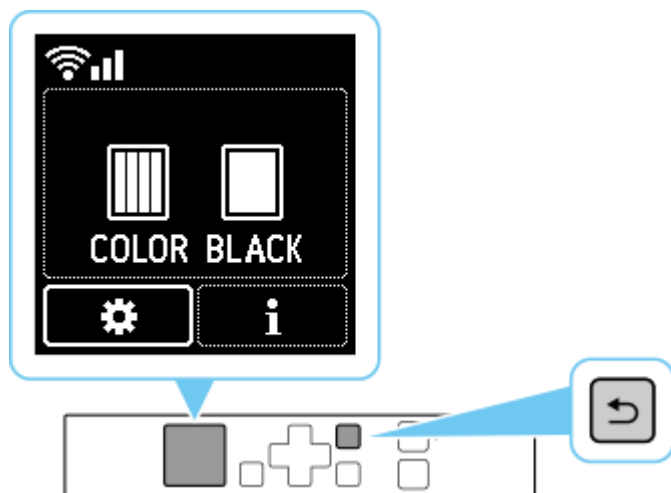

網路連接設定完成。

The network connection setup is now complete.

連接完成後，無線訊號標誌會顯示在螢幕的左上方。

Once the connection is complete, the wireless signal icon appears at the upper left of the screen.

下載及安裝步驟

Driver download and Installation procedure

13. 到以下佳能網站並下載印表機的驅動程式

Go to below Canon webpage and download the printer driver

<https://hk.canon/en/support/PIXMA%20TR160/model>


14. 選擇並下載以下檔案

Choose and download the file below

TR160 series MP Driver Ver.x.xx (Windows)


15. 按網頁內的〔Download〕按鈕，下載完成後開啟該檔案安裝

Click [Download] button in the webpage, and then execute the file after download was completed

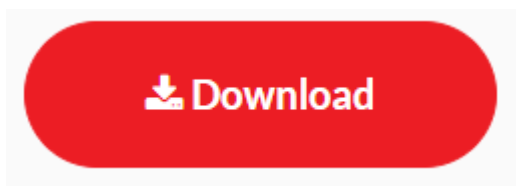


16. 打開安裝程式後按〔下一步〕

Click [Next] after open the installation program

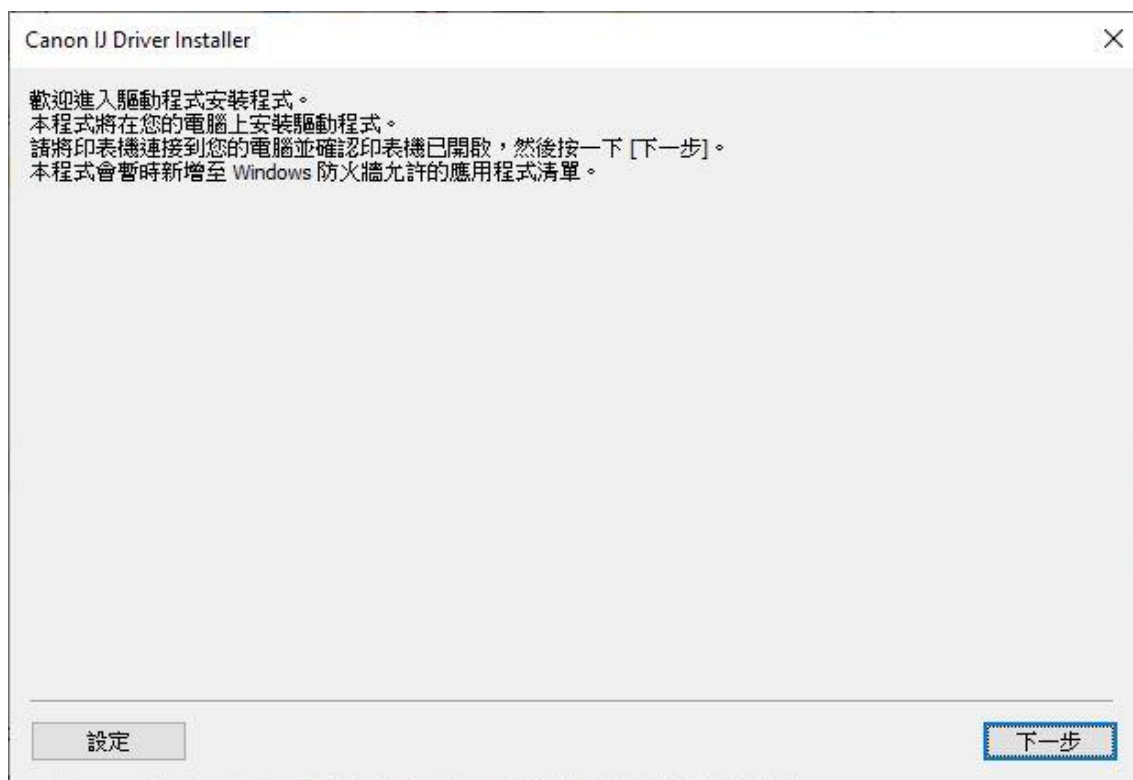


17. 在居住地選擇〔亞洲〕，然後按〔下一步〕

Select [Asia] for place of residence, then click [Next]

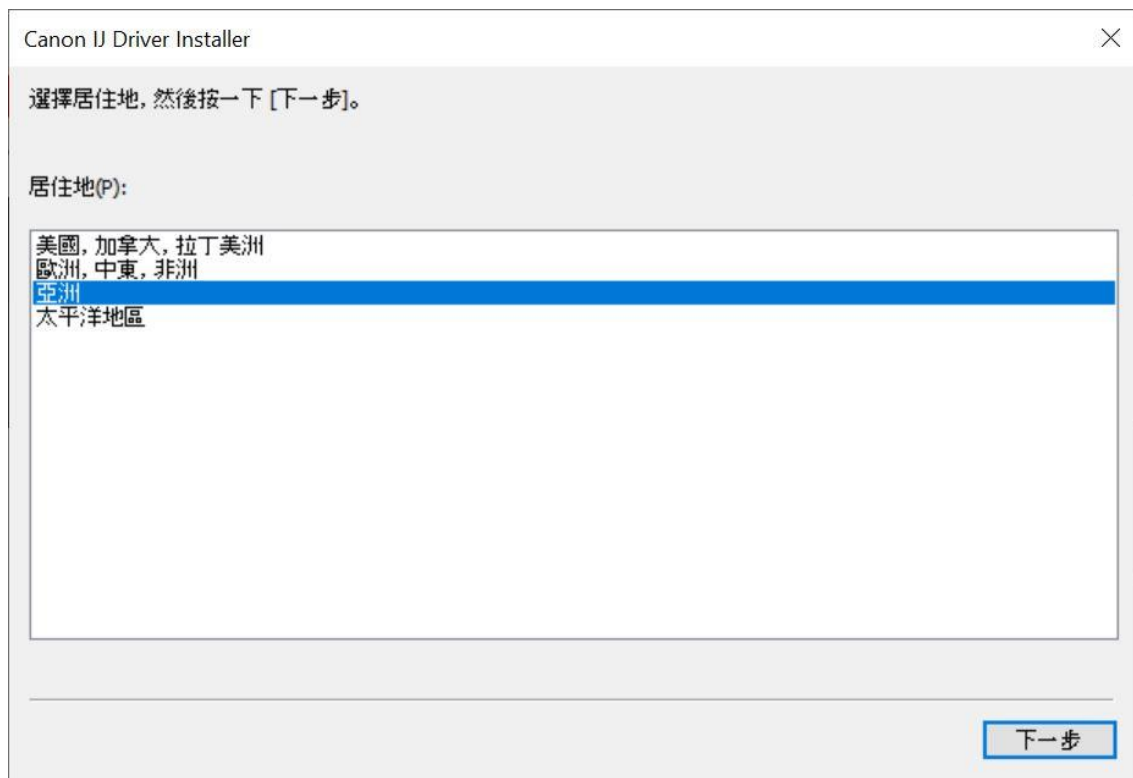


18. 按〔是〕同意許可協定

Click [Yes] to accept the license agreement

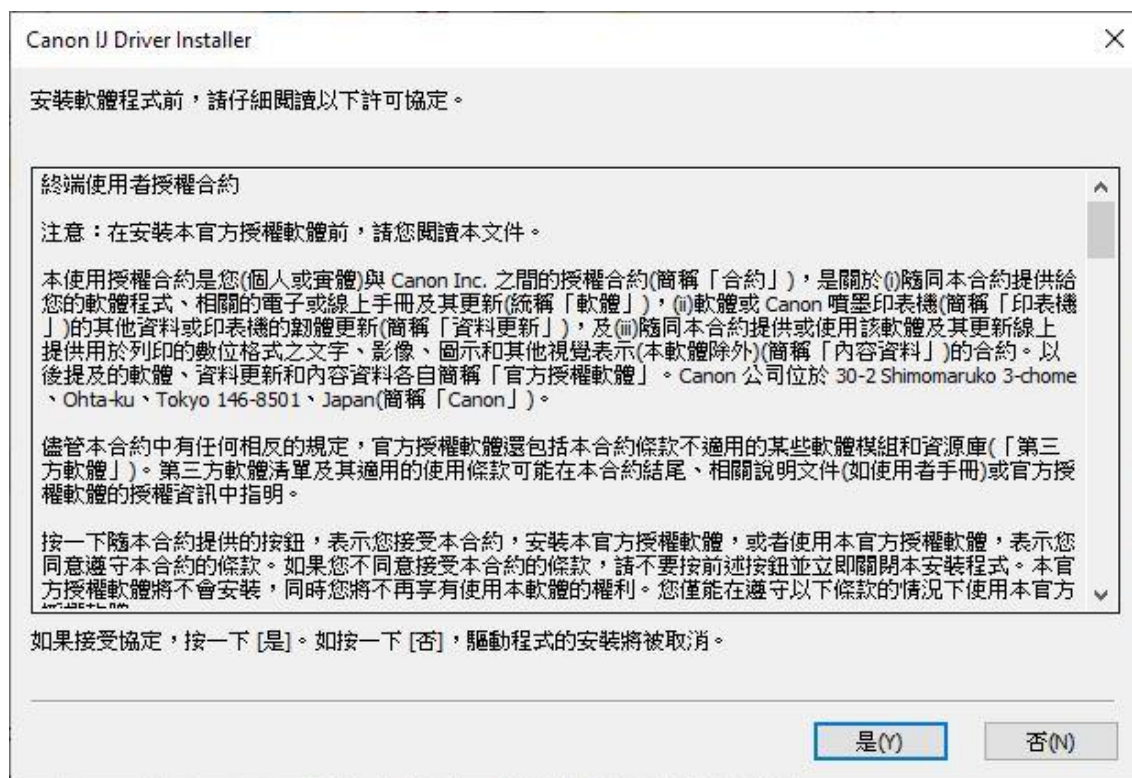


19. 選擇連接方法為 Wi-Fi 的打印機，按〔下一步〕


Select the printer with connection method as Wi-Fi, click [Next]

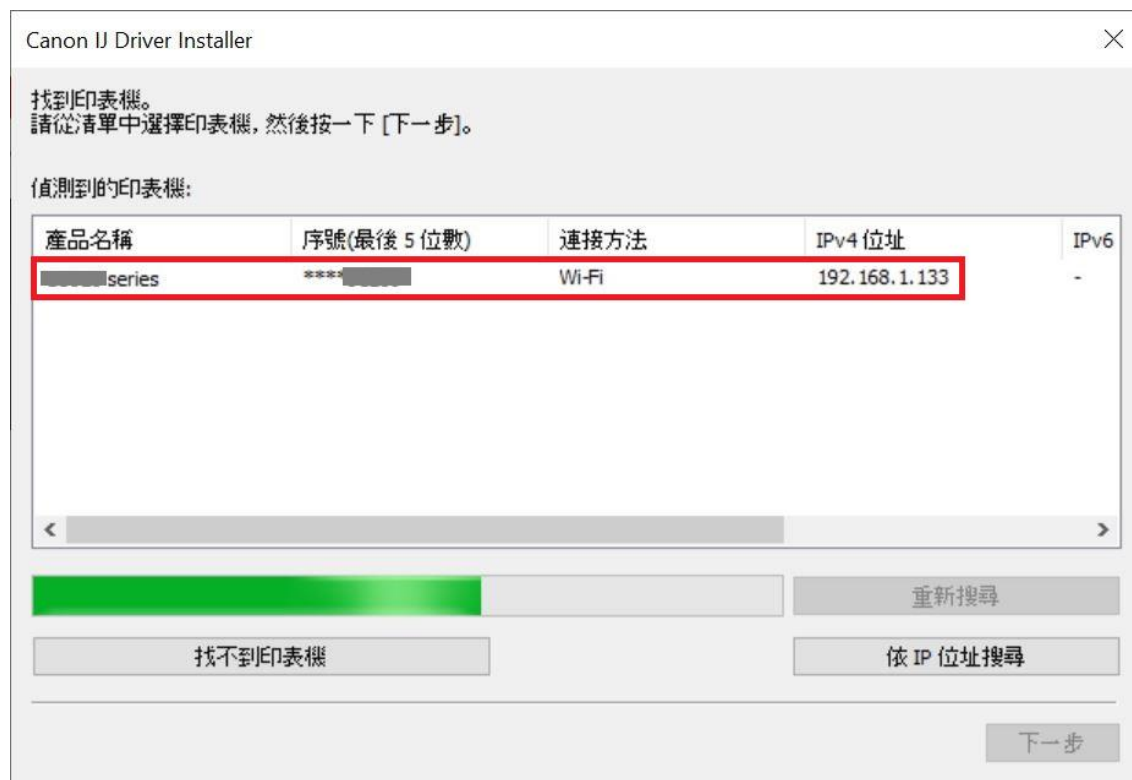

20. 正在安裝印表機驅動程式，請稍候
Installing the driver, please wait

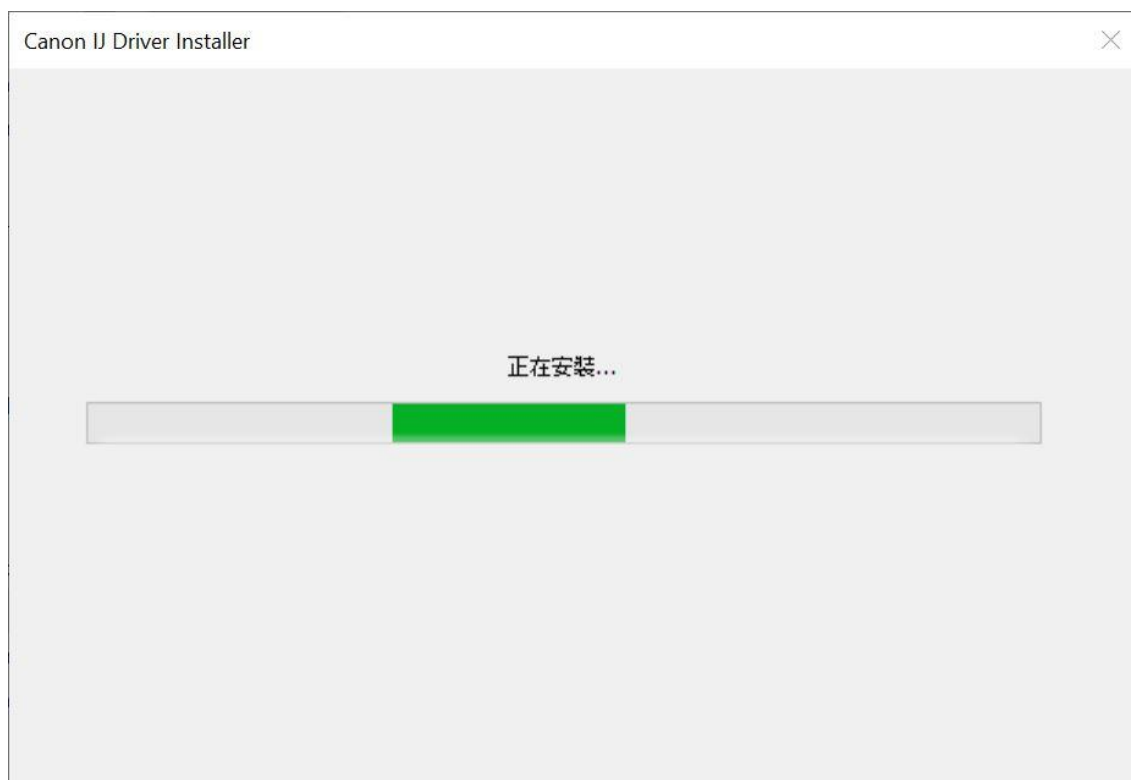

21. 安裝完成，按〔結束〕
Driver installation was completed, click [Finish]

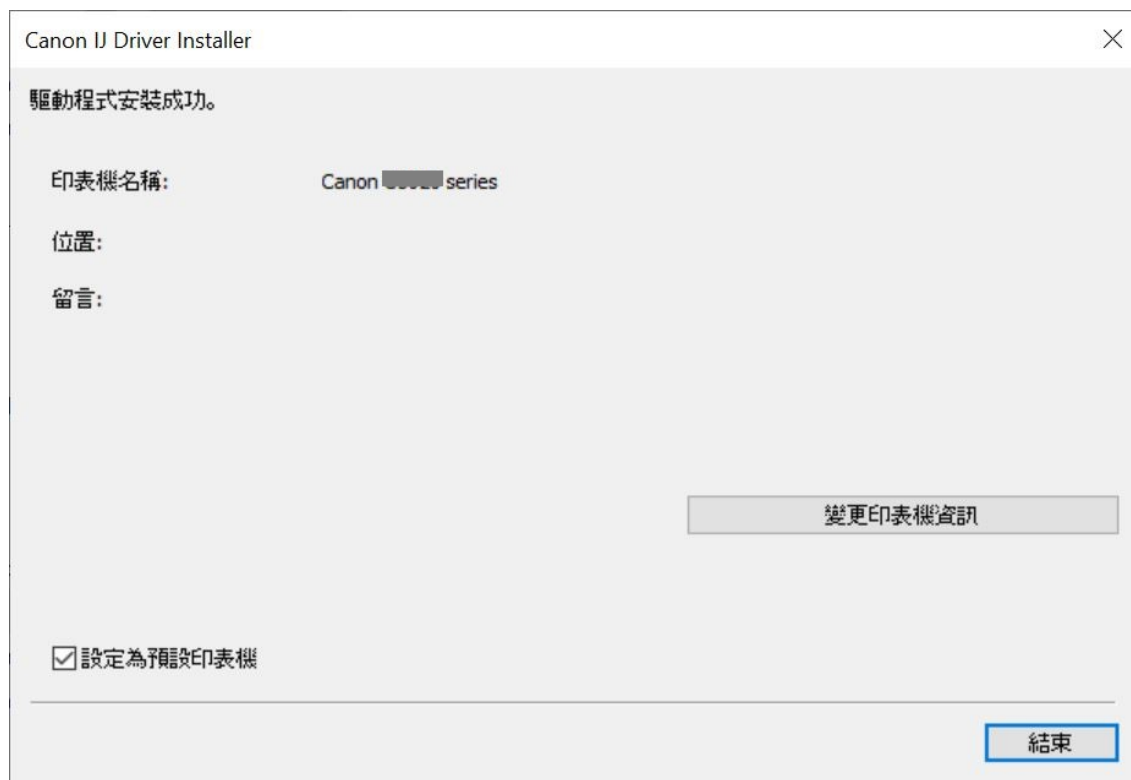

-完-
-End-