

在 Windows 以無線方式安裝及連接 PIXMA TS4070 打印機

Installing PIXMA TS4070 on Windows via WiFi connection

以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。


The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.

無線設定 Wireless Setup

1. 確保在開始無線連接設定之前，印表機已開啟。
如果電源開啟，電源指示燈閃爍，然後持續亮起。


Make sure printer is turned on before starting wireless connection setup.

If the power is on, the ON lamp flashes and then remains lit.

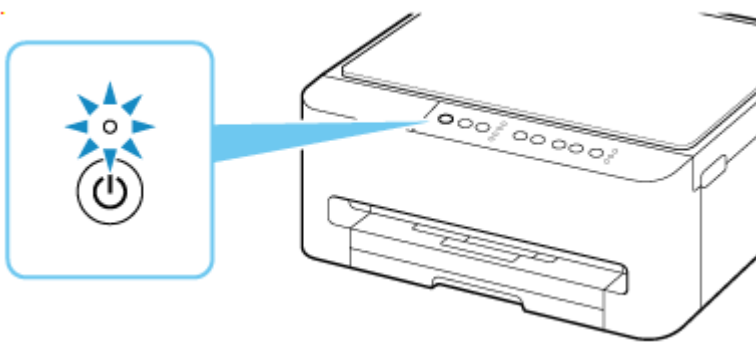

2. 如果印表機的無線連接 (Wireless connect) 指示燈未亮起，請按住 (無線連接 (Wireless connect) 按鈕) 約三秒鐘，然後在無線連接 (Wireless connect) 指示燈亮起時鬆開。

If the printer's Wireless connect lamp is not lit, press and hold (Wireless connect button) for about three seconds, and then release it when the Wireless connect lamp lights up.

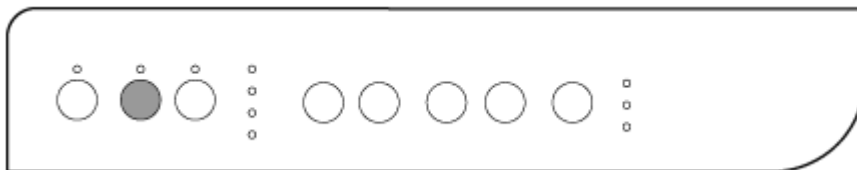

3. 使用應用程式將您的電腦或智慧型手機連接到印表機。
Connect your computer or smartphone to the printer using the app.

下載及安裝步驟

Driver download and Installation procedure

2. 到以下佳能網站並下載印表機的驅動程式

Go to below Canon webpage and download the printer driver

<https://hk.canon/en/support/PIXMA%20TS4070/model>


3. 選擇並下載以下檔案

Choose and download below file

TS4070 series MP Driver Ver.x.xx (Windows)


4. 按上面網頁內的〔Download〕，下載完成後開啟該檔案安裝

Click [Download] in the webpage above, and then execute the file after download was completed

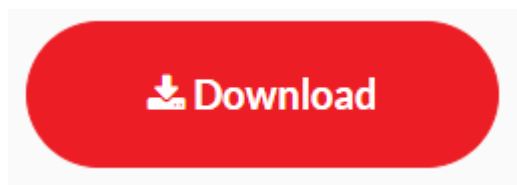


5. 按〔下一步〕

Click [Next]

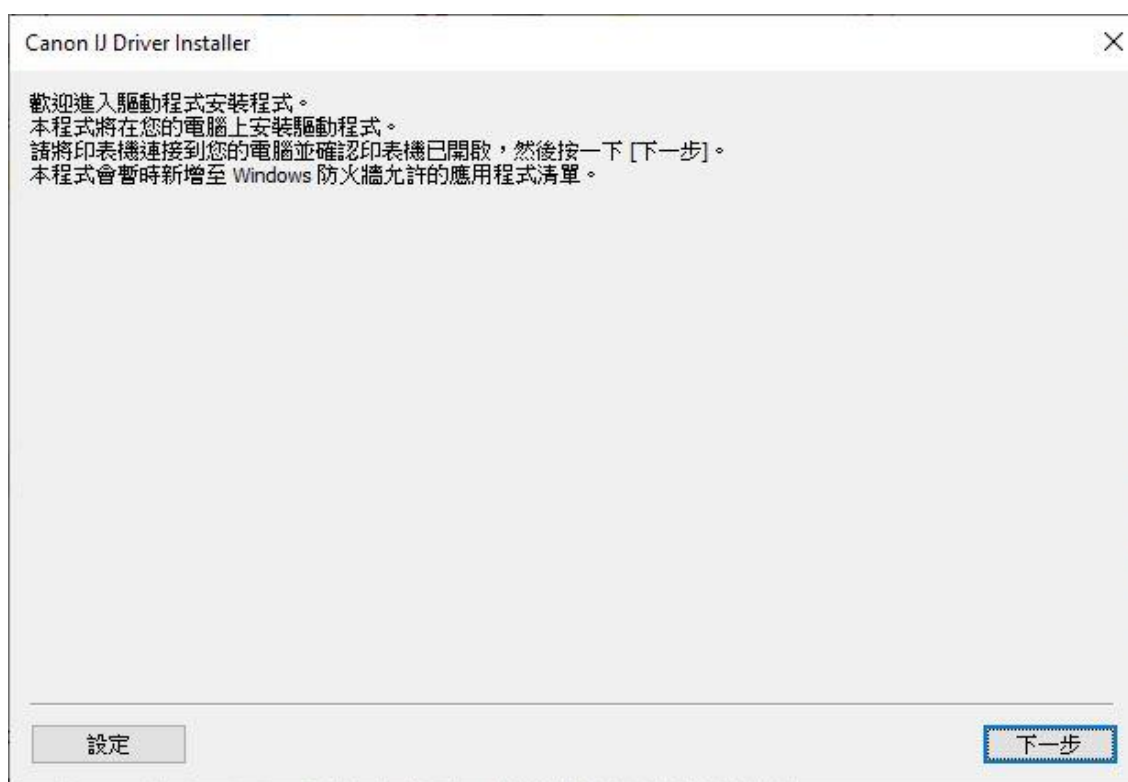


6. 選擇〔亞洲〕，按〔下一步〕

Select [Asia]; click [Next]

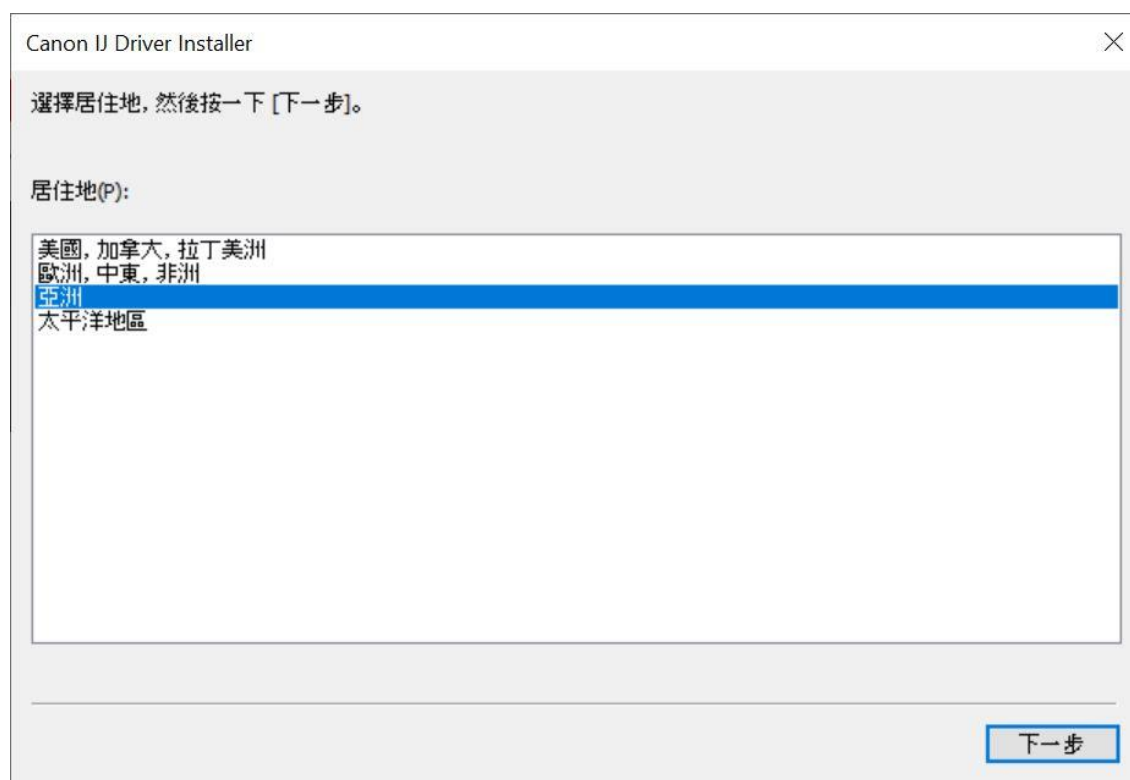


7. 按〔是〕


Click [Yes]

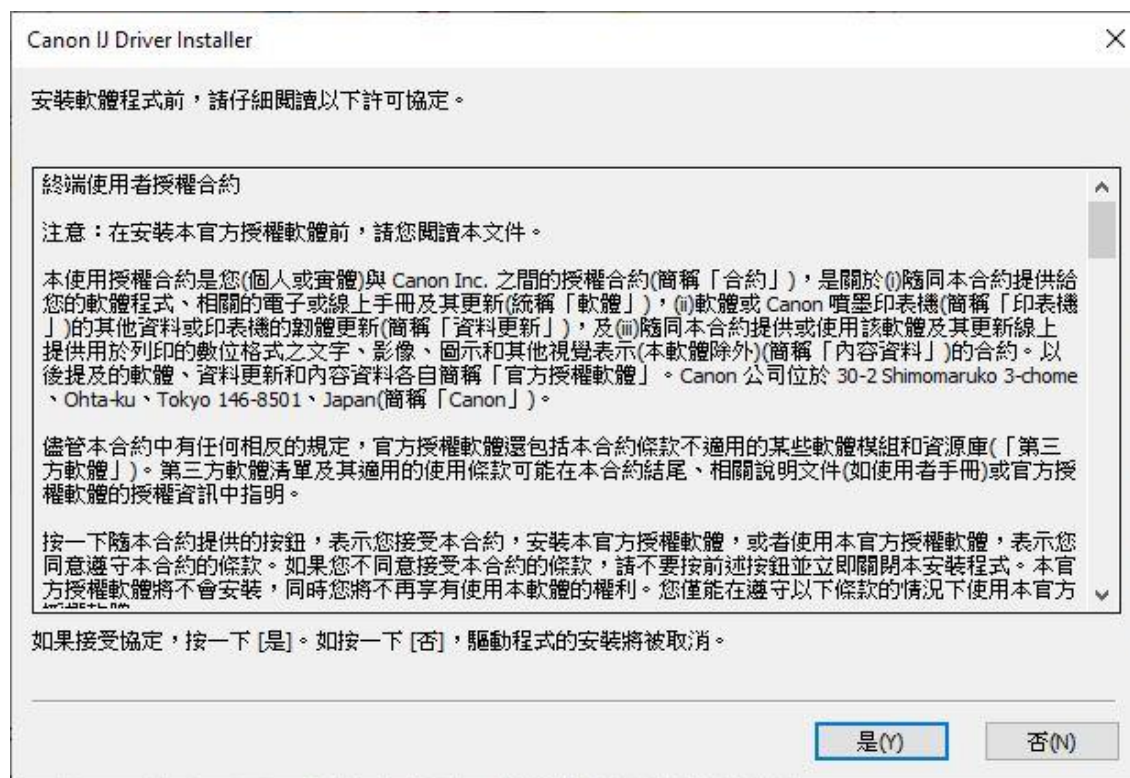

8. 選擇連接方法為 Wi-Fi 的打印機，按〔 下一步〕
Select the printer with connection method as Wi-Fi, click [Next]

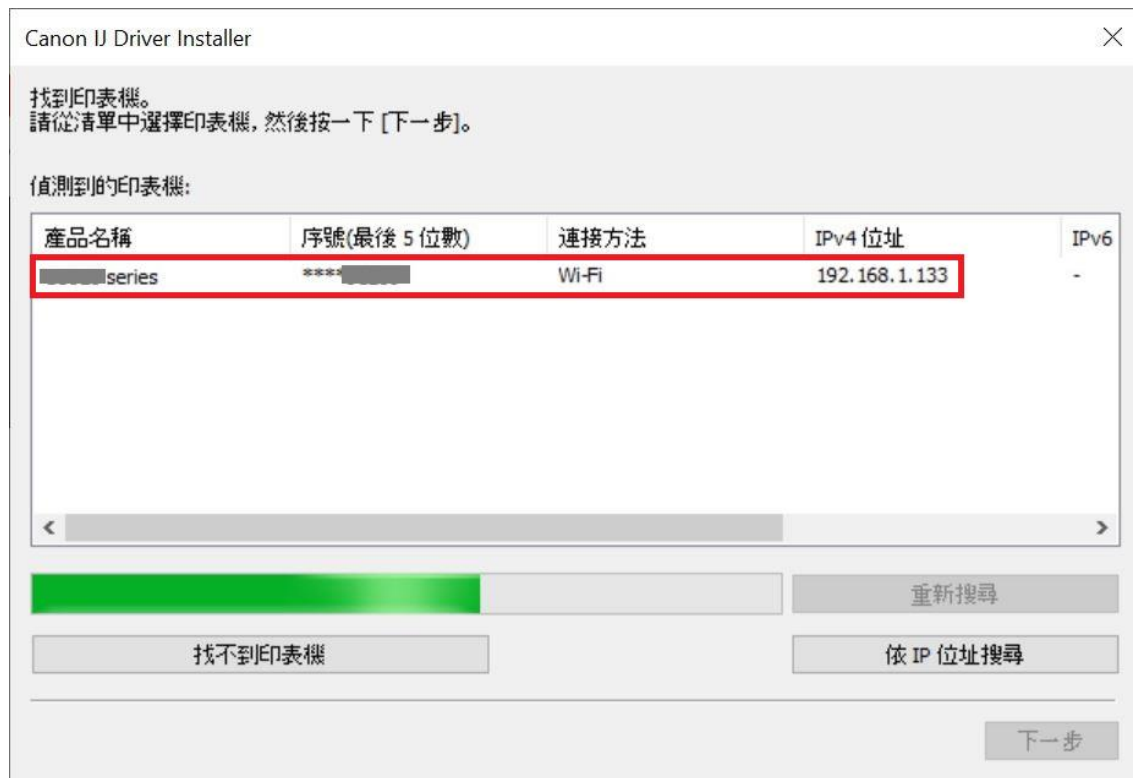


9. 正在安裝印表機驅動程式，請稍候
Installing the driver, please wait

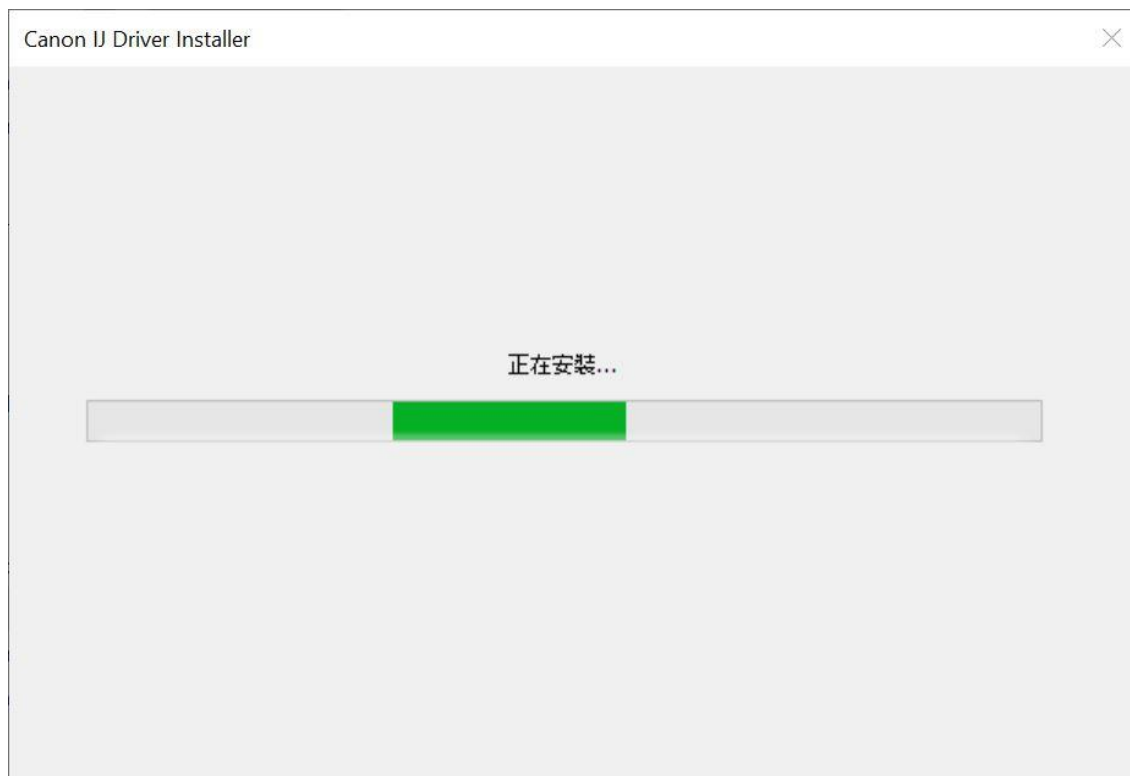

10. 安裝完成，按〔結束〕

Driver installation was completed; click [Finish]

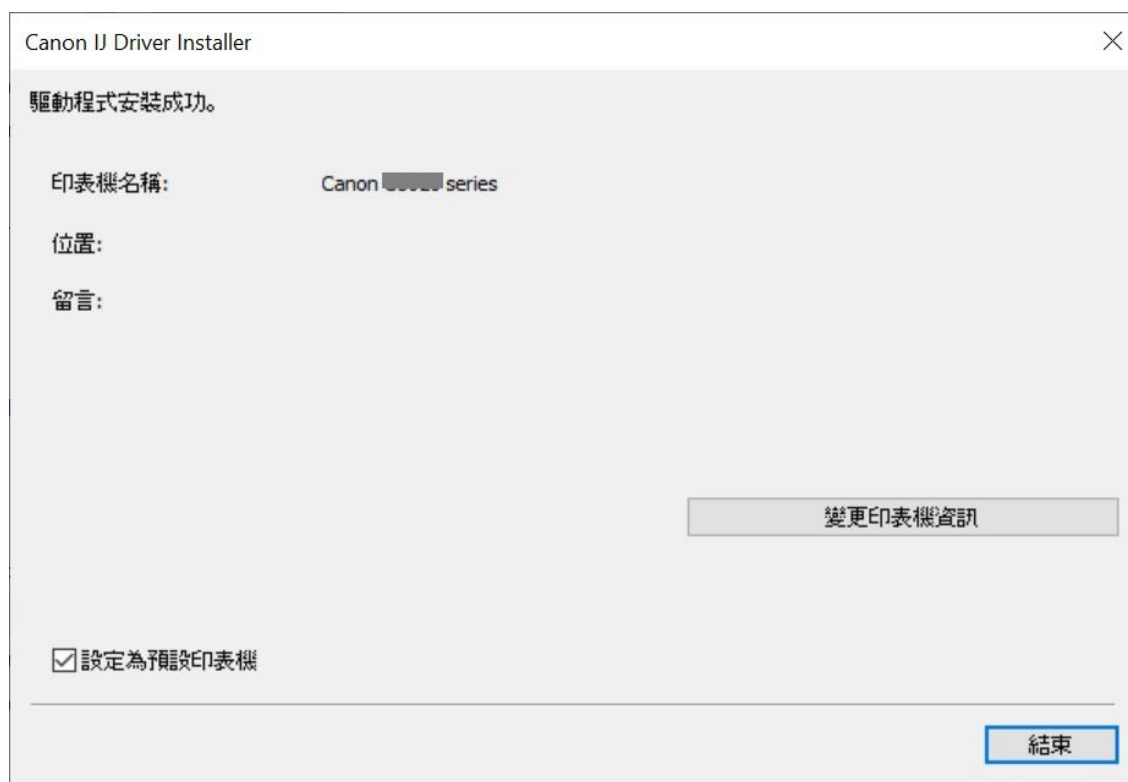

-完-

-End-