

如何建立自訂紙張大小 (Windows)

How to register a custom paper size (Windows)


以下設定以 Windows 8 及 PIXMA MG7770 打印機為例

(The following settings is using Windows 8 and PIXMA MG7770)


1. 開啟「控制台」，然後開啟「裝置和印表機」
(Open "Control Panel", then open "Devices and Printers")
2. 選擇打印機，再按「列印伺服器內容」
(Choose the printer, then click the "Printer server properties")




3. 選擇「建立新格式」，輸入「格式名稱」及紙張大小，完成後按「確定」
(Choose "Create a new form", then type in the "Form name" and paper size, press "OK" after finish)

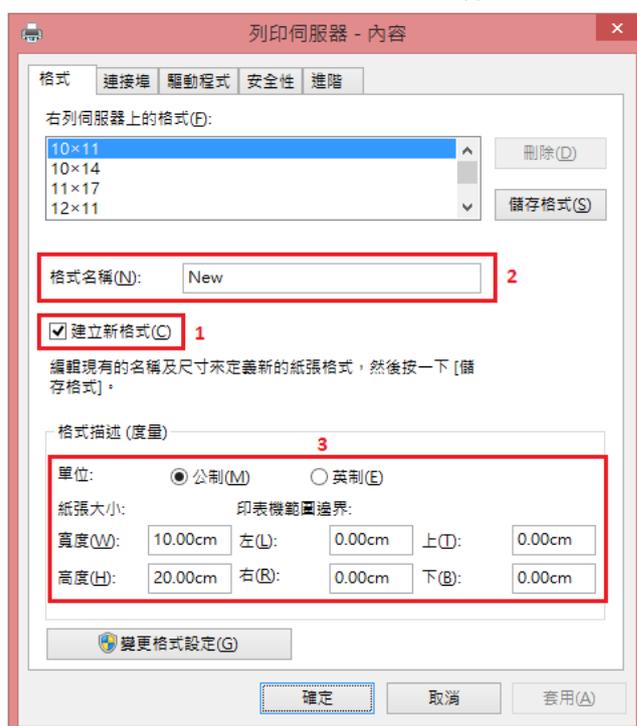

4. 如需選擇紙張大小，請按「喜好設定」
 (Please click “Properties” if need to choose paper size)

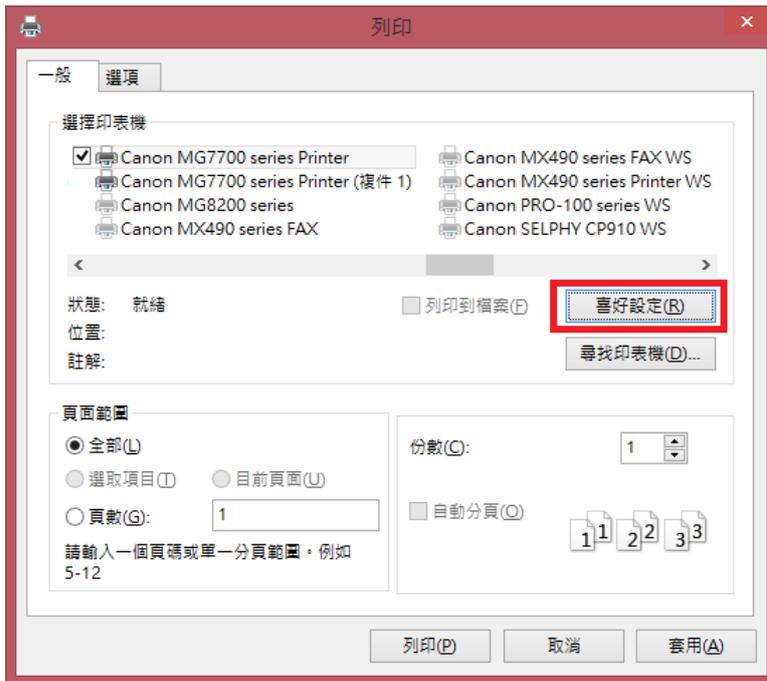

5. 在「印表機紙張大小」中點選所需紙張
 (Please choose paper size from the list of “Printer Paper Size”)

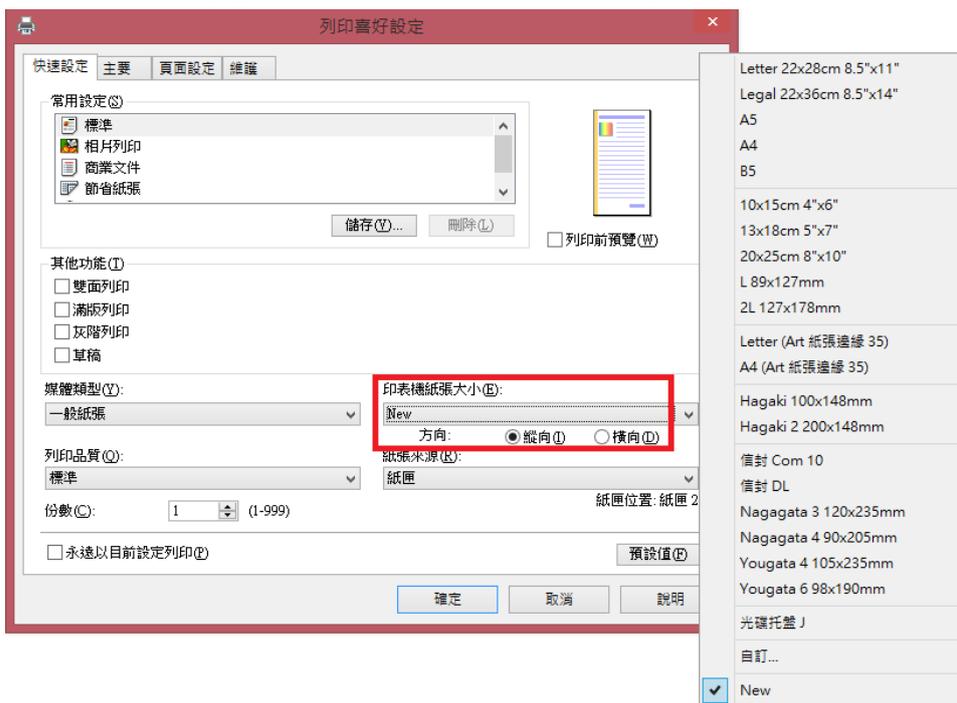


如何建立自訂紙張大小 (Mac) How to register a custom paper size (Mac)

以下設定以 Mac OS 10.11 及 PIXMA MG7770 打印機 為例
(The following settings is using Mac OS 10.11 and PIXMA MG7770)

1. 開啟應用程式，如 Safari，再按「檔案」及「列印」
(Open the application, e.g. Safari, then click “File” and “Print”)



2. 按「紙張大小」
(Click “Paper Size”)

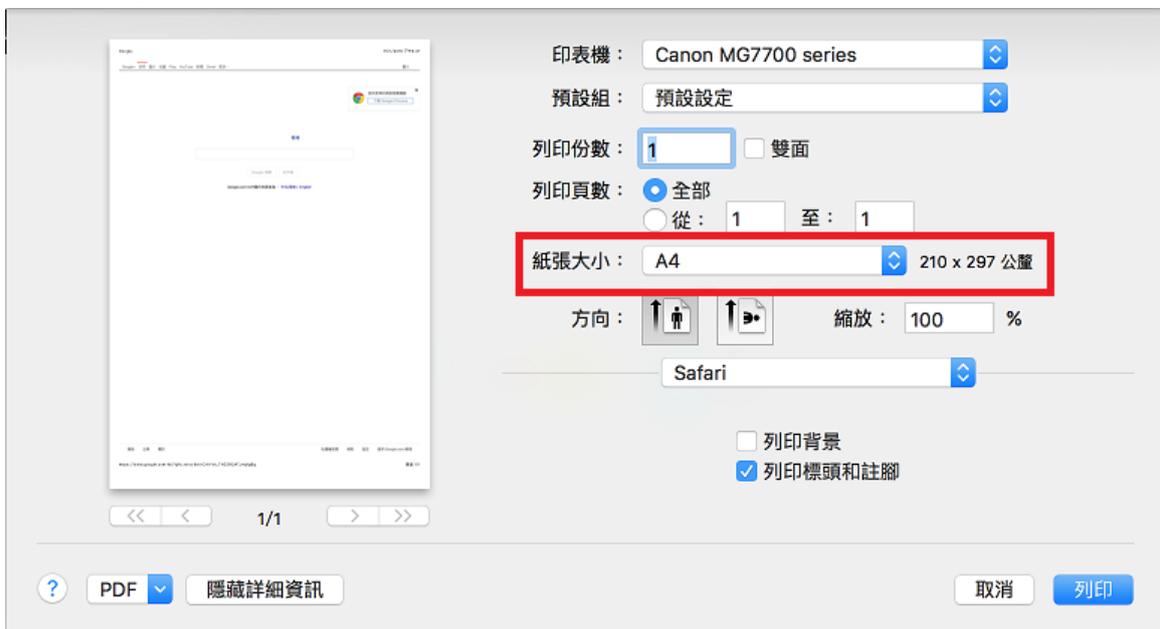

3. 按「管理自定大小」
(Click “Manage Custom Sizes”)



4. 按「+」，更改紙張名稱，然後於「不可列印的區域」點選打印機型號，再輸入紙張大小，最後按「好」結束

(Click “+”, change the paper name, then choose printer from the “Non-Printer Area”, and input the paper size, Click “OK” after finish)



6. 如需變更紙張大小，請在「紙張大小」清單內選擇
(Please choose paper size from the list of "Paper Size")



-完-
-End-