CP1200 以無線LAN連線連接印表機安裝驅動程式步驟 (以Win 8.1 作示範)
The driver installation procedure for CP1200 (Via Wireless LAN)(Win 8.1 as example)

先將印表機連接到路由器，詳細可參考以下步驟
(Follow below steps to connect printer to the router)

Non-WPS Access Points

1 Check the access point.
- Confirm that the access point is on and ready for communication.

2 Prepare SELPHY.
- Remove any inserted memory cards or USB flash drives.
- Insert a loaded paper cassette and an ink cassette in SELPHY (📖8 – 10).

3 Access the setting screen.
- Press the <▤> button.
- Press the <▲><▼> buttons to select [Wi-Fi Settings], and then press the <OK> button.
- Press the <▲><▼> buttons to select [Connection Settings], and then press the <OK> button.

4 Check the printer name.
- Check the displayed printer name and press the <OK> button.
- You can change the printer name by pressing the EDIT button (📖48).

5 Choose the connection method.
- Press the <▲><▼> buttons to select [Via Wi-Fi Network], and then press the <OK> button.

非 WPS 的存取點

1 查看存取點
- 確認存取點已開啟，並已準備通訊。

2 準備 SELPHY
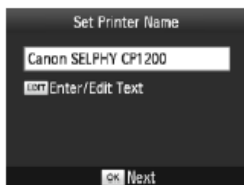- 取出任何已插入的記憶卡或 USB 快閃磁碟。
- 將已裝入紙張的紙盒及墨盒插入 SELPHY（📖8 – 10）。

3 進入設定畫面
- 按下 <▤> 鍵。
- 按下 <▲><▼> 鍵選擇 [Wi-Fi 設定（Wi-Fi Settings）]，然後按下 <OK> 鍵。
- 按下 <▲><▼> 鍵選擇 [連接設定（Connection Settings）]，然後按下 <OK> 鍵。

4 查看打印機的名稱
- 查看所顯示的打印機名稱，然後按下 <OK> 鍵。
- 您可以按下 EDIT（編輯）鍵變更打印機名稱（📖48）。

5 選擇連接方法
- 按下 <▲><▼> 鍵選擇 [透過 Wi-Fi 網絡（Via Wi-Fi Network）]，然後按下 <OK> 鍵。

Left column (English)
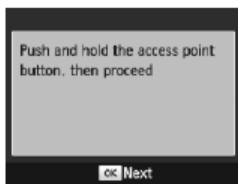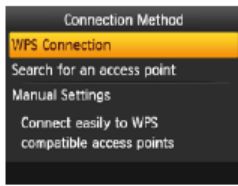
6 **Choose the access point connection method.**

- Press the <▲><▼> buttons to select [WPS Connection], and then press the <OK> button.

7 **Choose the WPS connection method.**

- Press the <▲><▼> buttons to select [PBC Method], and then press the <OK> button.

- The screen at left is displayed.

8 **On the access point, hold down the WPS connection button for a few seconds.**

- For details on where the button is located and how long to press it, check the access point user manual.

9 **Establish the connection.**

- On the printer, press the <OK> button.
- [Connecting] is displayed on the printer, followed by [Connected to access point] when connected. Press the <OK> button.
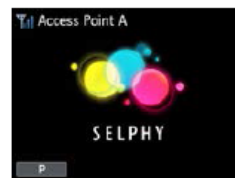- The screen at left is displayed, indicating the name of the access point.

Right column (Chinese)
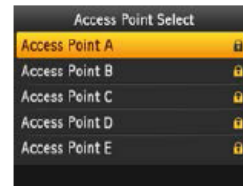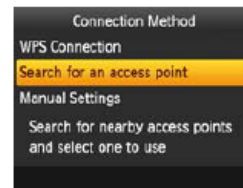
6 選擇存取點的連接方法

- 按下 <▲><▼> 鍵選擇 [搜尋存取點（Search for an access point）]，然後按下 <OK> 鍵。
- 螢幕會列出附近的存取點。

7 選擇存取點

- 按下 <▲><▼> 鍵選擇存取點，然後按下 <OK> 鍵。

8 輸入密碼

- 按下 EDIT（編輯）鍵進入輸入畫面，然後輸入密碼（📖49）。
- 按下 <OK> 鍵。

9 查看存取點

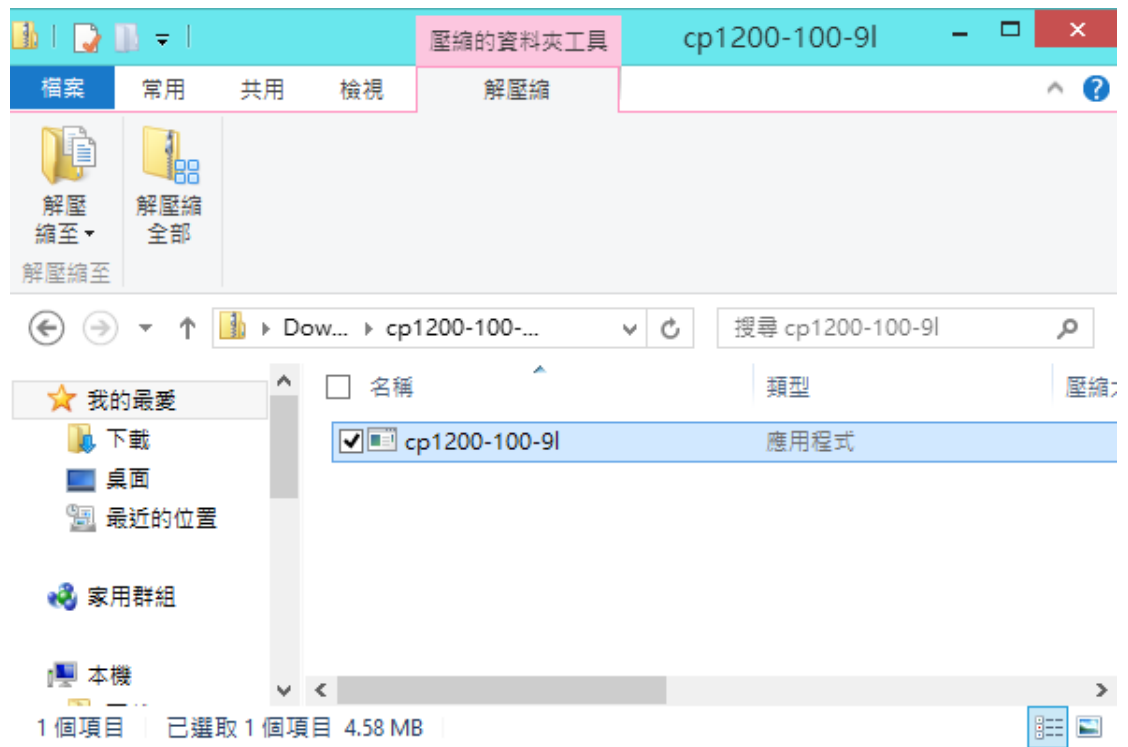- 打印機連接到存取點後，即會顯示左方的畫面。查看所顯示的存取點名稱，然後按下 <OK> 鍵。

- 螢幕會顯示左方的畫面。

1. 到佳能網站 http://support-hk.canon-asia.com/ ，選擇相關的印表機型號及下載印表機的驅動程式
    (Go to: http://support-hk.canon-asia.com/ , select related printer model, then download the printer driver)
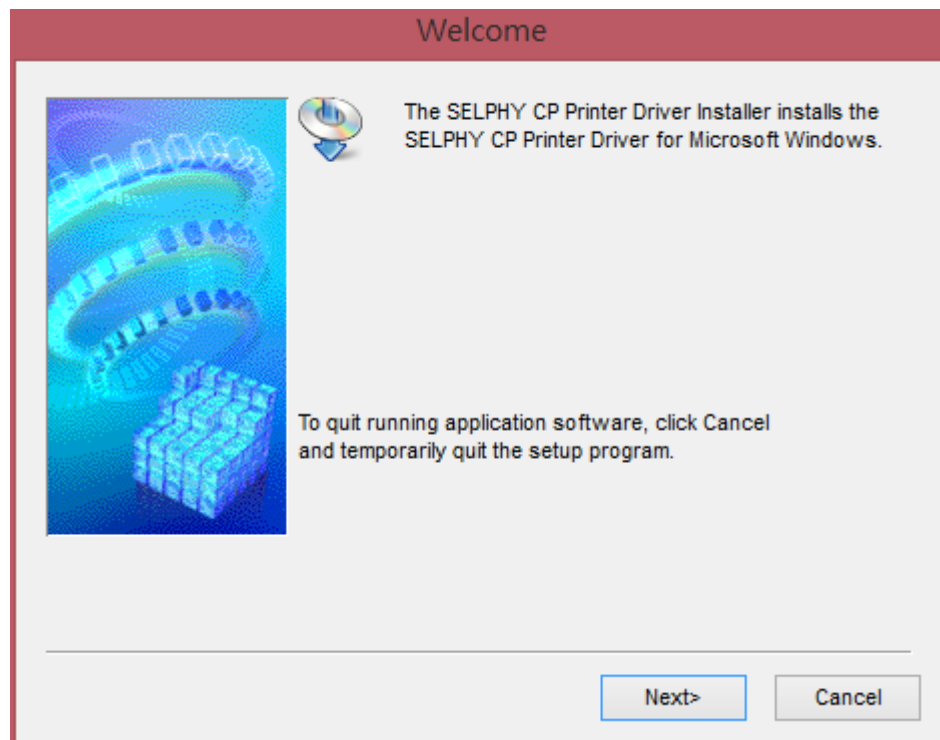
2. 下載的文件「cp1200-***.zip」以壓縮檔檔案保存在指定的文件夾中，打開壓縮檔檔案。(A downloaded zip file "cp1200-***.zip" will be saved at specified location, open the zip file.)
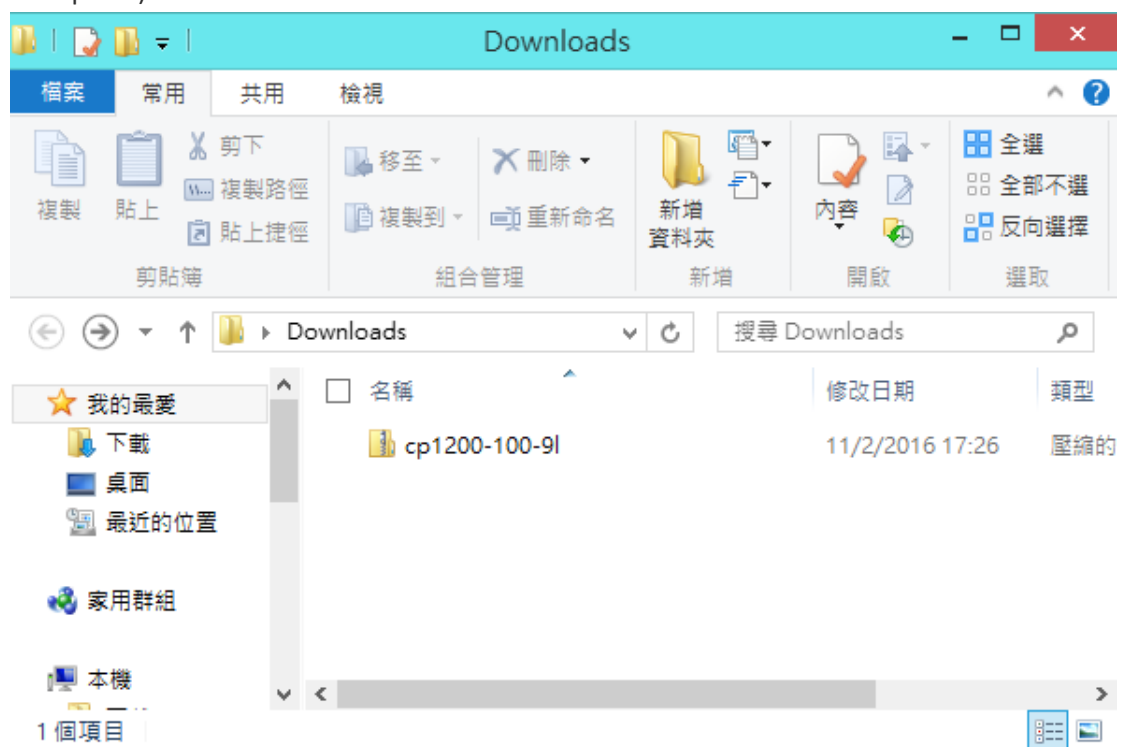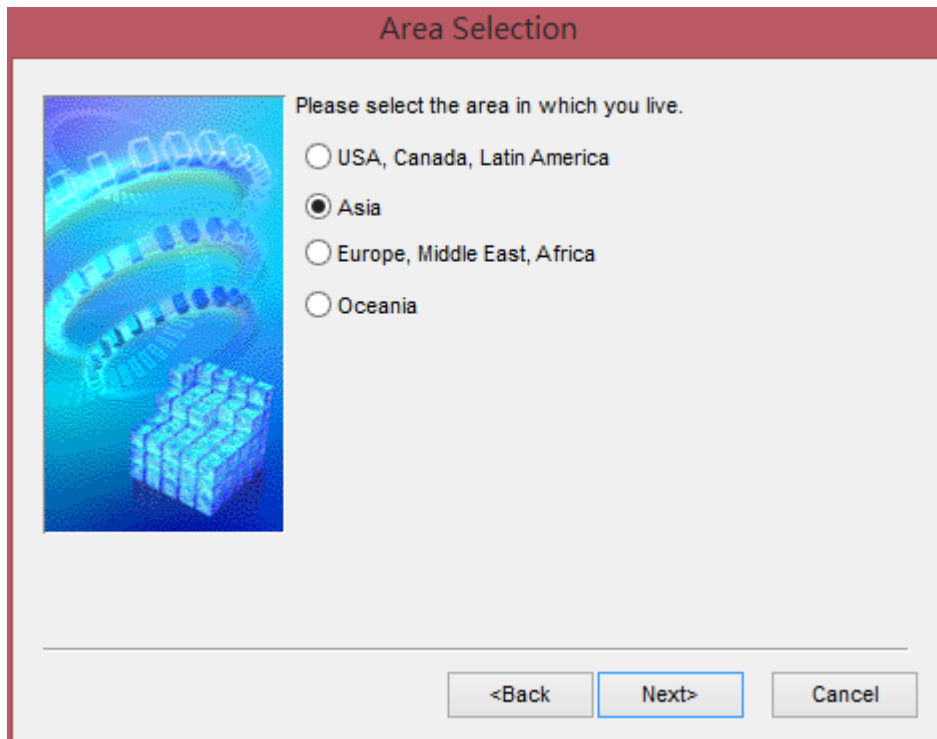
3. 開啟"cp1200-***.exe" (Open "cp1200-***.exe")
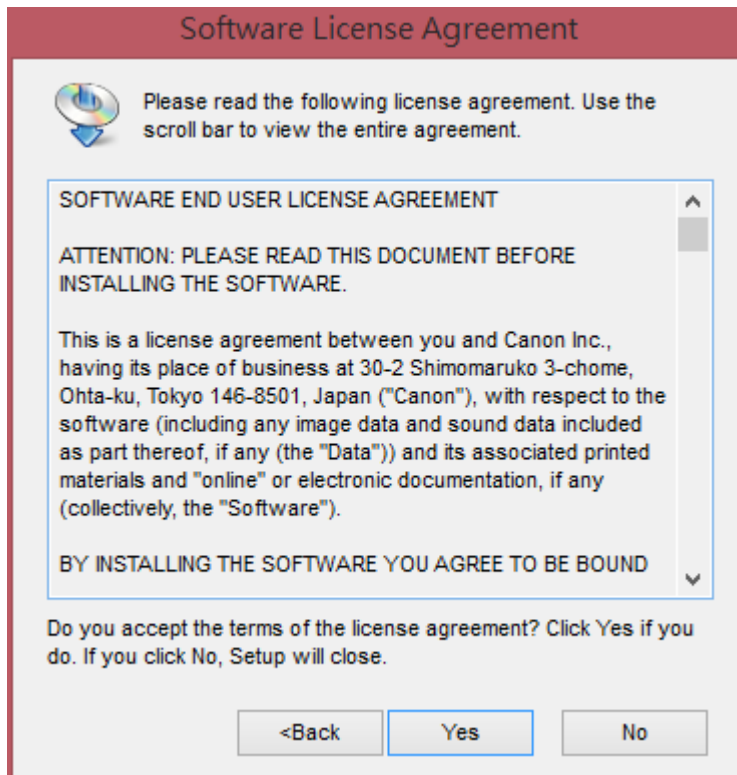

4. 按「Next>」 (Click "Next>")
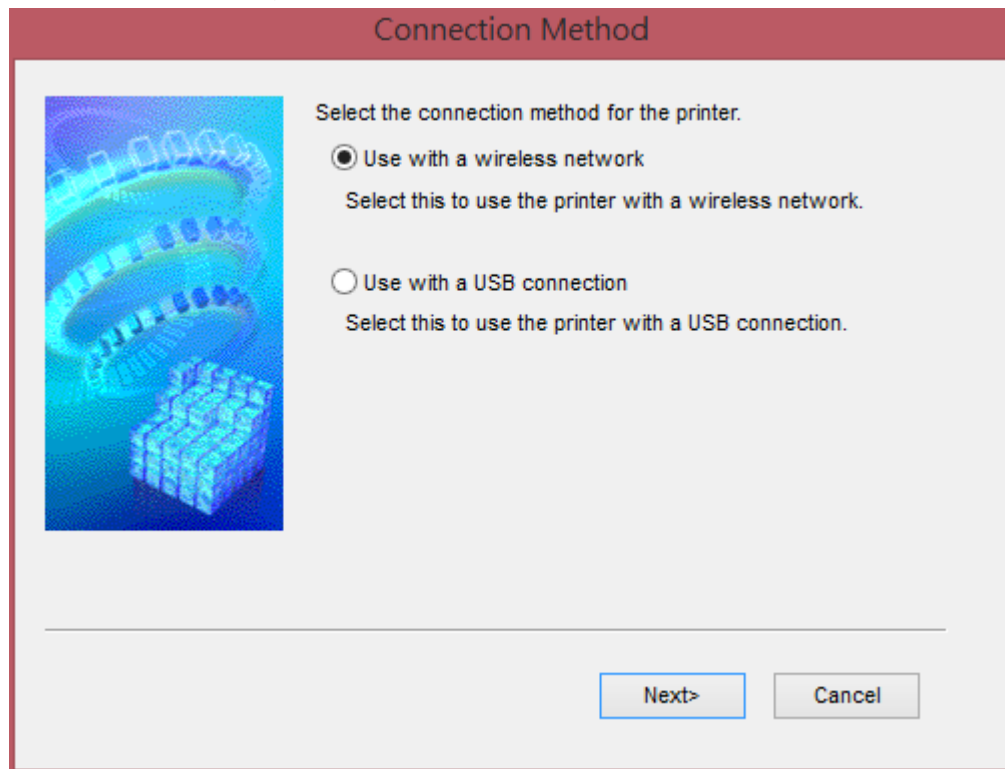
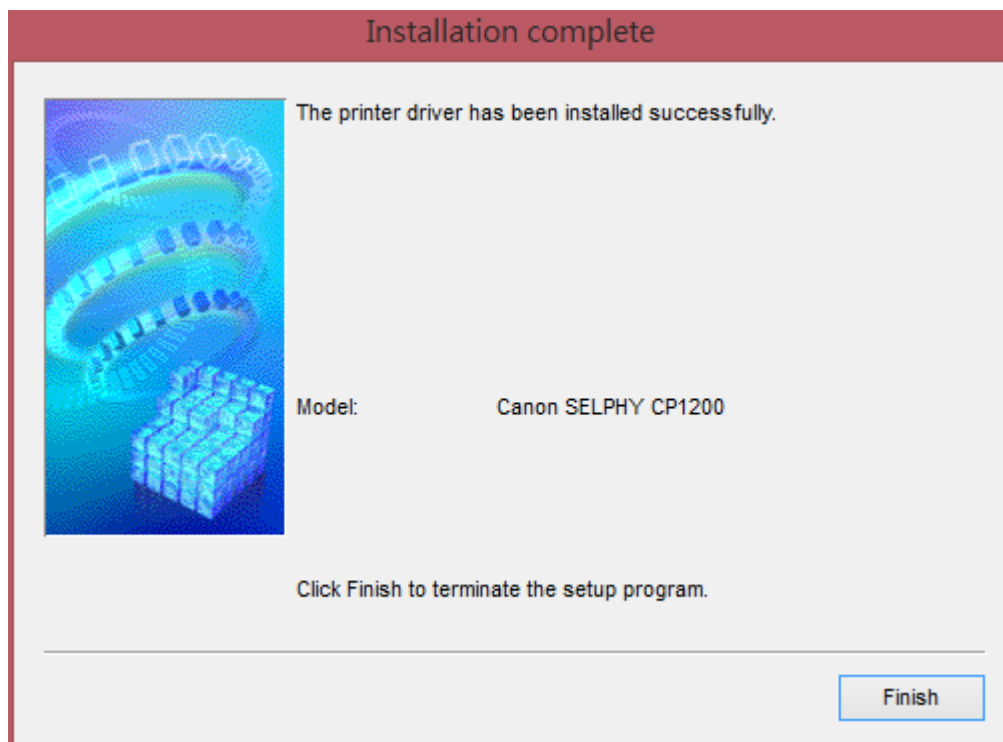5. 選「Asia」，按「Next>」 (Choose "Asia", and then click "Next>")

6. 按「Yes」(Click "Yes")

7. 選「Use with a wireless network」，按「Next>」(Choose "Use with a wireless network", and then click "Next>")

8. 點選「Canon SELPHY CP1200」，按「Next>」(Choose "Canon SELPHY CP1200", and then click "Next>")
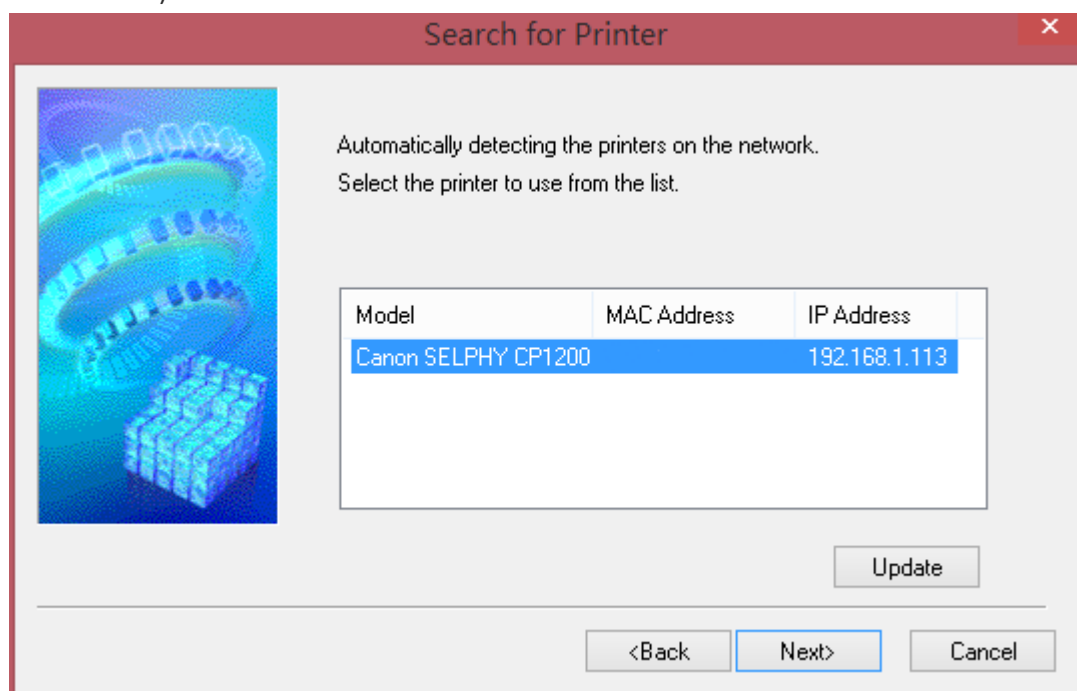
9.　按「Finish」 (Click"Finish")

-完-
-End-