

在 Windows 以無線方式安裝及連接 PIXMA E4570 打印機

Installing PIXMA E4570 on Windows via WiFi connection

****注意: 安裝驅動程式前請勿接駁 USB 線，以免系統發生錯誤****

**** Please don't plug the USB cable until the driver asked to do so****


以下步驟及畫面僅供參考，實際操作畫面可能因裝置型號、系統或軟件版本而有所不同。

The following steps and screens are for reference only, and the actual operation screens may vary depending on the device model, system, or software version.

無線設定 Wireless Setup


1. 按設定按鈕(A)

Press the **Setup** button (A).

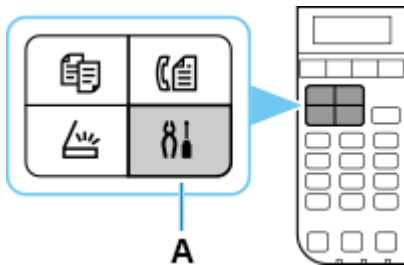


2. 使用 ◀或▶ 按鈕(B)選擇 Wi-Fi 設定並按 OK 按鈕。

Use the ◀ or ▶ button (B) to select **Wi-Fi setup** and press the **OK** button

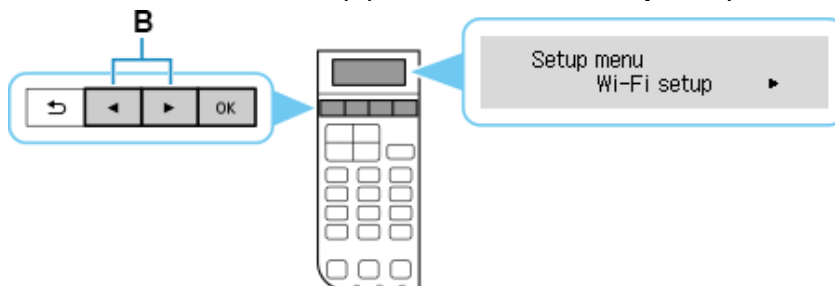


3. 選擇手動連接並按 OK 按鈕。

Select **Manual connect** and press the **OK** button



4. 選擇無線路由器並按 OK 按鈕。

Select your wireless router and press the **OK** button



如果顯示其他螢幕或未找到無線路由器，請參見「[疑難排解](#)」。

If a different screen appears or no wireless router is found, see "[Troubleshooting](#)."

5. 按 **OK** 按鈕。

Press the **OK** button.




6. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[文字輸入](#)」

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Text Entry](#)"




7. 輸入後，按 **OK** 按鈕。

After entry, press the **OK** button.

8. 顯示下方的螢幕時，請按 **OK** 按鈕。

When the screen on the below appears, press the **OK** button




如果顯示其他螢幕，請參見「[疑難排解](#)」。

If a different screen appears, see "[Troubleshooting](#)."

9. 按影印(**COPY**)按鈕(A)。

Press the **COPY** button (A).

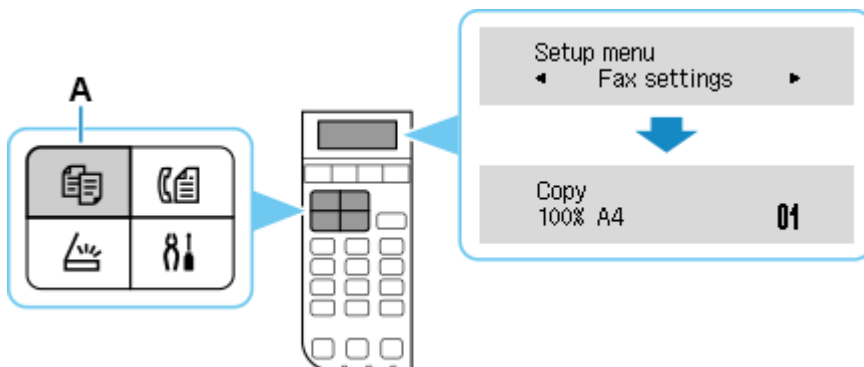

網路連接設定完成。

The network connection setup is now complete.

下載及安裝步驟

Download and Installation procedure

10. 到以下佳能網站並下載印表機的驅動程式

Go to below Canon webpage and download the printer driver

<https://hk.canon/en/support/pixma%20e4570/model>

11. 選擇並下載以下檔案

Choose and download below file


Master Setup (Windows)

12. 按網頁內的〔下載〕，下載完成後開啟該檔案安裝

Click [Download] in the webpage, and then execute the file after download was completed


13. 選擇語言，然後按〔OK〕

Choose the language, then click [OK]

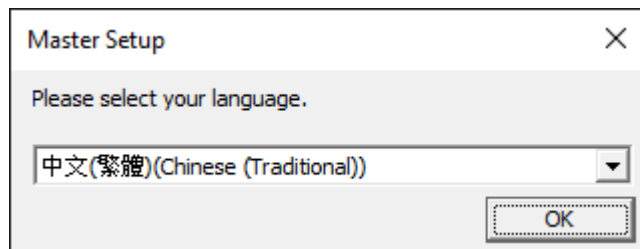

14. 選擇亞洲，然後按〔確定〕

Choose Asia, then click [OK]

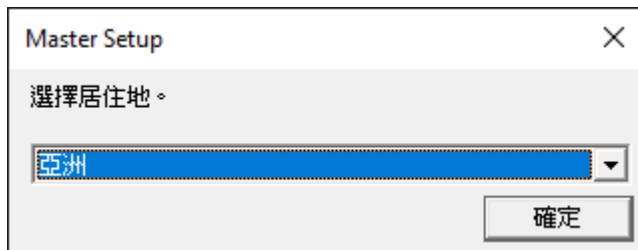

15. 按〔開始設定〕

Click [Start Setup]



16. 請等候

Please wait



17. 按〔是〕

Click [Yes]




18. 閱後按〔同意〕或〔不同意〕

Click [Agree] or [Do not agree] after reading



19. 請等候

Please wait

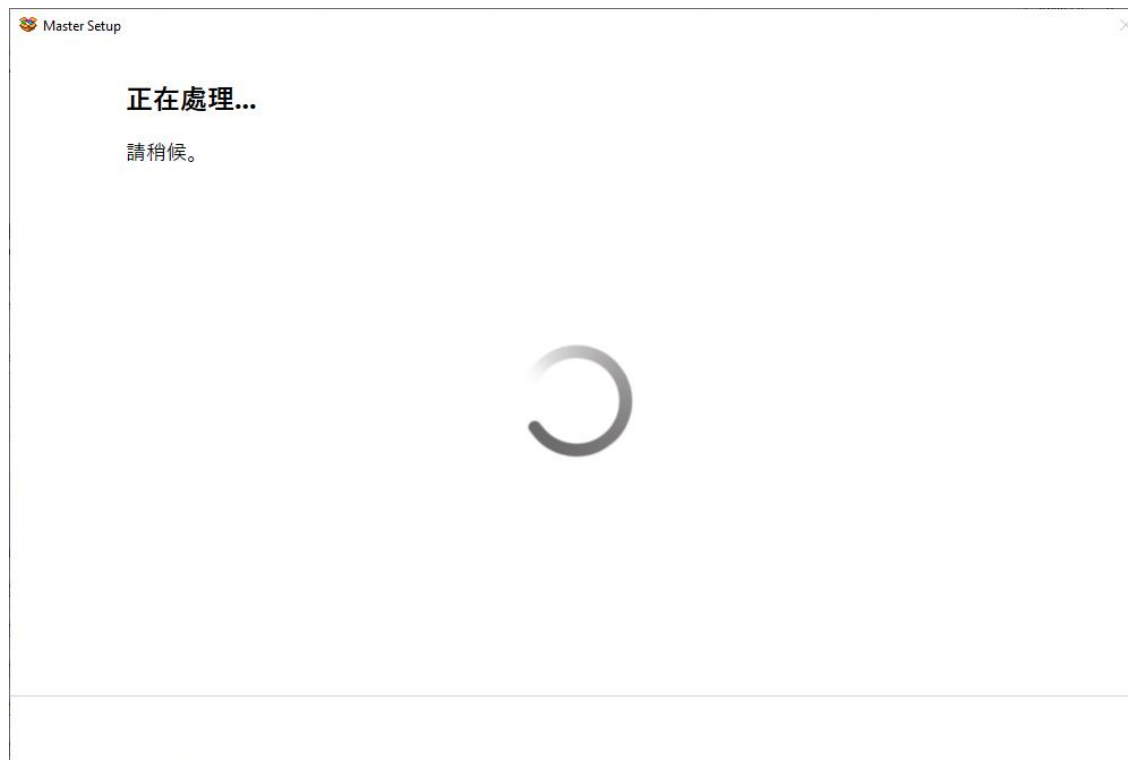

20. 確認印表機電源已開啟，再按〔下一步〕

Confirm power on the printer, then click [Next]



21. 請等候

Please wait



22. 選擇〔Wi-Fi 連接〕，再按〔下一步〕
Choose [Wi-Fi Connection], then click [Next]



23. 選擇印表機，再按〔下一步〕
Choose the printer, then click [Next]




24. 成功偵查印表機後請等候安裝

Please wait for install after detect the printer




25. 請等候安裝

Please wait for install

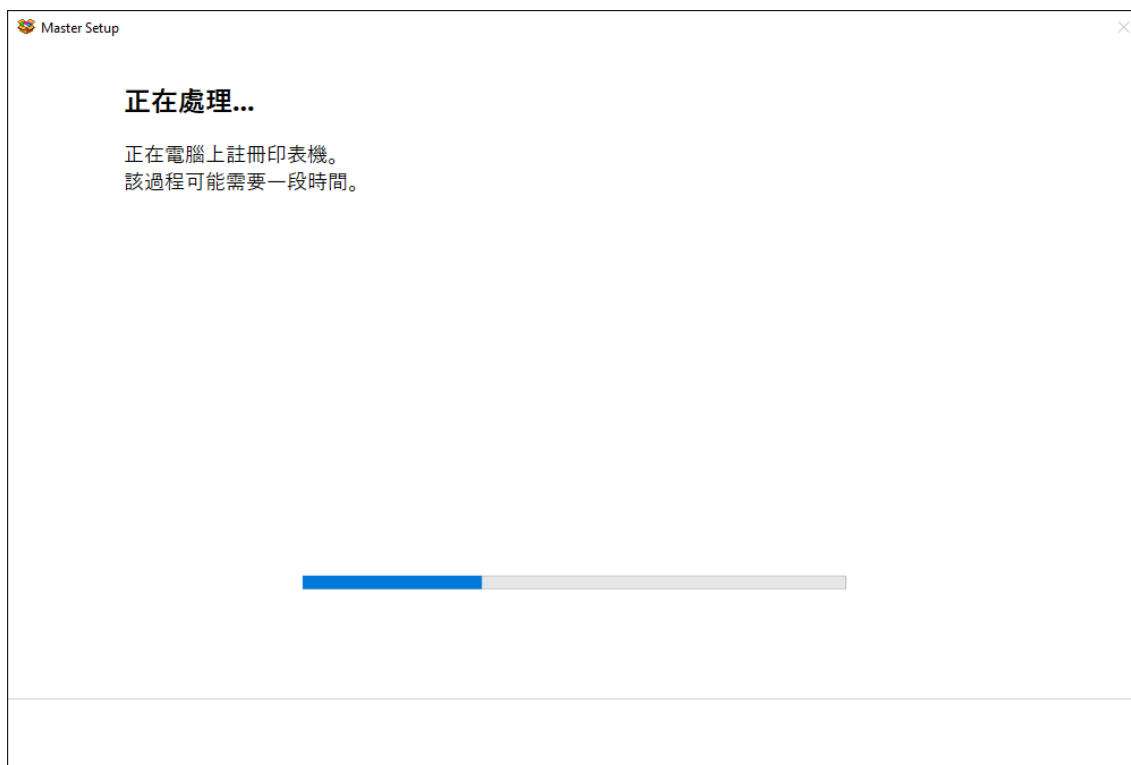

26. 按〔下一步〕

Click [Next]

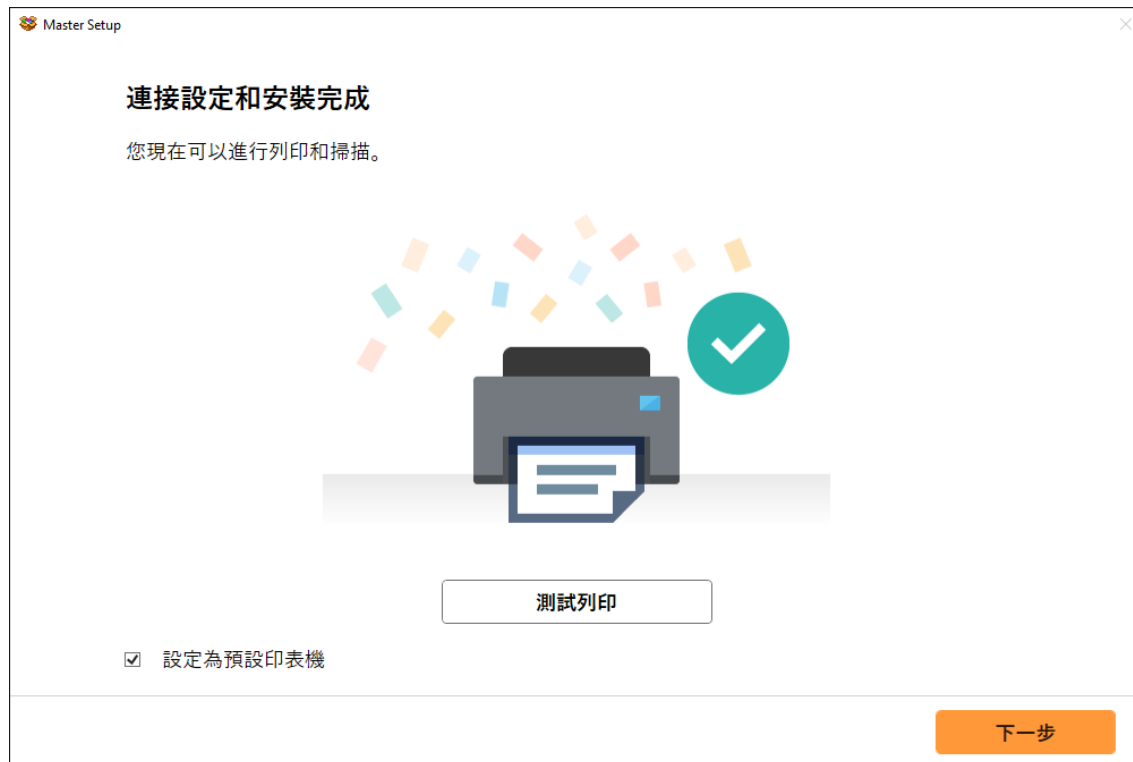

27. 安裝完成

Driver installation was completed



-完-

-End-