


在 Windows 以無線方式安裝及連接 PIXMA E4570 打印機 (以 Windows 10 作示範)
Installing PIXMA E4570 on Windows via WiFi connection (Use Windows 10 as example)

無線設定 Wireless Setup


1. 按設定按鈕(A)

Press the **Setup** button (A).

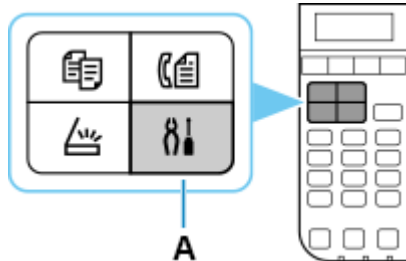


2. 使用 ◀或▶ 按鈕(B)選擇 Wi-Fi 設定並按 OK 按鈕。

Use the ◀ or ▶ button (B) to select **Wi-Fi setup** and press the **OK** button

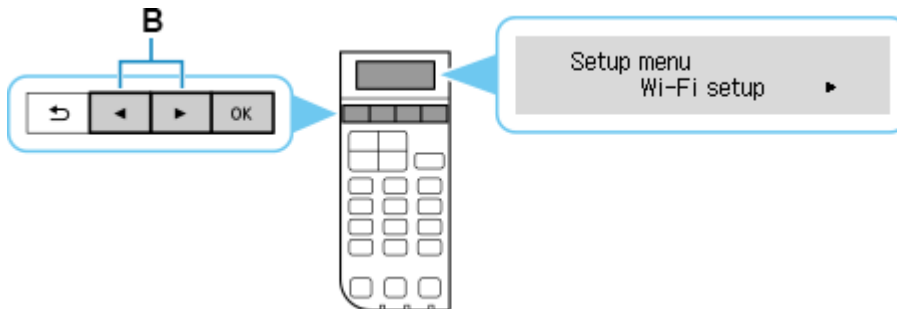


3. 選擇**手動連接**並按 **OK** 按鈕。

Select **Manual connect** and press the **OK** button



4. 選擇無線路由器並按 **OK** 按鈕。

Select your wireless router and press the **OK** button



如果顯示其他螢幕或未找到無線路由器，請參見「[疑難排解](#)」。

If a different screen appears or no wireless router is found, see "[Troubleshooting](#)."

5. 按 **OK** 按鈕。

Press the **OK** button.




6. 輸入密碼。文字輸入區分大小寫。

關於如何輸入字元和如何變更字元類型，請參見「[文字輸入](#)」

Enter the password. Text entry is case-sensitive.

For how to enter characters and how to change the character type, see "[Text Entry](#)"




7. 輸入後，按 **OK** 按鈕。

After entry, press the **OK** button.

8. 顯示下方的螢幕時，請按 **OK** 按鈕。

When the screen on the below appears, press the **OK** button




如果顯示其他螢幕，請參見「[疑難排解](#)」。

If a different screen appears, see "[Troubleshooting](#)."

9. 按影印(**COPY**)按鈕(A)。

Press the **COPY** button (A).

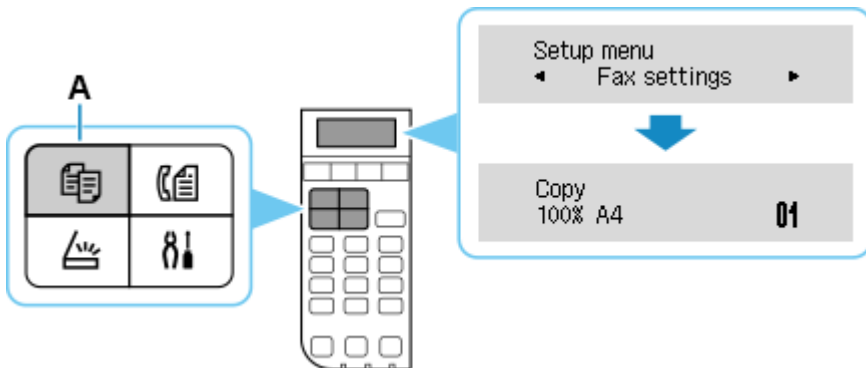

網路連接設定完成。

The network connection setup is now complete.

下載及安裝步驟


Driver download and Installation procedure

10. 到以下佳能網站並下載印表機的驅動程式
Go to below Canon webpage and download the printer driver
<https://hk.canon/en/support/pixma%20e4570/model>
11. 選擇並下載以下檔案
Choose and download below file
TR4600/TR4700/E4500 series MP Driver Ver.x.xx (Windows)
12. 按上面網頁內的〔下載〕，下載完成後開啟該檔案安裝
Click [Download] in the webpage above, and then execute the file after download was completed
13. 按〔下一步〕
Click [Next]




14. 選擇〔亞洲〕，按〔下一步〕

Select [Asia]; click [Next]

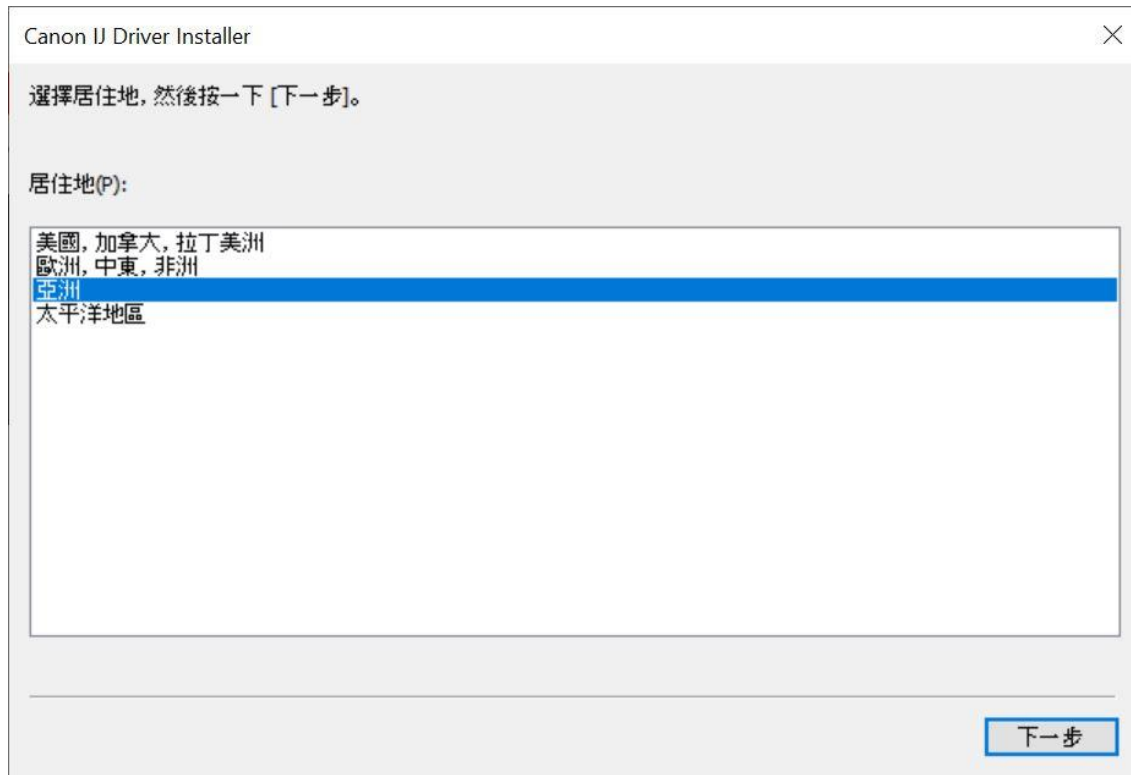


15. 按〔是〕

Click [Yes]

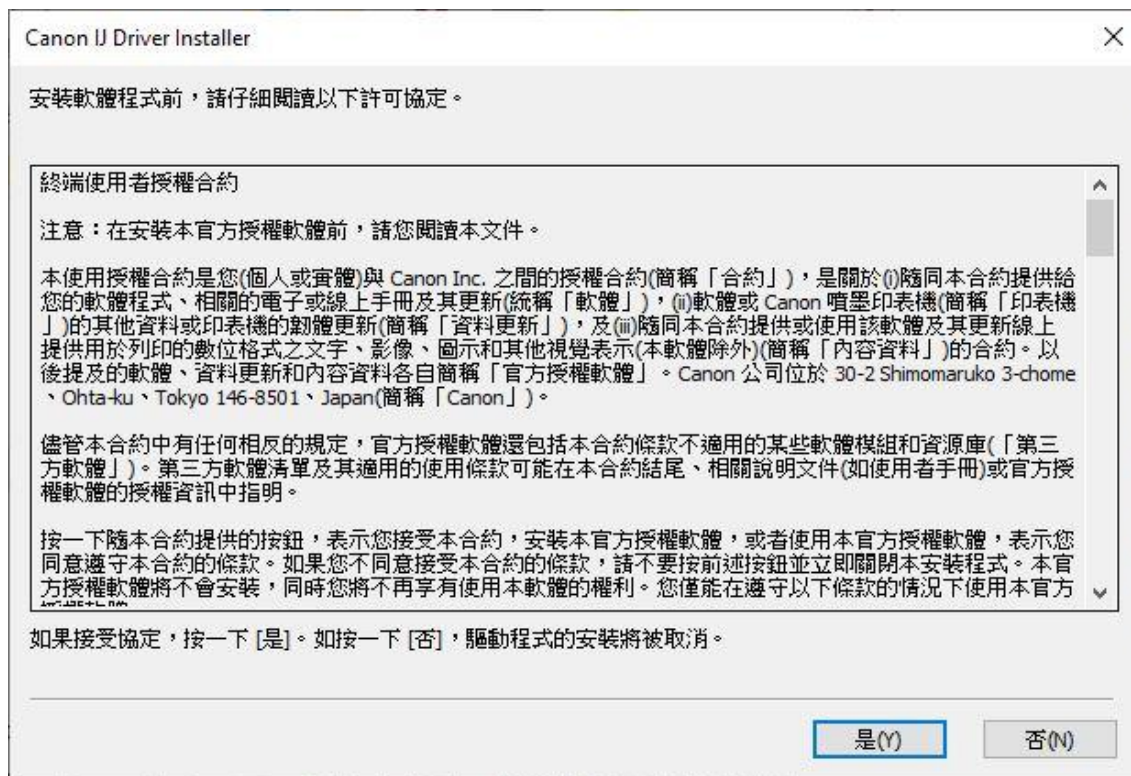


16. 選擇連接方法為 Wi-Fi 的打印機，按〔 下一步〕

Select the printer with connection method as Wi-Fi, click [Next]

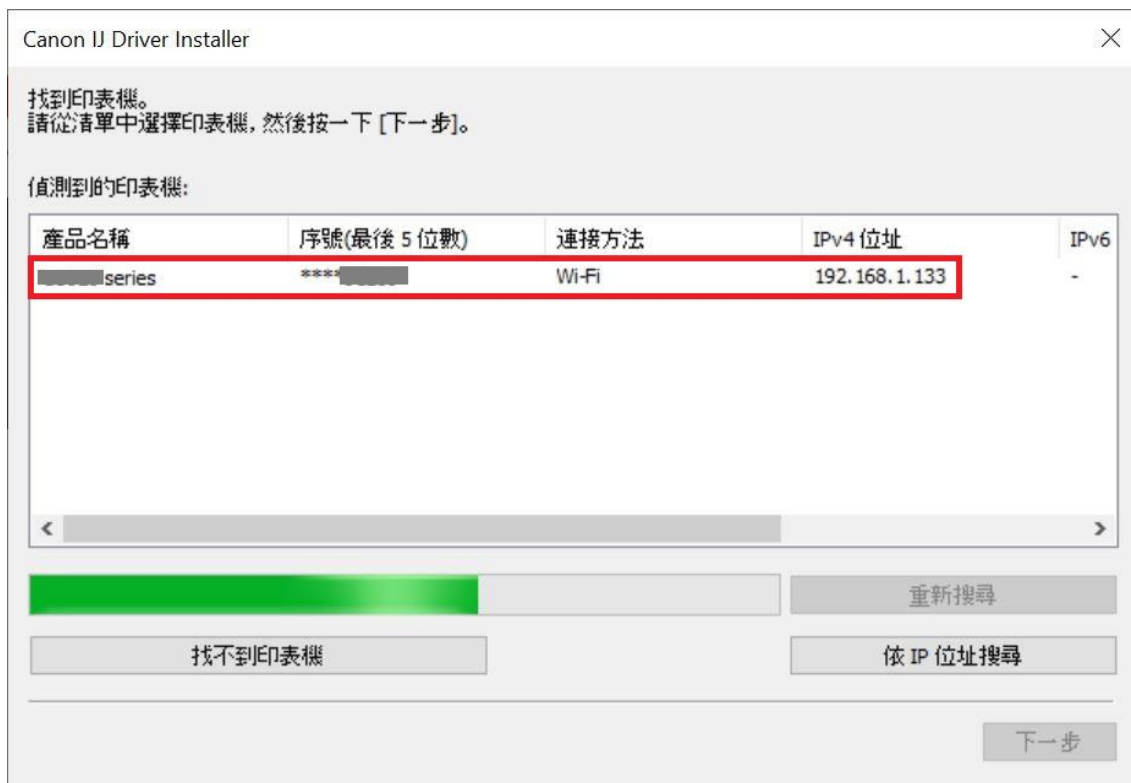


17. 正在安裝印表機驅動程式，請稍候

Installing the driver, please wait

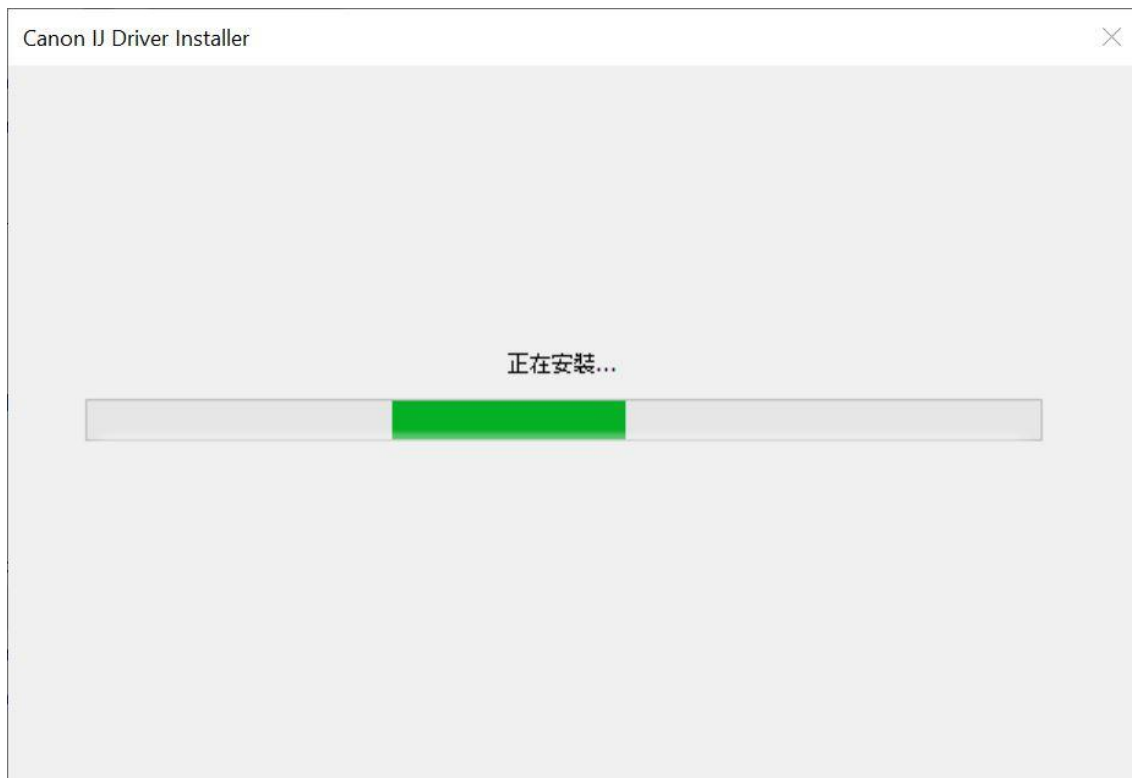

18. 安裝完成，按〔結束〕

Driver installation was completed; click [Finish]

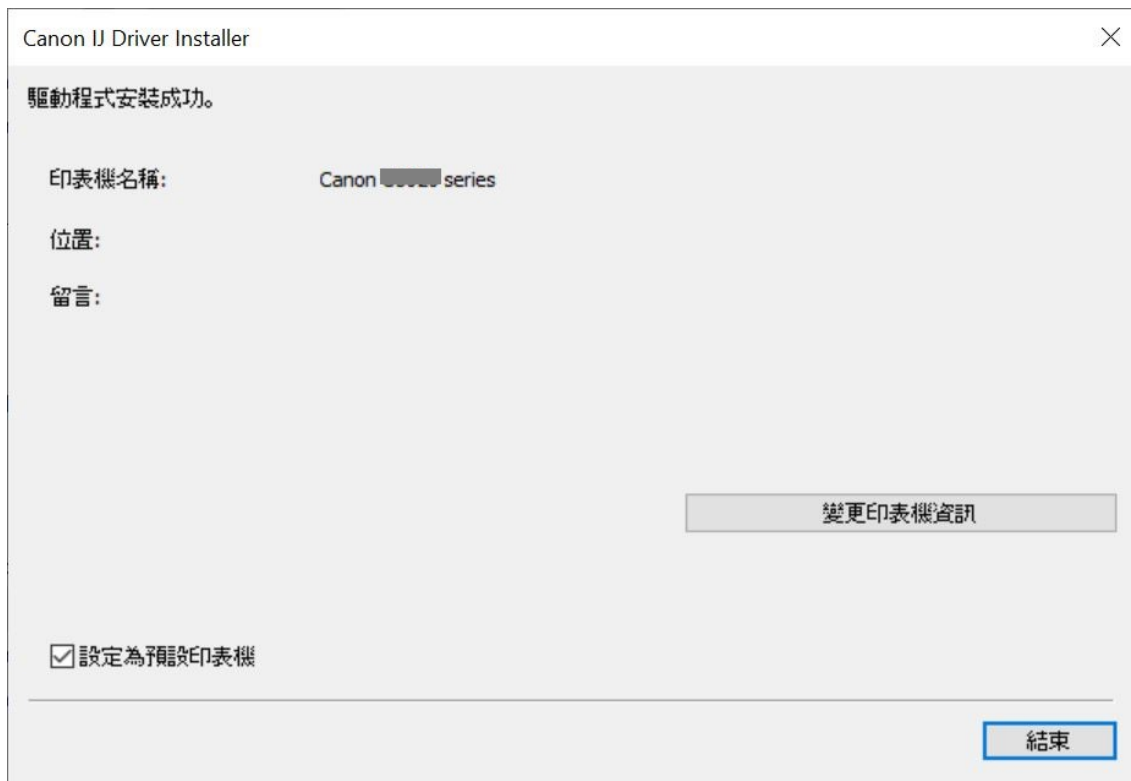

-完-

-End-